

[Manuals.plus](#) /

> [HP](#) /

> HP ProOne 600 G1 All-in-One Desktop User Manual

HP ProOne 600 G1

HP ProOne 600 G1 All-in-One Desktop User Manual

Model: ProOne 600 G1

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your HP ProOne 600 G1 All-in-One Desktop Computer. Please read this manual thoroughly before using your device to ensure proper functionality and longevity.

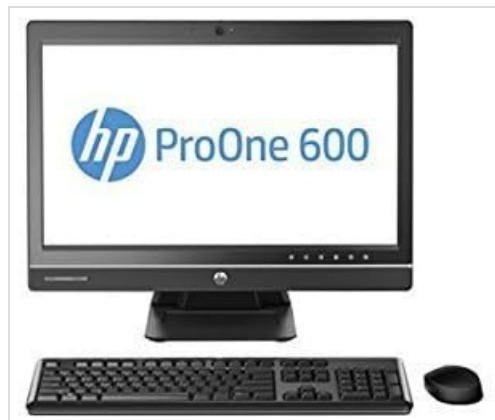


Image: The HP ProOne 600 G1 All-in-One Desktop, featuring a 21.5-inch display, accompanied by a standard black keyboard and mouse. The screen displays the "HP ProOne 600" logo.

PACKAGE CONTENTS

Verify that all items are present in the package:

- HP ProOne 600 G1 All-in-One Desktop
- Power Adapter and Cable
- Wired Keyboard
- Wired Mouse
- Documentation (this manual)

SETUP

1. Unpacking and Placement

Carefully remove the computer and all accessories from the packaging. Place the All-in-One desktop on a stable, flat surface with adequate ventilation around the unit. Avoid placing it near heat sources or in direct sunlight.

2. Connecting Peripherals

1. **Keyboard and Mouse:** Connect the USB cables of the keyboard and mouse to any available USB ports on the back of the desktop.
2. **Power:** Connect the power cable to the power port on the back of the desktop, then plug the other end into a grounded electrical outlet.
3. **Network (Optional):** For a wired internet connection, connect an Ethernet cable from your router or modem to the Ethernet port on the back of the desktop.

3. Initial Power On

Press the power button, typically located on the lower right side of the display bezel. The computer will boot up and guide you through the initial Windows 10 Professional setup process. Follow the on-screen instructions to configure your operating system, user accounts, and network settings.

OPERATING INSTRUCTIONS

Using Windows 10 Professional

Your HP ProOne 600 G1 comes pre-installed with Windows 10 Professional, offering a robust and secure computing experience. Key features include:

- **Start Menu:** Access applications, settings, and power options.
- **Taskbar:** Pin frequently used applications and view open programs.
- **File Explorer:** Manage your documents, photos, and other files.
- **Microsoft Edge:** Browse the internet securely.
- **Windows Security:** Built-in antivirus and firewall protection.

Optical Drive (DVD)

The integrated DVD drive allows you to read and write CDs and DVDs. Insert a disc gently into the slot. The operating system will typically prompt you with options for playing media or opening files.

USB 3.0 Ports

Utilize the USB 3.0 ports for high-speed data transfer with compatible devices such as external hard drives, USB flash drives, and other peripherals. These ports are backward compatible with USB 2.0 devices.

MAINTENANCE

Cleaning the Device

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Chassis:** Wipe the exterior surfaces with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used.
- **Ventilation:** Regularly check and clean the ventilation grilles to prevent dust buildup, which can impede airflow and cause overheating. Use compressed air to gently clear dust from vents.

Software Updates

Ensure your Windows 10 Professional operating system and drivers are kept up-to-date. Windows Update automatically downloads and installs critical updates. You can manually check for updates via *Settings > Update & Security > Windows Update*.

Data Backup

Regularly back up your important data to an external drive or cloud storage service to prevent data loss in case of hardware failure or other unforeseen issues.

TROUBLESHOOTING

This section addresses common issues you might encounter with your HP ProOne 600 G1 All-in-One Desktop.

| Problem | Possible Cause | Solution |
|-----------------------------------|---|---|
| Computer does not power on. | Power cable loose; power outlet issue. | Check power cable connections at both the computer and the wall outlet. Try a different outlet. |
| No display on screen. | Computer is off; display settings issue. | Ensure the computer is powered on. If on, try restarting. Check brightness settings. |
| Keyboard or mouse not responding. | Loose USB connection; driver issue. | Reconnect the USB cables to different ports. Restart the computer. |
| Slow performance. | Too many programs running; low disk space; malware. | Close unnecessary applications. Free up disk space. Run a full system scan with antivirus software. |

If issues persist, consult the HP support website or contact customer service.

SPECIFICATIONS

Detailed technical specifications for the HP ProOne 600 G1 All-in-One Desktop:

| Feature | Detail |
|--------------------|--|
| Model | HP ProOne 600 G1 |
| Display | 21.5-inch Full HD (1920 x 1080) |
| Processor | Intel Core i5-4590S (3.1 GHz base, up to 3.8 GHz Max Turbo, 4 cores, 4 threads, 6MB cache) |
| Memory (RAM) | 8GB DDR3 SDRAM |
| Storage | 256GB SSD (Solid State Drive) |
| Graphics | Intel HD Graphics 4600 (Integrated) |
| Optical Drive | DVD-ROM / DVD Writer |
| Operating System | Windows 10 Professional |
| USB Ports | USB 3.0 (quantity not specified, typically multiple) |
| Dimensions (LxWxH) | 20.5 x 7.7 x 16.8 inches |

| Feature | Detail |
|-------------|-------------|
| Item Weight | 22.2 pounds |

WARRANTY AND SUPPORT

This renewed product typically comes with a limited warranty provided by the seller or refurbisher. Please refer to your purchase documentation for specific warranty terms and duration.

Return Policy

A 90-day refund/replacement policy is generally offered for this product. For details on initiating a return or replacement, please contact your point of purchase or refer to their return policy.

Technical Support

For technical assistance, driver downloads, or further information, please visit the official HP support website or contact the seller from whom you purchased this renewed product.

- **HP Support Website:** www.hp.com/support
- **Seller Contact:** Refer to your purchase invoice or order details for seller contact information.