

Cubiker 1

Cubiker 59.1" L-Shaped Gaming Desk Instruction Manual

Model: 1

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference. Ensure all components are present and undamaged before beginning assembly. Do not use the product if any parts are missing or broken. Always place the desk on a flat, stable surface. Do not overload the desk. Avoid climbing or standing on the desk. Keep small parts away from children.

PACKAGE CONTENTS

Verify that all the following items are included in your package:

- L-shaped desk components
- Monitor stand
- Storage bag
- Iron hook
- Assembly hardware (screws, bolts, Allen wrench)

If any parts are missing or damaged, please contact Cubiker customer support for assistance.

ASSEMBLY INSTRUCTIONS (SETUP)

Assembly typically takes approximately 45-60 minutes for one person. An Allen wrench is included; no additional tools are required. The L-shape configuration is reversible, allowing you to install the longer side on either the left or right.

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Organize hardware by type.
2. **Initial Frame Assembly:** Begin assembling the metal frame according to the included diagram. *Important: Finger-tighten all screws initially. Do not fully tighten until all frame pieces are in place.* This allows for minor adjustments and easier alignment.
3. **Attach Desktop Panels:** Once the frame is loosely assembled, place the desktop panels onto the frame. Align the screw holes and secure them with the provided screws.

4. **Final Tightening:** After all desktop panels are secured, go back and fully tighten all screws on the entire desk frame and desktop panels.
5. **Install Monitor Stand:** The monitor stand can be installed on either the left or right side of the desk. Secure it using the designated hardware.
6. **Attach Storage Bag and Iron Hook:** The storage bag and iron hook can be attached to the side of the desk as desired.
7. **Adjust Feet Pads:** Adjust the leveling feet at the bottom of the desk to ensure stability on uneven floors.

For a visual guide, please refer to the official installation video:

Your browser does not support the video tag.

Official Cubiker L-Shaped Desk Installation Guide. This video provides step-by-step instructions for assembling your desk.

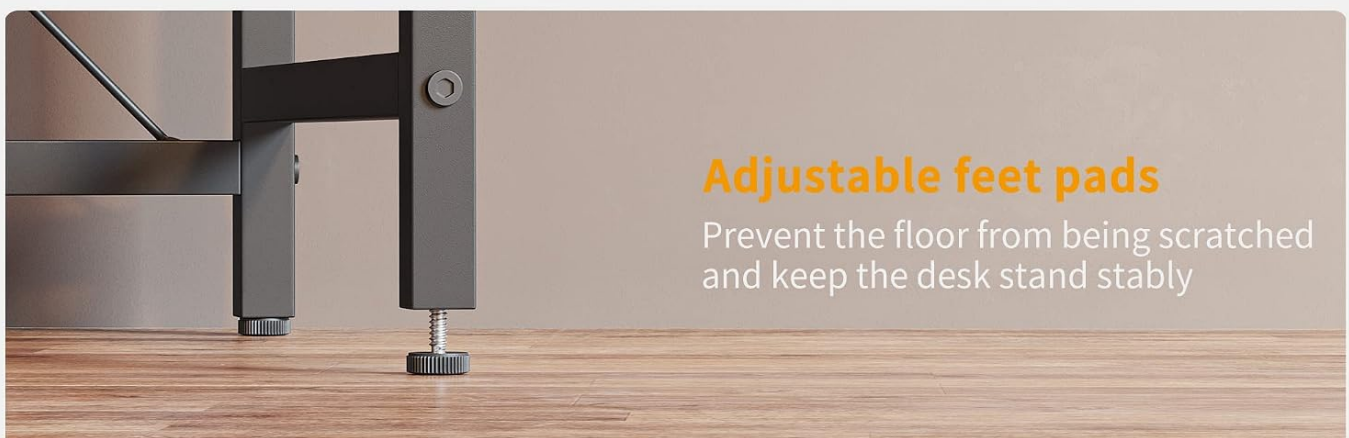


Image showing the X-shaped iron bar for strength, the sturdy steel frame, and adjustable feet pads for stability.

OPERATING YOUR DESK

The Cubiker L-Shaped Gaming Desk is designed for versatility and comfort in your home office or gaming setup.

Monitor Stand

The removable monitor stand provides an optimal viewing height to improve posture and offers additional storage space underneath. It can be positioned on either the left or right side of the desk to suit your preference.

Monitor Stand

Provide optimal viewing height to improve posture
and additional storage space



The monitor stand elevates your screen for better ergonomics and provides space for items like books or small devices underneath.

Storage Bag and Iron Hook

Utilize the fabric storage bag to keep books, notes, and small electronic devices organized and within reach. The iron hook is ideal for hanging headphones or a bag, keeping your desktop clear and tidy.

Desk storage bag

hold and sort various office supplies



books



notes



electronic devices

The desk storage bag helps organize various office supplies and personal items.



The iron hook provides a convenient place to hang headphones or other accessories.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your Cubiker desk, follow these care instructions:

- **Cleaning:** Wipe the desktop surface with a dry cloth or a slightly damp cloth. Avoid using harsh chemical cleaners, abrasive materials, or excessive moisture, as these can damage the finish.
- **Protection:** The desktop is designed to be scratch-resistant and waterproof. However, it is advisable to use coasters for drinks and mouse pads to further protect the surface from potential damage.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.

High-Quality Desktop

Solid desktop with elegant texture



Easy to Clean



Scratch-Resistant



Waterproof

The high-quality desktop is designed for easy cleaning, scratch resistance, and water resistance.


TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common solutions:

- **Desk is Wobbly:** Check that all screws are securely tightened. Adjust the leveling feet at the bottom of each leg to compensate for uneven floor surfaces. Ensure the X-shaped support bars are correctly installed and tightened.
- **Parts Do Not Align During Assembly:** Loosen all screws slightly, adjust the components to align the holes, and then re-tighten all screws evenly. Refer to the assembly video and diagrams to ensure correct orientation of parts.
- **Missing or Damaged Parts:** If you find any parts missing or damaged upon opening the package, please contact Cubiker customer support immediately for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Cubiker
Model Number	1
Product Dimensions	59.06 x 47.24 x 29.53 inches
Item Weight	1.1 pounds
Color	Black
Shape	Rectangular (L-shaped)
Material Type	Metal (Frame), MDF (Desktop)
Number of Items	1
Number of Shelves	1 (Monitor Stand)
Included Accessories	Monitor Stand, Storage Bag, Iron Hook

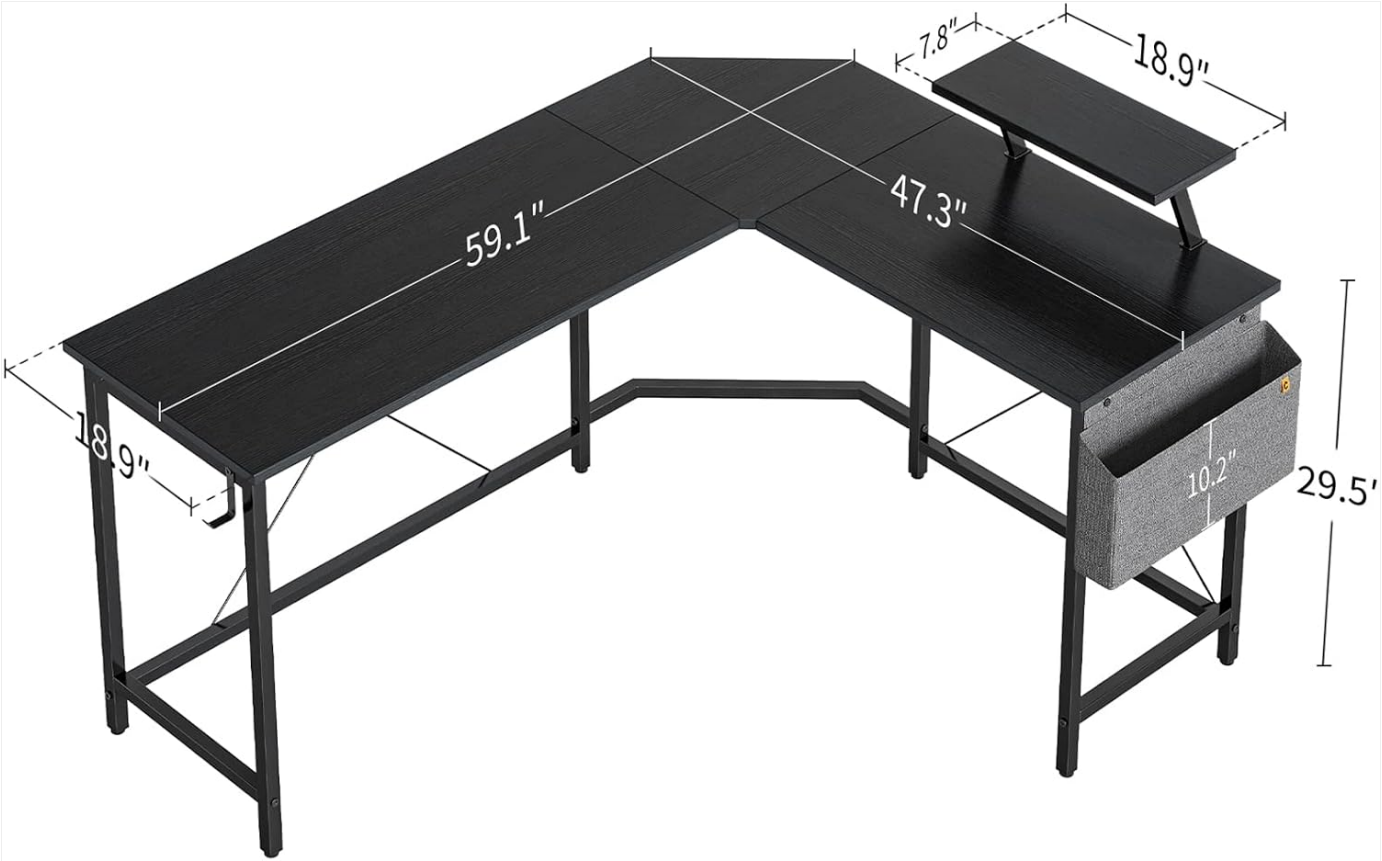

Detailed dimensions of the L-shaped desk, including the monitor stand and storage bag placement.

WARRANTY AND SUPPORT

For any warranty claims, technical support, or inquiries regarding your Cubiker L-Shaped Gaming Desk, please contact Cubiker customer service directly. Refer to the product packaging or the official Cubiker website for the most current contact information.

Cubiker is committed to providing high-quality products and service. Your satisfaction is our priority.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question