

[Manuals.plus](#) /

› [Satisfyer](#) /

› Satisfyer Wand-er Woman Vibrator (Model J2018-47-1) Instruction Manual

## Satisfyer J2018-47-1

# Satisfyer Wand-er Woman Vibrator Instruction Manual

Brand: Satisfyer | Model: J2018-47-1

## INTRODUCTION

The Satisfyer Wand-er Woman is a versatile vibrator designed for stimulating full-body massages. It features a rounded head, an impressive XXL size, and offers 50 vibration combinations. Constructed from skin-friendly silicone, it is also IPX7 waterproof, making it suitable for various environments. This manual provides essential information for the safe and effective use of your device.

## SAFETY INFORMATION

- **Material Safety:** The device is made from silky-smooth, medical-grade silicone, which is soft to the touch and gentle on the skin.
- **Waterproof Rating:** The Wand-er Woman has an IPX7 waterproof rating, meaning it is protected against immersion in water up to 1 meter deep for up to 30 minutes. This allows for use in the shower or bath and easy cleaning.
- **Health Disclaimer:** Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. If you experience any discomfort or irritation, discontinue use immediately and consult a healthcare professional.
- **Charging Safety:** Use only the provided magnetic USB charging cable. Do not use the device while charging.

## WHAT'S INCLUDED

- Satisfyer Wand-er Woman Vibrator
- Magnetic USB Charging Cable

## PRODUCT OVERVIEW

The Satisfyer Wand-er Woman features an ergonomic design with intuitive controls for ease of use.



## Comfortable to Hold and Easy to Use:



### PROGRAMS

Press to switch between 10 vibration patterns when the device is on



### POWER

Press and hold for 2 seconds to turn the device on/off



### INTENSITY UP

Press to INCREASE the intensity when the device is on



### INTENSITY DOWN

Press to DECREASE the intensity when the device is on

A hand holding the Satisfyer Wand-er Woman, highlighting the intuitive control panel with power, program, and intensity buttons.

- **Power Button:** Press and hold for 2 seconds to turn the device on/off.
- **Programs Button:** Press to switch between 10 vibration patterns when the device is on.
- **Intensity Up (+):** Press to increase the intensity when the device is on.
- **Intensity Down (-):** Press to decrease the intensity when the device is on.



The Satisfyer Wand-er Woman vibrator in black, showcasing its ergonomic design and smooth silicone finish.

## SETUP

---

### Charging the Device

Before first use, fully charge your Satisfyer Wand-er Woman. Connect the magnetic USB charging cable to the charging points on the device and plug the USB end into a compatible power source (e.g., computer USB port, USB wall adapter).



A magnetic USB charging cable for the Satisfyer Wand-er Woman vibrator.

A full charge typically takes a few hours. The indicator light on the device will show charging status (refer to specific product light indicators if available, otherwise assume standard charging behavior).

## **First Use Preparation**

Clean the device thoroughly before its first use and after each subsequent use. Refer to the Maintenance section for detailed cleaning instructions.

## **OPERATING INSTRUCTIONS**

---

### **Turning On/Off**

Press and hold the Power button for approximately 2 seconds to turn the device on. Repeat this action to turn the device off.

### **Adjusting Vibration Settings**

The Wand-er Woman offers 10 different vibration styles and 5 intensities, resulting in 50 unique vibration combinations.


# Satisfyer

VIBRATION PROGRAMS  
**50**



## Enjoy Super Strong Vibrations:

- Designed for sensual full-body massages
- Features a wide variety of programs

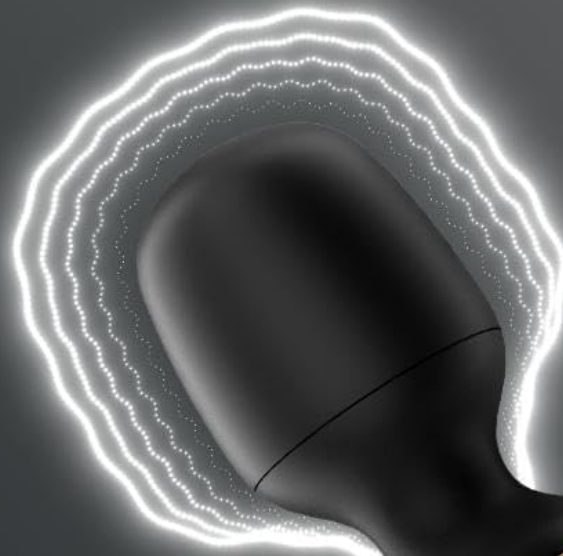

Close-up of the Satisfyer Wand-er Woman's head, illustrating its powerful vibration capabilities with a graphic of sound waves.

- While the device is on, press the **Programs button** to cycle through the 10 distinct vibration patterns.
- Use the **Intensity Up (+)** and **Intensity Down (-)** buttons to adjust the strength of the current vibration pattern across 5 intensity levels.

### Usage Recommendations

The rounded head and XXL size of the Wand-er Woman are designed for stimulating full-body massages. Experiment with different vibration patterns and intensities to find what suits your preferences. The flexible massage head adapts to body contours for targeted stimulation.


An official video demonstrating the features and use of the Satisfyer Wand-er Woman vibrator, including its flexible head, waterproof design, and various vibration settings.

### MAINTENANCE

---

## Cleaning

Clean your Satisfyer Wand-er Woman thoroughly before and after each use. Due to its IPX7 waterproof rating, the device can be rinsed under running water. Use a mild soap or a specialized toy cleaner. Ensure all residue is removed and dry the device completely before storage.

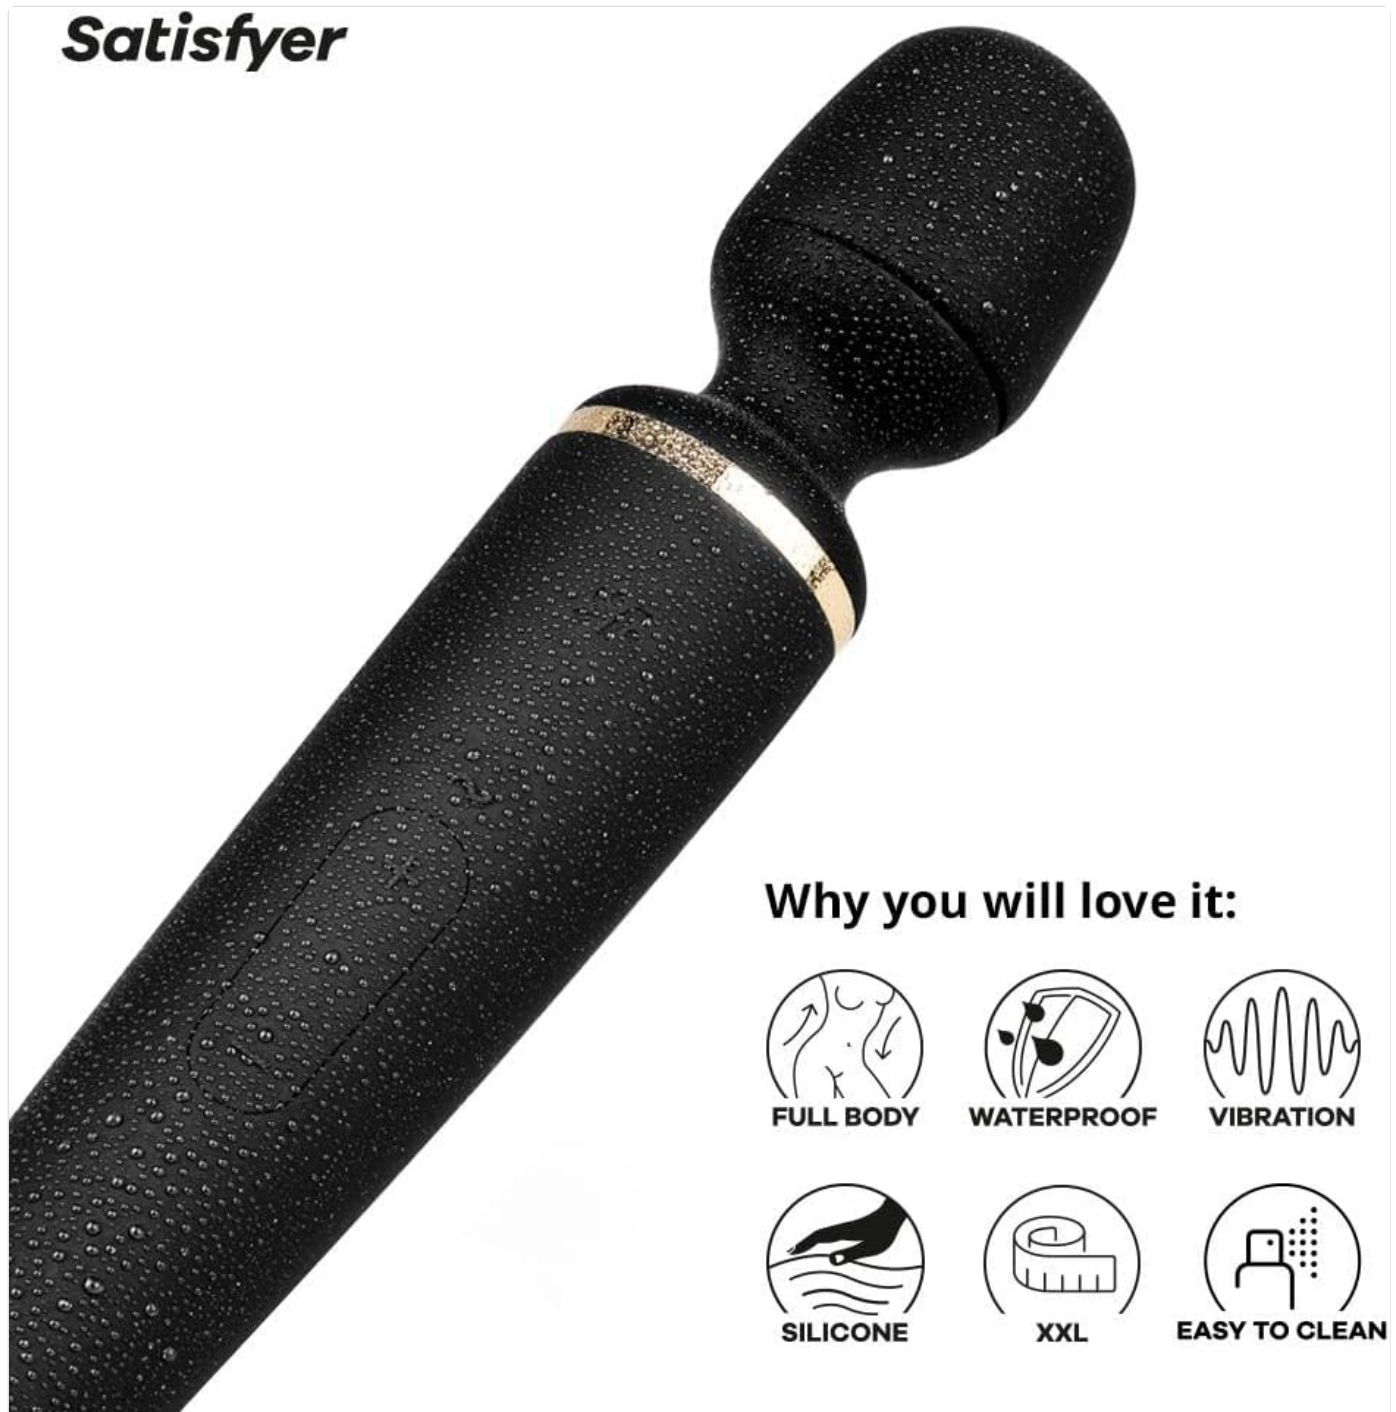

The Satisfyer Wand-er Woman vibrator with water droplets, demonstrating its waterproof design suitable for use in wet environments.

## Storage

Store the device in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

## TROUBLESHOOTING

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to the magnetic USB charging cable and allow it to charge for at least 2 hours.

- **Weak Vibrations:** The battery might be low. Recharge the device. If the issue persists after a full charge, contact customer support.
- **Charging Issues:** Ensure the magnetic charging cable is properly aligned with the charging points on the device. Try a different USB power source. If the device still does not charge, the cable or battery may be faulty.
- **Unusual Noise:** Some vibration devices may produce a slight hum. If the noise is excessively loud or unusual, ensure the device is clean and free from obstructions. If concerns persist, contact customer support.

## SPECIFICATIONS

---

<b>Product Dimensions</b>	13.39 x 2.24 x 3.07 inches; 1.5 Pounds
<b>Item Model Number</b>	J2018-47-1
<b>Batteries</b>	1 Lithium Ion battery required
<b>Material</b>	Silicone
<b>Color</b>	Black
<b>Waterproof Rating</b>	IPX7

## WARRANTY AND SUPPORT

---

### Warranty Information

The Satisfyer Wand-er Woman comes with a 15-year product protection. Please retain your proof of purchase for warranty claims.



Logo indicating Satisfyer's 15-year product protection.

### Customer Support

For any questions, concerns, or warranty claims, please contact Satisfyer customer support through their official website or the retailer where the product was purchased. Provide your model number (J2018-47-1) and proof of purchase for efficient assistance.