

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VINABTY](#) /

> [VINABTY BN59-01298G Voice Remote Control User Manual for Samsung QLED TVs](#)

## VINABTY BN59-01298G

# VINABTY BN59-01298G Voice Remote Control User Manual

For Samsung QLED TVs

## 1. INTRODUCTION

---

This manual provides detailed instructions for the VINABTY BN59-01298G Voice Remote Control. It is designed as a replacement remote for various Samsung QLED TV models. Please read this manual carefully to ensure proper setup and operation of your new remote control.

## 2. PRODUCT OVERVIEW

---

The VINABTY BN59-01298G is a voice-enabled replacement remote control compatible with a wide range of Samsung QLED TVs. It offers essential functions for navigating your television, including channel and volume control, smart hub access, and voice command capabilities.





Figure 1: Front view of the VINABTY BN59-01298G Voice Remote Control, showing power, microphone, 123, return, home, play/pause, volume, and channel buttons.

**Compatible TV Models include:**

- QN55Q8FN, QN55Q8, QN55Q8FNBFXZA, QN55Q8FNBFXZC
- QN65Q8FN, QN65Q8, QN65Q8FNBFXZA, QN65Q8FNBFXZC
- QN75Q8FN, QN75Q8, QN75Q8FNBFXZA, QN75Q8FNBFXZC
- QN82Q8FN, QN82Q8, QN82Q8FNBFXZA, QN82Q8FNBFXZC
- QN55Q7CNAFXZA, QN55Q7CNAFXZC, QN65Q7CNAFXZA, QN65Q7CNAFXZC
- QN55Q7FN, QN55Q7, QN55Q7FNAFXZA, QN55Q75FNFXZA, QN55Q7FNAFXZC
- QN65Q7FN, QN65Q7, QN65Q7FNAFXZA, QN65Q75FNFXZA, QN65Q7FNAFXZC
- QN75Q7FN, QN75Q7, QN75Q7FNAFXZA, QN75Q75FNFXZA, QN75Q7FNAFXZC

- QN49Q6FN, QN49Q6, QN49Q6FNAFXZA, QN49Q6FNAFXZC
- QN55Q6FN, QN55Q6, QN55Q6FNAFXZA, QN55Q65FNFXZA, QN55Q6FNAFXZC
- QN65Q6FN, QN65Q6, QN65Q6FNAFXZA, QN65Q65FNFXZA, QN65Q6FNAFXZC
- QN75Q6FN, QN75Q6, QN75Q6FNAFXZA, QN75Q65FNFXZA, QN75Q6FNAFXZC
- QN82Q6FN, QN82Q6, QN82Q6FNAFXZA, QN82Q6FNAFXZC

This remote also replaces models BN59-01298L, BN59-01298D, BN59-01300L, BN59-01298U, and BN59-01336A.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Figure 2: Battery compartment of the remote control, illustrating correct AA battery placement.

### 3.2 Pairing with Your TV

After installing the batteries, the remote control should automatically pair with your compatible Samsung QLED TV. If the remote does not respond, follow these steps to manually pair it:

1. Point the remote control at your Samsung TV.
2. Press and hold the **Return** button and the **Play/Pause** button simultaneously for at least 3 seconds.
3. A pairing message should appear on your TV screen, indicating successful connection.
4. If pairing fails, ensure the remote is within range and try again.

## 4. OPERATING INSTRUCTIONS

---

This remote control provides intuitive access to your TV's functions. Below are the primary buttons and their uses:

- **Power Button** (●): Turns the TV on or off.
- **Microphone Button** (⊘): Activates voice control for commands and searches.
- **123 Button**: Displays the virtual numeric keypad on the screen.
- **Directional Pad (Up, Down, Left, Right, Enter)**: Navigates menus and selects items.
- **Return Button** (↶): Returns to the previous screen or menu.
- **Home Button** (△): Accesses the Smart Hub or home screen.
- **Play/Pause Button** (▶ ||): Controls media playback.
- **Volume Button (VOL)**: Adjusts the TV volume. Press up for louder, down for quieter. Press the center to mute/unmute.

- **Channel Button (CH):** Changes TV channels. Press up for the next channel, down for the previous.

## 4.1 Using Voice Control

To use the voice control feature:

1. Press and hold the **Microphone Button**.
2. Speak your command clearly into the remote control.
3. Release the **Microphone Button** when you are finished speaking.



Figure 3: Remote control with the microphone button prominently displayed for voice command functionality.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or exposing it to water or other liquids.

## 6. TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Remote not paired.	Replace batteries with new AA batteries, ensuring correct polarity. Re-attempt pairing (Section 3.2).
Voice control not working	Remote not fully paired for voice function. Microphone obstructed.	Ensure remote is properly paired. Check for obstructions over the microphone. Speak clearly and hold the microphone button.
Buttons are stiff or unresponsive	Accumulated dirt or debris under buttons.	Clean the remote control (Section 5). If the issue persists, contact support.
Remote frequently disconnects	Low battery power. Interference.	Replace batteries. Ensure no strong interference sources (e.g., Wi-Fi routers, other wireless devices) are too close to the TV or remote.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	BN59-01298G
Brand	VINABTY
Compatible Devices	Samsung QLED Televisions
Special Feature	Voice Search
Battery Type	2 x AA Batteries (not included)
Color	Black
Product Dimensions	5 x 1.9 x 0.5 inches
Item Weight	0.176 ounces

## 8. WARRANTY AND SUPPORT

---

For any questions, technical assistance, or warranty inquiries regarding your VINABTY BN59-01298G Voice Remote Control, please contact the manufacturer or your retailer. Refer to your purchase documentation for specific warranty terms and contact information. The manufacturer aims to provide support within 24 hours for customer inquiries.