

[Manuals.plus](#) /

› [ForeverPRO](#) /

› ForeverPRO W10249845 Washer Switch-WI Instruction Manual

ForeverPRO W10249845

ForeverPRO W10249845 Washer Switch-WI Instruction Manual

1. PRODUCT OVERVIEW

The ForeverPRO W10249845 Washer Switch-WI is a high-quality replacement component designed for various washing machine models. This part is engineered to meet or exceed original equipment manufacturer (OEM) specifications, ensuring reliable performance and durability for your appliance repair needs.

This switch is a critical functional component within your washer, contributing to its proper operation. It is intended for direct replacement of part numbers 1549191, AH2355542, EA2355542, and PS2355542.



Image of the ForeverPRO W10249845 Washer Switch-WI, showing its general appearance and connectors.

2. COMPATIBILITY

The ForeverPRO W10249845 Washer Switch-WI is compatible with a wide range of washing machine brands and models. It is designed to fit most Whirlpool, Maytag, KitchenAid, Jenn-Air, Amana, Magic Chef, Admiral, Norge, and Roper washers.

Important: Always verify compatibility with your specific appliance model before installation. Refer to your appliance's service manual or the list below for common compatible models:

- MHWE500VP00, MHWE500VP01, MHWE500VW00, MHWE500VW01, MHWE500VW12
- MHWE550WJ00, MHWE550WJ01, MHWE550WR00, MHWE550WR01, MHWE550WW00, MHWE550WW01
- MHWE900VJ00, MHWE900VJ01, MHWE900VW00, MHWE900VW01
- MHWE950WJ02, MHWE950WR02, MHWE950WW00, MHWE950WW01, MHWE950WW02
- WFW9500TC02, WFW9500TC03, WFW9500TW02, WFW9500TW03
- WFW9550WL00, WFW9550WL01, WFW9550WL10, WFW9550WR00, WFW9550WR01, WFW9550WW00, WFW9550WW01, WFW9550WW10

- WFW9600TA02, WFW9600TW02, WFW9630YL00, WFW9630YW00, WFW9640XW00
- WFW9700VA00, WFW9700VA01, WFW9700VW00, WFW9700VW01
- WFW9750WL00, WFW9750WL01, WFW9750WL02, WFW9750WR00, WFW9750WR01, WFW9750WR02, WFW9750WW00, WFW9750WW01, WFW9750WW02

3. SETUP AND INSTALLATION

Safety First: Before attempting any repair or installation, ensure the washing machine is completely disconnected from its power source (unplugged from the wall outlet). Wear appropriate personal protective equipment, such as work gloves, to prevent injury.

This guide provides general steps. Always consult your specific washing machine's service manual for detailed, model-specific instructions and diagrams.

1. **Disconnect Power:** Unplug the washer from the electrical outlet. Turn off the water supply to the washer.
2. **Access the Switch:** Depending on your washer model, you may need to remove the top panel, front panel, or control console to gain access to the existing switch. Use appropriate tools (e.g., screwdriver, nut driver) as needed.
3. **Locate and Disconnect Old Switch:** Identify the old switch. Carefully disconnect any electrical wiring harnesses or connectors attached to it. Note the orientation and connection points for reassembly.
4. **Remove Old Switch:** Unfasten any screws, clips, or mounting hardware securing the old switch in place. Remove the old switch from the washer.
5. **Install New Switch:** Position the ForeverPRO W10249845 Switch-WI in the same location as the old one. Secure it with the original mounting hardware.
6. **Reconnect Wiring:** Carefully reattach the electrical wiring harnesses and connectors to the new switch, ensuring all connections are secure and correctly oriented.
7. **Reassemble Washer:** Reattach any panels or components that were removed to access the switch. Ensure all screws and fasteners are tightened.
8. **Test Operation:** Restore power to the washer by plugging it back into the electrical outlet and turning on the water supply. Run a short test cycle to confirm the new switch is functioning correctly.

4. OPERATING INSTRUCTIONS

The ForeverPRO W10249845 Washer Switch-WI is an internal component that operates automatically as part of your washing machine's normal cycle. It does not require direct user interaction.

This switch typically functions as a safety mechanism (e.g., a lid switch preventing operation when the lid is open) or a sensor (e.g., a water level switch). Its proper function is integral to the washer's ability to start, fill, agitate, spin, or drain correctly. Once installed, the switch will operate in conjunction with your washer's control system.

5. MAINTENANCE

The ForeverPRO W10249845 Washer Switch-WI is a sealed component and does not require routine maintenance or lubrication. Its design ensures long-term reliability under normal operating conditions.

To ensure the longevity of all your washer's components, including this switch, it is recommended to:

- Keep the area around your washing machine clean and free of debris.
- Periodically inspect visible wiring and connections for any signs of wear or damage.
- Address any unusual noises or operational issues with your washer promptly to prevent further damage to

components.

6. TROUBLESHOOTING

If your washing machine exhibits issues after replacing the switch, consider the following troubleshooting steps:

- **Washer Not Starting/Filling:** Double-check all electrical connections to the new switch to ensure they are secure and correctly attached. Verify that the washer lid/door is fully closed and latched if the switch is a lid/door interlock.
- **Incorrect Operation:** Ensure no wires are pinched or damaged during reassembly. Confirm that the switch is properly seated and not obstructed.
- **Power Issues:** Confirm the washer is plugged in and the circuit breaker has not tripped.

If problems persist after checking these points, it may indicate an issue with another component of the washer or require professional diagnosis. Always prioritize safety and disconnect power before inspecting internal components.

7. SPECIFICATIONS

Part Number	W10249845
Manufacturer	ForeverPRO
Item Model Number	W10249845
Included Components	Switch-WI
Batteries Required?	No
Date First Available	November 26, 2019

8. WARRANTY AND SUPPORT

This ForeverPRO replacement part is manufactured to high-quality standards. For specific warranty information regarding your purchase, please refer to the documentation provided with the product or contact ForeverPRO directly.

For further assistance or technical support, please visit the official ForeverPRO support channels or contact your retailer.

You can find more information about ForeverPRO products and support at their Amazon store:[ForeverPRO Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0821LZR19>

More documents and user manuals: <https://manuals.plus/>