

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SINGER](#) /

› [SINGER Intelligent 36-inch Steam Press \(1800W\) Instruction Manual](#)

## SINGER ESP36T1

# SINGER Intelligent 36-inch Steam Press (1800W) Instruction Manual

Model: ESP36T1

## 1. INTRODUCTION

---

The SINGER Intelligent 36-inch Steam Press is designed for efficient and professional fabric care at home. This appliance provides a large pressing surface and powerful steam output to quickly remove wrinkles from various garments and fabrics. It features digital controls with multiple fabric settings and an automatic shutoff for safety.

## 2. SAFETY INFORMATION

---

Please read all instructions carefully before using the SINGER Intelligent Steam Press. Keep this manual for future reference.

- Always unplug the appliance when not in use and before cleaning.
- Do not operate the steam press with a damaged cord or plug.
- Keep the appliance away from water and other liquids.
- Ensure the steam press is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Keep out of reach of children.
- The appliance features an automatic shutoff for safety if left unattended.

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your SINGER Intelligent Steam Press.

# Features



Figure 1: Key Features of the Steam Press. This image highlights the main components: the locking knob, steam burst buttons, ironing board, and pressing plate.

- **Large 36-inch Non-Stick Pressing Surface:** Provides ample space for various garments.
- **Digital Controls:** Easy-to-use interface for selecting fabric settings and monitoring temperature.
- **Steam Burst Buttons:** Located on the handle for on-demand steam.
- **Removable Water Tank (300ml capacity):** For easy refilling.
- **Fabric Settings:** Pre-set modes for Nylon, Silk, Wool, Cotton, and Linen.
- **Auto Shutoff:** Enhances safety by turning off the unit after a period of inactivity.



SINGER

## Intelligent Steam Press

36 inch Steam Press

Figure 2: SINGER 36-inch Steam Press Feature Summary. This graphic summarizes the key benefits and specifications of the steam press.

## 4. SETUP

Follow these steps for initial setup before first use.

1. **Unpack the Appliance:** Carefully remove all packaging materials and ensure all components are present.
2. **Position the Steam Press:** Place the steam press on a sturdy, flat, and heat-resistant surface. Ensure there is adequate space around the unit for safe operation.
3. **Fill the Water Tank:**
  - Locate the removable water reservoir.
  - Pull out the water tank from the base of the unit.
  - Fill the tank with distilled water up to the MAX line. Using distilled water helps prevent mineral buildup.
  - Carefully reinsert the water tank until it clicks into place.

Your browser does not support the video tag.

Video 1: Manual SpeedyPress HD. This video demonstrates the process of filling the water tank and preparing the steam press for use.

4. **Power On:** Plug the power cord into a suitable electrical outlet. Turn on the power switch, usually located on the side or back of the unit.

## 5. OPERATING INSTRUCTIONS

Achieve professional pressing results by following these operating guidelines.

1. **Select Fabric Setting:**

- Use the digital controls to select the appropriate fabric setting (Nylon, Silk, Wool, Cotton, Linen) for your garment. The press will heat up to the optimal temperature for that fabric.
- The unit has a quick heat-up time of approximately 1.8 minutes for the Nylon setting.

## 2. Position the Garment:

- Carefully lay your garment flat on the pressing surface, ensuring it is smooth and free of creases.
- For sleeves or intricate areas, use the pressing cushion provided.



Figure 3: Non-Stick Pressing Surface in Use. This image illustrates the large 36-inch non-stick surface effectively steaming a garment.

## 3. Press the Garment:

- Lower the pressing plate onto the garment using the handle. Apply gentle pressure.
- Press the steam burst buttons on the handle to release steam as needed. Hold for a few seconds (typically 5-10 seconds depending on fabric and wrinkles).
- Lift the pressing plate and reposition the garment as necessary.

Your browser does not support the video tag.

Video 2: How to Operate the Product. This video provides a visual guide on operating the steam press for various garments.

## 4. Finishing:

Once pressing is complete, carefully remove the garment and allow it to cool before folding or hanging.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your steam press.

- **Cleaning the Pressing Surface:**

- Ensure the unit is unplugged and completely cool.
- Wipe the non-stick pressing surface with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

- **Draining the Water Tank:**

- After each use, or when storing the unit, empty any remaining water from the reservoir.
- This prevents stagnant water and potential mineral buildup.

- **Descaling (if applicable):** Refer to the full product manual for specific descaling instructions if mineral buildup occurs, especially if using non-distilled water.

- **Storage:**

- Allow the unit to cool completely before storing.
- The compact design allows for easy storage. Consider using a compatible stand (Model ST-09H) for convenient use and storage.

Portable Design For  
Easy Use Anywhere



Figure 4: Portable Design. The steam press is designed for easy transport and storage.

## 7. TROUBLESHOOTING

If you encounter issues, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Unit not plugged in; power switch off; circuit breaker tripped.	Ensure power cord is securely plugged in. Turn power switch ON. Check household circuit breaker.
No steam	Water tank empty; unit not heated to steam temperature; steam buttons not pressed.	Fill water tank. Allow unit to fully heat up (indicator light will show). Press steam burst buttons.
Water leakage	Water tank not properly seated; overfilled tank.	Ensure water tank is securely in place. Do not overfill past the MAX line.

Problem	Possible Cause	Solution
Wrinkles not removed	Incorrect fabric setting; insufficient steam; garment too dry.	Select appropriate fabric setting. Use more steam. Lightly mist garment with water before pressing.

## 8. SPECIFICATIONS

---

- **Model:** ESP36T1
- **Power:** 1800W
- **Pressing Surface Size:** 36 inches
- **Water Tank Capacity:** 300 ml
- **Heat-Up Time:** Approximately 1.8 minutes (Nylon setting)
- **Steam Rate:** 80 g/min
- **Safety Features:** Auto Shutoff
- **Compatible Stand:** ST-09H (sold separately)
- **Included Components:** Pressing Cushion, Refill Container, Spray Bottle

## 9. WARRANTY AND SUPPORT

---

The SINGER Intelligent Steam Press comes with a 1-year limited warranty. For warranty claims, technical support, or to purchase replacement parts, please visit the official SINGER website or contact customer service.

For additional resources and product information, visit: [singer.com/support](https://singer.com/support)