

ENWShop 746175928250

ENWShop Replacement Remote Control User Manual

Model: 746175928250

PRODUCT OVERVIEW

This manual provides instructions for the ENWShop Basic Replacement Remote Control, designed for specific Element TV models. This remote is a direct replacement for lost or damaged original remotes and does not feature voice recognition capabilities.

It is compatible with the following Element TV models:

- EL4KAMZ4317
- EL4KAMZ5017
- EL4KAMZ5517
- EL4KAMZ6517





Figure 1: ENWShop Basic Replacement Remote Control. This image displays the full layout of the remote, highlighting its compact design and button arrangement.

SETUP AND INITIAL USE

The ENWShop Basic Replacement Remote Control is designed for immediate use with compatible Element TV models without requiring complex pairing or programming.

Inserting Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important Setup Note

Warning: An original TV remote is required for the initial setup process of your Element TV. This replacement remote cannot bypass the initial setup or reset modes of the television. If your TV is currently in a setup or reset mode, you will need the original remote or an alternative method to complete that process before this replacement remote can be used.

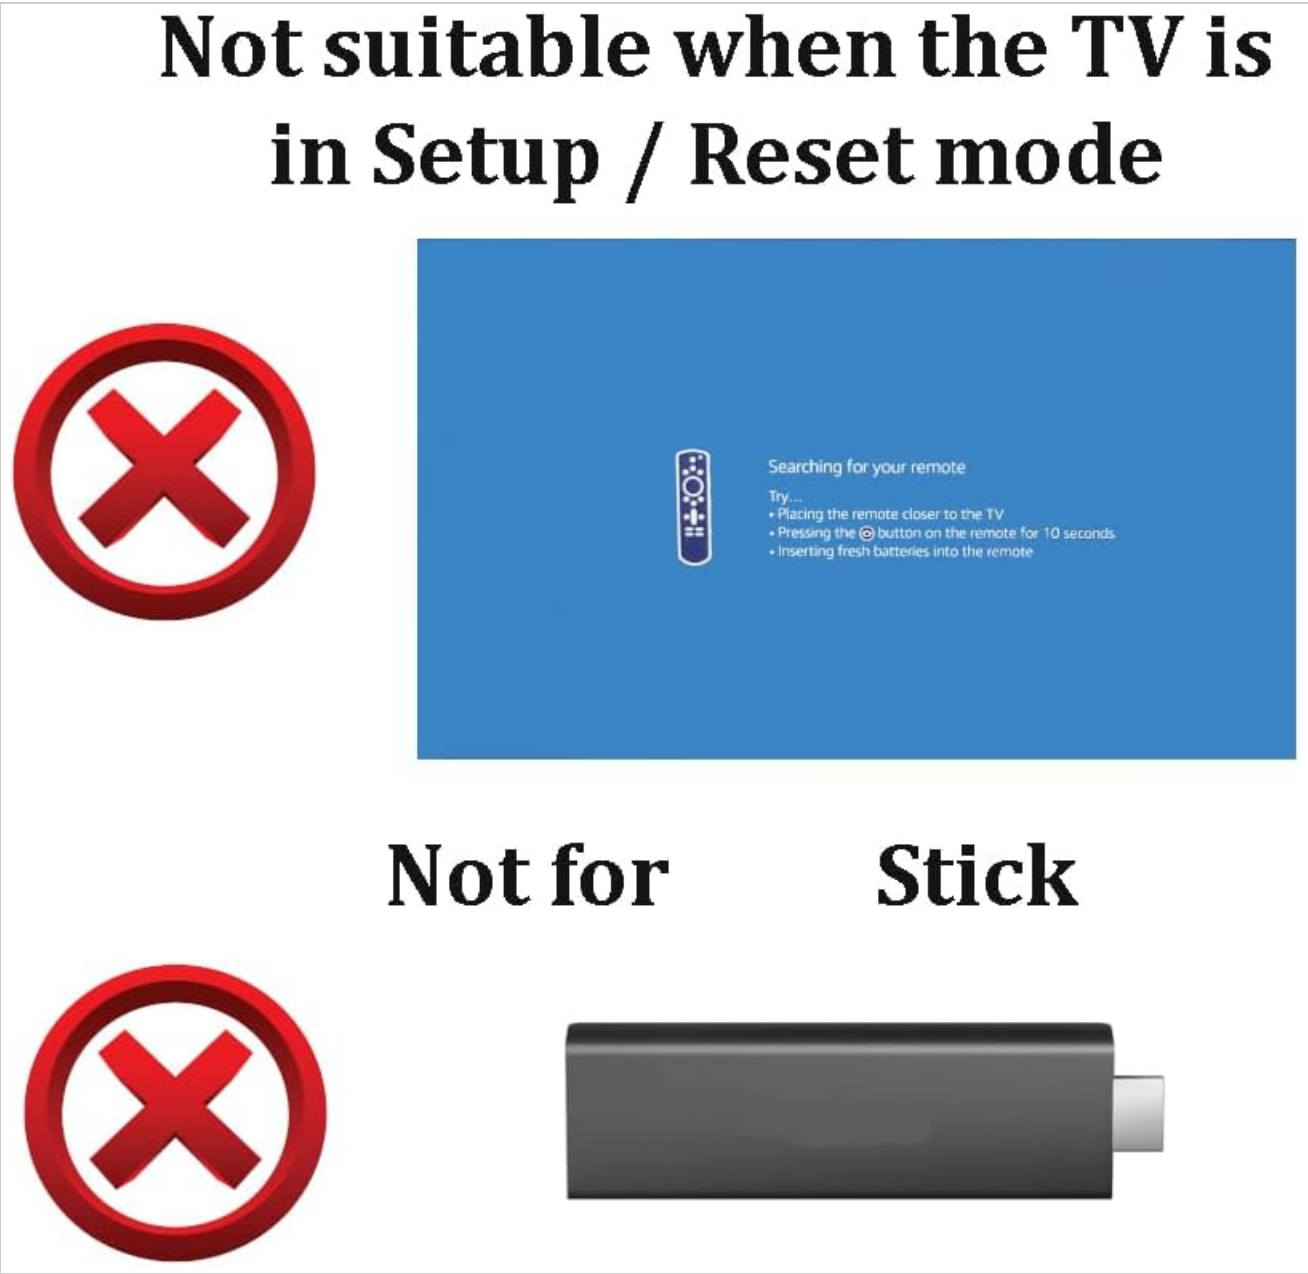


Figure 2: Compatibility and Setup Limitations. This image illustrates that the remote is not suitable for TVs in setup/reset mode and is not designed for use with streaming sticks.

OPERATING THE REMOTE CONTROL

This remote provides essential functions for navigating your Element TV.

Remote Button Functions

Button	Function
Power	Turns the TV on or off.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates menus and selects options.
Back	Returns to the previous screen or menu.
Home	Returns to the TV's home screen.
Volume Up/Down	Adjusts the TV volume.
Mute	Mutes or unmutes the TV audio.
Play/Pause	Plays or pauses media content.
Rewind/Fast Forward	Controls media playback speed.
Netflix	Direct access to the Netflix application.
Hulu	Direct access to the Hulu application.
HBO	Direct access to the HBO application.
YouTube	Direct access to the YouTube application.
Asterisk (*)	Often used for options or context menus within applications.

MAINTENANCE

Battery Replacement

When the remote's performance degrades or it stops responding, it is time to replace the batteries. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Remote is not responding.

- Ensure batteries are inserted correctly with the proper polarity.
- Replace old batteries with new ones.
- Check for any obstructions between the remote and the TV's infrared receiver.
- Confirm the TV is not in an initial setup or reset mode, as this remote cannot function in those states.

Certain buttons do not work as expected.

- Verify that the remote is compatible with your specific Element TV model (EL4KAMZ4317, EL4KAMZ5017, EL4KAMZ5517, EL4KAMZ6517).
- This remote does not support voice recognition.

- Some buttons may have slightly different functions or no function depending on the specific TV model or application.

Remote feels less responsive than the original.

The tactile feel and responsiveness may vary slightly compared to the original equipment manufacturer (OEM) remote. This is normal for a replacement unit.

SPECIFICATIONS

Brand: ENWShop

Model Number: 746175928250

Compatible Devices: Element EL4KAMZ4317, EL4KAMZ5017, EL4KAMZ5517, EL4KAMZ6517 Televisions

Max Number of Supported Devices: 1

Color: Black

Special Feature: Ergonomic design

Product Dimensions: 7 x 2 x 0.5 inches

Item Weight: 1.58 ounces

WARRANTY AND SUPPORT

For any questions or support regarding your ENWShop Basic Replacement Remote Control, please refer to the seller's contact information on the platform where the purchase was made.

This product is designed as a functional replacement and is subject to the return and refund policies of the retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question