

Karcher RA 2060D-S

Karcher RA 2060D-S Under-Cabinet Radio User Manual

Model: RA 2060D-S

1. INTRODUCTION

Thank you for choosing the Karcher RA 2060D-S Under-Cabinet Radio. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The Karcher RA 2060D-S is a versatile under-cabinet radio featuring DAB+/FM reception, a CD player, Bluetooth connectivity, USB MP3 playback, a dual alarm clock, and a countdown timer. Its compact design and multiple functions make it an ideal audio solution for your kitchen or other spaces.

2. PRODUCT OVERVIEW

2.1 Key Features

- Under-cabinet kitchen radio with CD player, DAB+/FM, RDS, and 30 storable stations.
- Output power: 2 x 3 W (RMS).
- Bluetooth streaming from smartphones, tablets, or other compatible devices.
- MP3 playback via USB.
- Alarm clock with dual alarm, weekend function, Snooze, and Sleep Timer.
- Countdown timer for cooking and baking assistance.
- Large 6.1 cm color display with Slideshow support, 3-level dimmable.
- Foldable feet for use as a desktop radio.

2.2 Included Components

- Karcher RA 2060D-S Under-Cabinet Radio
- Remote Control
- Mounting Hardware
- User Manual

2.3 Product Views



Figure 1: Front view of the Karcher RA 2060D-S Under-Cabinet Radio, showing the display, CD slot, control buttons, and USB port.



Figure 2: The Karcher RA 2060D-S radio with its foldable feet extended, illustrating its use as a desktop unit.



Figure 3: The remote control for the Karcher RA 2060D-S, featuring various function buttons for convenient operation.

3. SETUP

3.1 Power Connection

Connect the power cable to the radio and then to a standard electrical outlet. The unit will power on in standby mode.

3.2 Under-Cabinet Installation

To install the radio under a cabinet:

1. Select a suitable location under a cabinet, ensuring sufficient space and ventilation.
2. Use the provided mounting hardware (screws and template, if included) to secure the radio firmly to the underside of the cabinet.
3. Ensure all cables are neatly routed and do not interfere with cabinet doors or other appliances.



Figure 4: The Karcher RA 2060D-S radio mounted under a kitchen cabinet, demonstrating its space-saving design.

3.3 Desktop Use

For desktop use, simply extend the foldable feet located on the bottom of the unit to provide stable support.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **Power** button on the unit or remote control to switch between standby and operational mode.

4.2 DAB+ Radio Operation

1. Press the **MODE** button to select DAB+ mode.
2. The radio will automatically scan for available DAB+ stations upon first use.
3. Use the **Tune +/-** buttons or the rotary knob to navigate through the station list.
4. Press **OK** to select a station.
5. To store a station, press and hold a numbered preset button (1-5) until the display confirms storage.



Figure 5: The DAB+ digital radio logo, indicating support for high-quality digital audio broadcasting.

4.3 FM Radio Operation

1. Press the **MODE** button to select FM mode.
2. Press and hold the **Tune +/-** buttons for automatic station search.
3. Press briefly for manual tuning.
4. To store an FM station, press and hold a numbered preset button (1-5).

4.4 CD Player

1. Insert a CD into the CD slot with the label side facing up. The radio will automatically switch to CD mode and begin playback.
2. Use the **Play/Pause**, **Skip Forward/Backward** buttons to control playback.
3. Press the **Stop** button to end playback.

4.5 Bluetooth Streaming

1. Press the **MODE** button to select Bluetooth mode. The display will show "Pairing".
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "Karcher RA 2060D-S" from the list. Once paired, the radio will confirm the connection.
4. Start playing music on your connected device. Audio will stream through the radio.

4.6 USB MP3 Playback

1. Insert a USB flash drive containing MP3 files into the USB port.
2. Press the **MODE** button to select USB mode.
3. The radio will automatically detect and begin playing MP3 files.
4. Use the **Play/Pause**, **Skip Forward/Backward** buttons to control playback.

4.7 Alarm Clock and Timer Functions

- **Setting Dual Alarms:** Refer to the detailed instructions in the full user manual for setting two independent alarm times, alarm sources (radio/buzzer), and volume levels.
- **Snooze Function:** When the alarm sounds, press the **Snooze** button to temporarily silence it.
- **Sleep Timer:** Set a sleep timer to automatically turn off the radio after a specified duration.
- **Countdown Timer:** Activate the countdown timer for cooking or other timed activities. Set the desired duration using the controls.

5. MAINTENANCE

5.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface. Ensure the unit is unplugged before cleaning.

5.2 CD Player Care

Handle CDs by their edges to avoid fingerprints and scratches. Clean CDs with a soft, lint-free cloth, wiping from the center outwards. Do not use damaged or warped CDs.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty	Check power cable connection; Try a different outlet
No sound	Volume too low; Mute activated; Incorrect source selected	Increase volume; Deactivate mute; Select correct input source
Poor radio reception	Antenna not extended/positioned correctly; Weak signal	Extend and adjust the antenna; Try repositioning the unit
Bluetooth pairing fails	Device not in pairing mode; Device too far; Already paired with another device	Ensure radio is in Bluetooth pairing mode; Move devices closer; Disconnect from other devices
CD not playing	CD inserted incorrectly; CD scratched/dirty; CD format not supported	Reinsert CD correctly; Clean or replace CD; Ensure it's an audio CD or MP3 CD

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Karcher
Model Number	RA 2060D-S
Color	Silver
Connectivity Technology	USB, Bluetooth
Special Features	Integrated clock, Dual Alarm, Countdown Timer, Dimmable Display
Total USB Ports	1
Compatible Devices	USB flash drive, MP3 player, Laptop (for Bluetooth streaming)
Product Dimensions	29.6L x 19.4W x 6.5H cm
Tuning Technology	DAB+
Power Source	Corded Electric
Supported Radio Bands	DAB+, FM
Manufacturer	Karcher
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Karcher website. Keep your proof of purchase for any warranty claims.


If you encounter any issues not covered in this manual, please contact Karcher customer service for

assistance.

© 2023 Kärcher. All rights reserved.

Related Documents - RA 2060D-S

 <p>Kärcher RA 2060D Under-Cabinet Kitchen Radio with DAB+/FM, CD, MP3, USB, Bluetooth, and Alarm</p>	<p>Kärcher RA 2060D Under-Cabinet Kitchen Radio User Manual</p> <p>Comprehensive user manual for the Kärcher RA 2060D under-cabinet kitchen radio, detailing its features, operation, safety instructions, and specifications. Includes DAB+/FM radio, CD/MP3 playback, USB, Bluetooth connectivity, and alarm functions.</p>
 <p>Kärcher UR 1309D CD/MP3 Clock Radio</p>	<p>Kärcher UR 1309D CD/MP3 Clock Radio User Manual</p> <p>This user manual provides comprehensive instructions for operating the Kärcher UR 1309D CD/MP3 Clock Radio, including setup, features, safety guidelines, and technical specifications.</p>
 <p>Kärcher UR 1308 CD Clock Radio</p>	<p>Kärcher UR 1308 CD Clock Radio User Manual</p> <p>This document provides comprehensive instructions for the Kärcher UR 1308 CD Clock Radio, covering setup, operation, safety precautions, and technical specifications. Learn how to set the clock, alarms, use the radio and CD player functions, and understand the energy-saving and electromagnetic interference guidelines.</p>
 <p>Kärcher DAB Go DAB+/FM Radio, Bluetooth</p>	<p>Kärcher DAB Go DAB+/FM Radio, Bluetooth User Manual</p> <p>User manual for the Kärcher DAB Go, a DAB+/FM radio with Bluetooth connectivity. This guide provides instructions on setup, operation, safety, and technical specifications.</p>
 <p>KÄRCHER SE 4 / SE 4 Plus / SE 4 Plus Special Sprühextraktionsreiniger</p>	<p>Kärcher SE 4 / SE 4 Plus / SE 4 Plus Special Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die Kärcher SE 4, SE 4 Plus und SE 4 Plus Special Sprühextraktionsreiniger. Enthält Sicherheitshinweise, Bedienung, Wartung und Fehlerbehebung für eine effektive Reinigung von Teppichen, Polstern und mehr.</p>

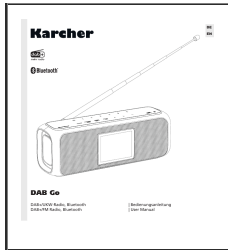

[Karcher DAB Go DAB+/FM Radio with Bluetooth - User Manual](#)

Comprehensive user manual for the Karcher DAB Go, a portable DAB+/FM radio with Bluetooth connectivity. Includes setup, operation, safety information, controls, battery details, technical specifications, and disposal information.