

[Manuals.plus](#) /

> [Kircuit](#) /

> Kircuit AC/DC Adapter for Craig CHT955 Bluetooth CD Jukebox Speaker System Instruction Manual

Kircuit B0823NQDZD

Kircuit AC/DC Adapter for Craig CHT955 Bluetooth CD Jukebox Speaker System Instruction Manual

Model: B0823NQDZD

INTRODUCTION

This instruction manual provides important information for the safe and efficient use of your Kircuit AC/DC Adapter. This adapter is designed to provide power to compatible devices, such as the Craig CHT955 Bluetooth CD Jukebox Speaker System. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the adapter or connected devices, and to ensure personal safety:

- **Voltage Compatibility:** Ensure the input voltage of your device matches the adapter's output voltage and current requirements.
- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to rain, moisture, or extreme temperatures.
- **Proper Ventilation:** Do not cover the adapter during use. Ensure adequate ventilation to prevent overheating.
- **Avoid Damage:** Do not use the adapter if the cord or plug is damaged. Do not attempt to open or repair the adapter.
- **Children and Pets:** Keep the adapter out of reach of children and pets.
- **Unplug When Not in Use:** Disconnect the adapter from the power outlet when not in use for extended periods.

Built Safety Protections

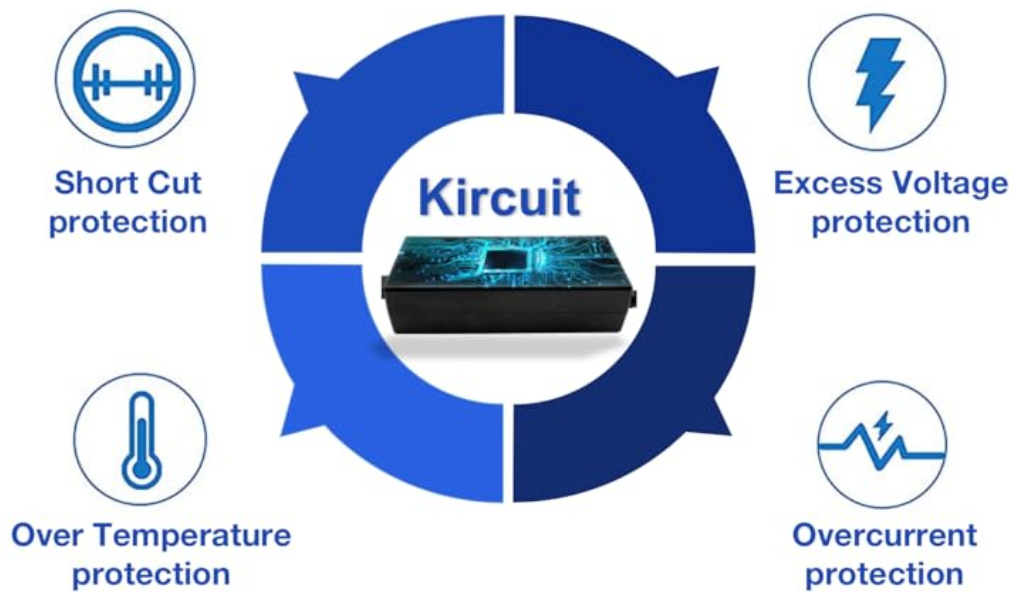


Image: Diagram showing the Kircuit adapter's built-in safety features, including protection against short circuits, excess voltage, over-temperature, and overcurrent.

SETUP

1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage.
2. **Connect to Device:** Plug the DC output connector of the Kircuit adapter into the power input port of your compatible device (e.g., Craig CHT955 Bluetooth CD Jukebox Speaker System). Ensure a secure fit.
3. **Connect to Power Outlet:** Insert the AC input plug of the adapter into a standard 100V-240V AC wall power outlet.
4. **Verify Power:** Once connected, your device should receive power. Refer to your device's manual for specific power indicators.



Image: The Kircuit AC/DC Adapter, showing the main unit and the attached power cord with its DC output plug.



Image: The Kircuit AC/DC Adapter connected to a power strip, demonstrating a typical setup scenario on a desk.

OPERATING INSTRUCTIONS

The Kircuit AC/DC Adapter operates automatically once connected to a power source and a compatible device. It provides a stable power supply for your electronic equipment.

- Ensure the adapter is firmly plugged into both the wall outlet and your device.
- Avoid placing the adapter in areas with poor ventilation or direct sunlight.
- If your device has a power switch, turn it on after connecting the adapter.

MAINTENANCE

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid

tightly coiling the cable to prevent damage.

- **Cable Care:** Do not bend, twist, or pull the cable excessively. This can damage the internal wires and insulation.

Durable design



- **Power cable made of high-quality materials with thick insulation layer to protect against wear and tear, as well as abrasion-resistant outer sheathing to prevent damage from external factors.**
- **The cable can withstand high temperatures without melting or degrading, which is especially important for cables carrying high current loads.**

Image: Illustrations highlighting the durable design of the power cable, showing its internal components and flexibility.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on.	Adapter not properly connected. Power outlet is not active. Device power switch is off. Adapter is incompatible or faulty.	Ensure both ends of the adapter are securely plugged in. Test the outlet with another device. Turn on the device's power switch. Verify adapter specifications match device requirements. If still not working, the adapter may be faulty.
Adapter feels hot.	Normal operation (slight warmth). Poor ventilation. Overload or fault.	A slight warmth is normal. Ensure the adapter is not covered and has adequate airflow. If excessively hot, unplug immediately and discontinue use. Contact support.
Loose connection at device.	Incorrect DC plug size. Worn device port.	Confirm the adapter's DC plug size is correct for your device. If the device port is worn, professional repair may be needed.

SPECIFICATIONS

- **Input:** 100V-240V AC, 50/60Hz, 0.3A
- **Output:** (Specific output voltage/current not provided, ensure compatibility with your device's requirements)
- **Compatibility:** Designed for devices requiring specific DC voltage and current, such as Craig CHT955 Bluetooth

CD Jukebox Speaker System.

- **Safety Features:** Built-in Dynamic IC, Charger IC, Power fuse for rapid charging and overcharge protection.
- **Item Weight:** 8 ounces
- **ASIN:** B0823NQDZD
- **Manufacturer:** Kircuit



Image: Two Kircuit AC/DC Adapters displayed from different perspectives, highlighting the compact design.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Kircuit website. Keep your purchase receipt as proof of purchase.

This product is designed for reliability and includes features such as short circuit protection, excess voltage protection, over temperature protection, and overcurrent protection to ensure safe operation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0823NQDZD>

More documents and user manuals: <https://manuals.plus/>