



Manuals.plus /

› HONEYSEW /

› HONEYSEW Sewing Machine Parts 353520, 422318, 447872 Instruction Manual

HONEYSEW 353520, 422318, 447872

HONEYSEW Sewing Machine Parts Instruction Manual

Models: 353520, 422318, 447872

INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of HONEYSEW sewing machine replacement parts. These parts are designed for specific Singer sewing machine models to ensure proper function and longevity.

Important: Please read this manual thoroughly before attempting any installation or maintenance. Incorrect installation can lead to damage to the part or your sewing machine.

PART COMPATIBILITY

The HONEYSEW parts covered in this manual are compatible with the following Singer sewing machine models:

- **Part 353520:** For Singer Old Machine 5800
- **Part 422318:** For Singer 6100, 7100, 8100
- **Part 447872:** For Singer 8500

PART IDENTIFICATION

Before installation, ensure you have the correct replacement part. Refer to the images below for visual identification of the parts.



Image 1: HONEYSEW Sewing Machine Part 353520. This image shows a white plastic and metal component, likely a lever or linkage, from a top-down perspective.



Image 2: HONEYSEW Sewing Machine Part 422318. This image displays a similar white plastic and metal component, viewed from a side angle, highlighting its various connection points.



Image 3: HONEYSEW Sewing Machine Part 447872. An angled view of the white plastic and metal part, showing its intricate design and the central shaft opening.



Image 4: HONEYSEW Sewing Machine Parts retail packaging. The part is sealed in a clear plastic bag with a yellow and orange HONEYSEW branded label.

SETUP AND INSTALLATION

Replacing sewing machine parts requires careful attention. If you are unsure about any step, it is recommended to seek assistance from a qualified sewing machine technician.

Safety Precautions:

- Always unplug your sewing machine from the power outlet before attempting any installation or maintenance.
- Use appropriate tools to avoid damaging the machine or the new part.
- Keep small parts away from children.

General Installation Steps:

1. **Identify the Old Part:** Locate the part that needs replacement within your sewing machine.
2. **Document Disassembly:** Take photos or make notes of how the old part is connected and the surrounding components before removal. This will aid in reassembly.
3. **Remove the Old Part:** Carefully detach the old part, ensuring not to force any connections.
4. **Clean the Area:** Before installing the new part, clean any lint, dust, or debris from the area where the part will be seated.
5. **Install the New Part:** Align the new HONEYSEW part with the corresponding connections. Gently secure it in place, following the reverse steps of disassembly. Ensure all screws or fasteners are tightened appropriately, but do not overtighten.
6. **Verify Movement:** Manually turn the handwheel of your sewing machine to ensure the newly installed part moves freely and does not obstruct other components.

OPERATING (POST-INSTALLATION CHECK)

After installing the new part, perform the following checks to ensure proper function:

- **Power On:** Plug in the sewing machine and turn it on.
- **Test Functionality:** Slowly operate the machine without thread or fabric first. Observe the movement of the newly installed part.

- **Sewing Test:** If the initial check is satisfactory, thread the machine and perform a test stitch on a scrap piece of fabric. Listen for unusual noises and check stitch quality.
- **Adjustments:** If any issues arise, refer to the troubleshooting section or your sewing machine's original manual for specific adjustments.

MAINTENANCE

Regular maintenance of your sewing machine and its parts can extend their lifespan and ensure smooth operation.

- **Cleaning:** Periodically clean the area around the installed part to remove lint and dust buildup. Use a small brush or vacuum cleaner attachment.
- **Inspection:** Visually inspect the part for any signs of wear, cracks, or deformation during routine machine cleaning.
- **Lubrication:** Refer to your sewing machine's original manual for specific lubrication points and recommended lubricants. Do not lubricate parts unless explicitly instructed, as some plastic components are self-lubricating or can be damaged by certain oils.

TROUBLESHOOTING

If you encounter issues after installing a HONEYSEW replacement part, consider the following common troubleshooting steps:

- **Part Not Moving Freely:**
 - Check for obstructions (lint, loose threads).
 - Ensure the part is correctly seated and all fasteners are not overtightened.
 - Verify that no other components are interfering with its movement.
- **Unusual Noises:**
 - A clicking or grinding sound may indicate improper alignment or a loose component. Recheck installation.
 - Ensure the part is compatible with your specific machine model.
- **Machine Not Functioning:**
 - Double-check all electrical connections and ensure the machine is plugged in.
 - Confirm that the new part is installed correctly and not preventing other essential mechanisms from engaging.

If problems persist, consult a professional sewing machine repair service.

SPECIFICATIONS

Attribute	Detail
Brand	HONEYSEW
Part Numbers	353520, 422318, 447872
Compatible Models	Singer 5800, 6100, 7100, 8100, 8500
Manufacturer	HONEYSEW
Date First Available	November 28, 2019

CUSTOMER SUPPORT

For further assistance, questions regarding installation, or to report a defective part, please contact HONEYSEW customer support through your original point of purchase or visit the official HONEYSEW store page.

When contacting support, please provide the part number and details of your sewing machine model for efficient service.