

[Manuals.plus](#) /

› [Sona](#) /

› Sona 18-inch Power Stand Fan SSO 6067 Instruction Manual

Sona SSO 6067

Sona 18-inch Power Stand Fan SSO 6067 Instruction Manual

Model: SSO 6067

INTRODUCTION

Thank you for choosing the Sona 18-inch Power Stand Fan, Model SSO 6067. This manual provides important information regarding the assembly, operation, maintenance, and safety of your new fan. Please read it thoroughly before use and retain it for future reference.





Figure 1: Front view of the Sona 18-inch Power Stand Fan SSO 6067.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using this fan.
- Ensure the power supply voltage matches the rating label on the fan (220-240V~ 50/60Hz).
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Keep the power cord away from heated surfaces.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Unplug the fan from the outlet when not in use, when moving it from one location to another, and before cleaning.
- Do not insert fingers or foreign objects into the grille openings.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Place the fan on a stable, level surface to prevent it from tipping over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Upon unpacking, please ensure all components are present and in good condition:

- 18-inch Power Stand Fan (main unit, including motor, blades, grilles, stand, and base)
- Instruction Manual

SETUP AND ASSEMBLY

The Sona 18-inch Power Stand Fan requires minimal assembly. Follow these steps:

1. **Base Assembly:** Place the heavy base on a flat, stable surface. Insert the lower stand pole into the base and secure it firmly using the provided screws or locking mechanism.
2. **Adjusting Height:** Loosen the height adjustment knob on the stand pole. Extend the upper stand pole to the desired height and tighten the knob securely.
3. **Motor Unit Attachment:** Attach the motor unit to the top of the upper stand pole. Ensure it is securely fastened.
4. **Rear Grille and Blade Installation:**
 - Remove the spinner cap and retaining nut from the motor shaft.
 - Place the rear grille onto the motor unit, aligning the mounting holes. Secure it with the retaining nut.
 - Slide the fan blade onto the motor shaft, ensuring it is correctly oriented and seated.
 - Secure the fan blade with the spinner cap, turning it clockwise until tight.
5. **Front Grille Attachment:** Place the front grille over the rear grille, aligning the clips or securing ring. Fasten the grilles together securely.





Figure 2: Rear view of the fan motor unit, showing the power cord connection point and grille attachment area.

OPERATING INSTRUCTIONS

Once assembled, your Sona Power Stand Fan is ready for use.

1. **Power Connection:** Plug the fan's power cord into a standard 220-240V~ 50/60Hz electrical outlet.
2. **Speed Selection:** The fan features a 3-speed rotary switch. Turn the knob to select your desired fan speed:
 - "0" - Off
 - "1" - Low Speed
 - "2" - Medium Speed
 - "3" - High Speed
3. **Oscillation Function:** To activate the left-right oscillating function, press down the oscillation knob located on top of the motor housing. To stop oscillation, pull the knob up.
4. **Tilt Adjustment:** The fan head can be tilted up or down to direct airflow. Loosen the tilt adjustment knob on the side of the

motor unit, adjust the angle, and then tighten the knob securely.



Figure 3: Control knob for speed selection (0-Off, 1-Low, 2-Medium, 3-High).

MAINTENANCE

Regular cleaning will help maintain your fan's performance and extend its lifespan.

- **Always unplug the fan** from the power outlet before cleaning.
- **Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- **Grille and Blade Cleaning:** Dust can accumulate on the grilles and blades, affecting airflow.
 - Carefully remove the front grille (refer to assembly instructions in reverse).
 - Wipe the fan blades with a soft, damp cloth.
 - Clean both the front and rear grilles.
 - Ensure all parts are completely dry before reassembling the fan.

- **Storage:** If storing the fan for an extended period, cover it to protect it from dust and store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Speed setting is "0" (Off).	Check if the fan is properly plugged into a working outlet. Turn the speed control knob to "1", "2", or "3".
Weak airflow.	Fan blades or grilles are dirty. Fan is set to a low speed.	Clean the fan blades and grilles (refer to Maintenance section). Increase the fan speed.
Fan is noisy.	Loose parts. Fan is not on a level surface. Dust accumulation.	Check for any loose screws or components and tighten them. Place the fan on a stable, level surface. Clean the fan thoroughly.
Oscillation not working.	Oscillation knob is not pressed down.	Ensure the oscillation knob on top of the motor housing is fully pressed down.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	SSO 6067
Brand	Sona
Type	Pedestal Fan / Floor Fan
Power Source	Corded Electric
Voltage	220-240V~
Frequency	50/60Hz
Wattage	90W
Number of Speeds	3
Number of Blades	3
Blade Material	Light Weight Alloy with Anti-Rust Coating
Motor Type	100% Full Copper Ball Bearing Motor
Special Features	Oscillating Function
Control Method	Push Button / Rotary Knob
Product Dimensions (D x W x H)	17.7D x 19.7W x 52.4H centimetres (approximate)
Indoor/Outdoor Usage	Indoor

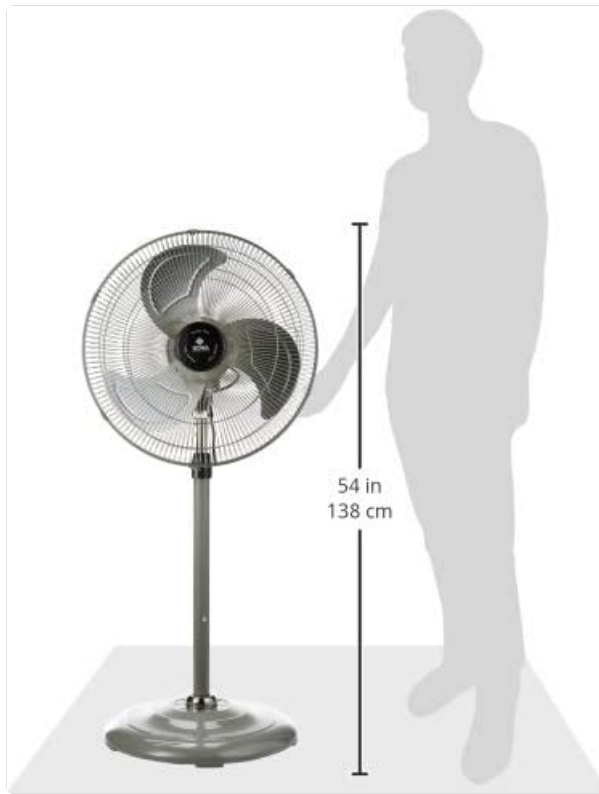


Figure 4: Approximate dimensions of the Sona 18-inch Power Stand Fan.

WARRANTY INFORMATION

This Sona Power Stand Fan, Model SSO 6067, comes with a **5-year warranty on the motor** from the date of purchase. This warranty covers manufacturing defects in the motor under normal use and service. Other components may be subject to different warranty periods. Please retain your proof of purchase for warranty claims. The warranty does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or normal wear and tear.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Sona customer service. Refer to the product packaging or the official Sona website for the most current contact information.

When contacting support, please have your model number (SSO 6067) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0823RF3DJ>

More documents and user manuals: <https://manuals.plus/>