

ChefWave B08246XFTQ

ChefWave Conical Burr Coffee Grinder User Manual

Model: B08246XFTQ

Thank you for choosing the ChefWave Conical Burr Coffee Grinder. This manual provides important information for the safe and efficient operation of your appliance.

[Safety Instructions](#) [Components](#) [Setup](#) [Operation](#) [Grind Settings](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the ChefWave Conical Burr Coffee Grinder. Retain this manual for future reference.

- Ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not operate the grinder with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- The bean container must be securely locked in place for the grinder to activate.
- Always ensure the lid of the bean container is properly closed before operation.

2. COMPONENTS OVERVIEW

Familiarize yourself with the parts of your ChefWave Conical Burr Coffee Grinder:

- **Bean Container (Hopper):** Holds up to 14 oz. of whole coffee beans.

- **Lid for Bean Container:** Secures beans and prevents spillage.
- **Coarseness Adjustment Knob:** Selects one of 16 grind settings.
- **Timed Grinding Knob:** Sets the grinding duration.
- **On/Off Button:** Initiates and stops grinding.
- **Collection Container:** Holds up to 5 oz. of ground coffee.
- **Stainless Steel Conical Burrs:** For precise and consistent grinding.
- **Portafilter Holders (2 sizes):** For direct grinding into a portafilter.
- **Wooden Cleaning Brush:** For maintenance.
- **1 Tbsp Coffee Scoop:** For measuring coffee.



Figure 2.1: Overview of the ChefWave Conical Burr Coffee Grinder with key components labeled.

PORTAFILTER HOLDERS

Includes 2 holders
to easily fit a large
or small portafilter.



DUSTING BRUSH



Quickly cleans up
spilled grinds.

Figure 2.2: Coarseness adjustment knob (16 settings) and timed grinding knob.

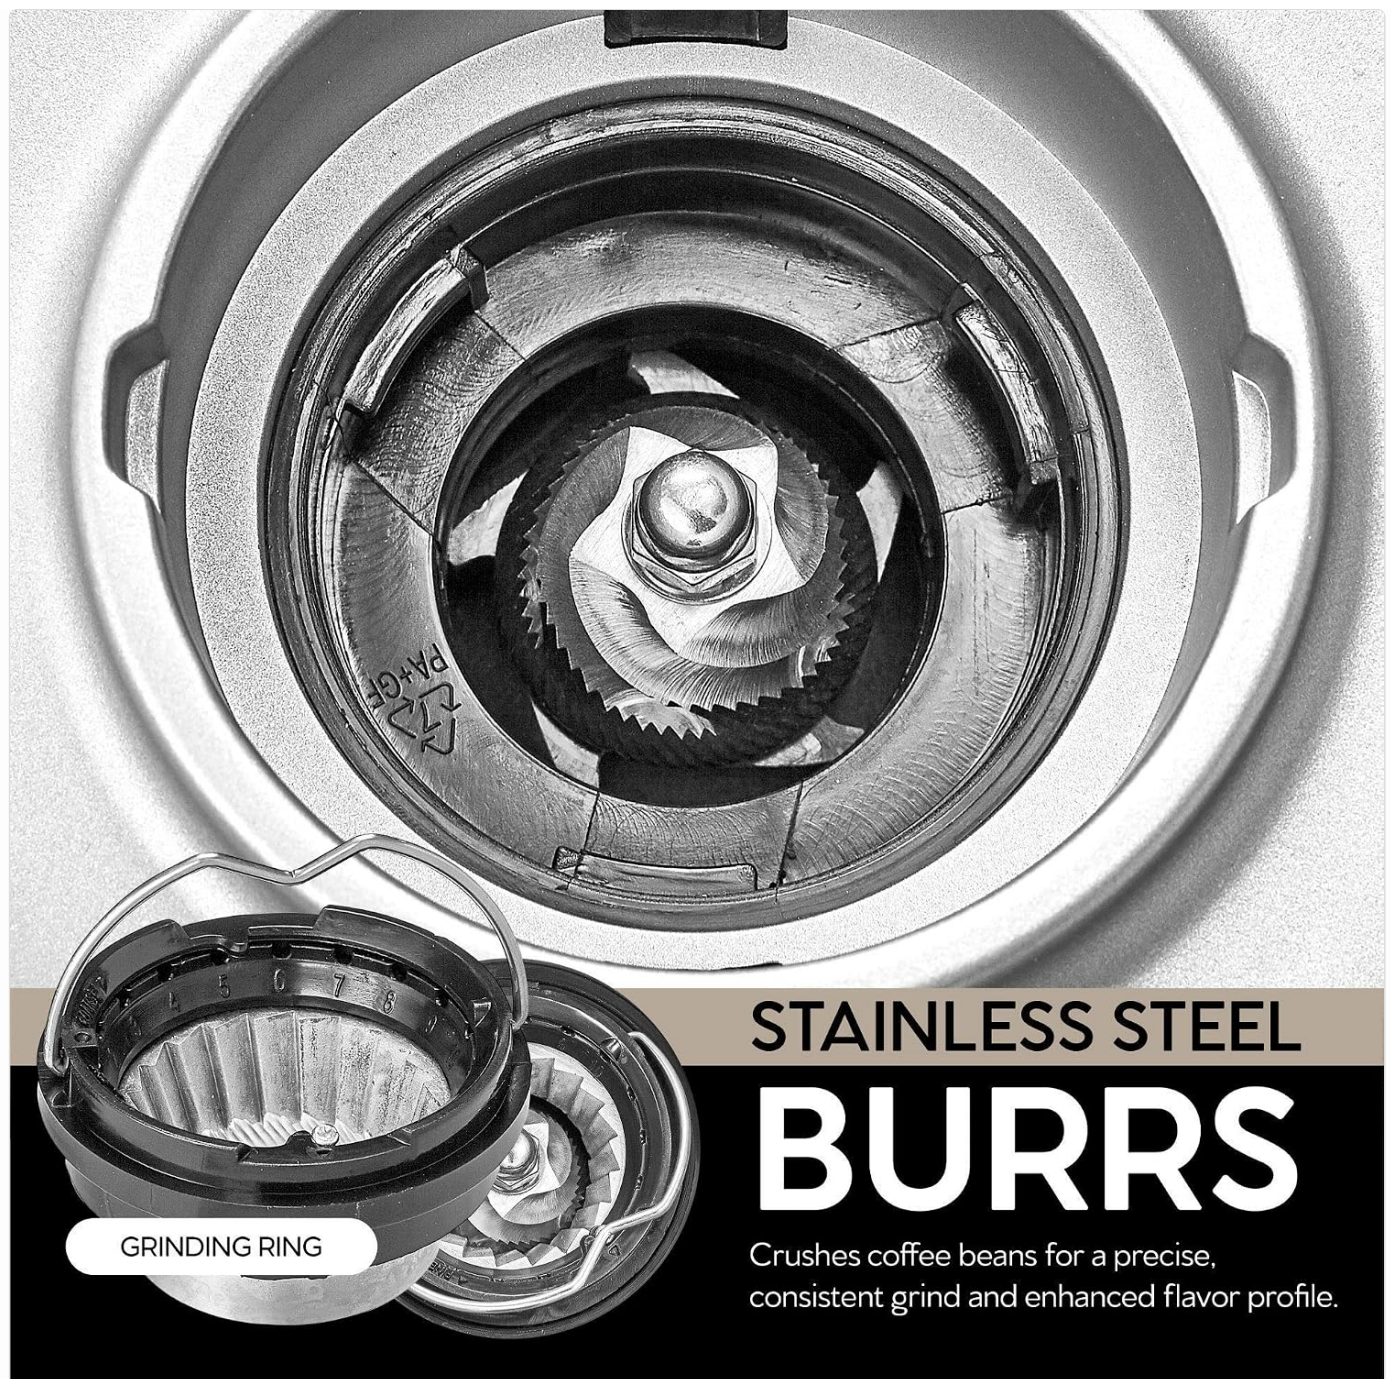


Figure 2.3: 14 oz. bean container and 5 oz. ground coffee collection container with scoop.

BØNNE

Conical Burr

COFFEE GRINDER

Powerful Performance

Large Hopper

Uniform Grind

Customizable Grind



AUTO
SHUTOFF



2 TO 10 CUPS
PER CYCLE



Figure 2.4: Stainless steel conical burrs for consistent grinding.



14 oz. BEAN CONTAINER

SEE-THRU BEAN HOPPER

Processes up to 10 cups
in a single cycle.

SAFETY FEATURE

The bean container must be locked
in place to activate the grinder.

5 oz. COLLECTION CONTAINER

& 1 Tbsp (15 ml) Coffee Scoop



Figure 2.5: Included portafilter holders and wooden dusting brush.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the bean container, its lid, the ground coffee collection container, and the portafilter holders with warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.
3. **Assemble:**
 - Place the ground coffee collection container into its designated slot on the main unit. Ensure it clicks securely into place. *(Note: Some models may have a protective blue plastic covering on the magnet for the collection container; remove this if present.)*
 - Place the bean container onto the top of the main unit. Rotate it clockwise until it locks securely into position. A safety mechanism prevents operation if the bean container is not correctly locked.

- Place the lid onto the bean container.

4. **Position:** Place the grinder on a stable, flat, and dry surface.
5. **Plug In:** Connect the power cord to a standard 120V AC outlet. The cord can be wound up and stored under the base.

4. OPERATION

1. **Add Beans:** Pour whole coffee beans into the bean container. Do not fill past the MAX line.
2. **Select Grind Setting:** Rotate the coarseness adjustment knob to your desired grind level (1-16). Refer to the 'Grind Settings' section for recommendations.
3. **Choose Collection Method:**
 - **For Collection Container:** Ensure the ground coffee collection container is properly seated.
 - **For Portafilter:** Select the appropriate portafilter holder and place it in the grinding chute. Insert your portafilter into the holder.
4. **Set Grinding Time:** Rotate the timed grinding knob to select the desired grinding duration. The grinder can process 2 to 10 cups in a single cycle.
5. **Start Grinding:** Press the On/Off button to begin grinding. The grinder will automatically stop once the set time has elapsed.
6. **Manual Grinding (for Portafilter):** If using a portafilter, you can press the portafilter against the back of the machine (where a small button is located) to activate grinding manually. This bypasses the timer, allowing you to grind for a specific amount. Release the portafilter to stop.
7. **After Grinding:** Remove the collection container or portafilter. Unplug the appliance when finished.

5. GRIND SETTINGS GUIDE

The ChefWave Conical Burr Coffee Grinder offers 16 grind settings, from coarse to ultra-fine, to suit various brewing methods. Experimentation is recommended to find your preferred setting for specific beans and brewing equipment.

Grind Setting Range	Recommended Brewing Method	Description
1-4 (Fine to Ultra-Fine)	Espresso, Turkish Coffee	Powdery, similar to flour. Ideal for high-pressure brewing methods.
5-8 (Medium-Fine)	Drip Coffee Makers, Aeropress	Similar to table salt. Suitable for most automatic coffee makers.
9-12 (Medium)	Pour Over, Siphon	Similar to regular sand. Provides balanced extraction for manual brewing.

Grind Setting Range	Recommended Brewing Method	Description
13-16 (Coarse)	French Press, Cold Brew	Chunky, similar to sea salt. Prevents over-extraction and bitterness in immersion brewing.

PORTAFILTER HOLDERS

Includes 2 holders to easily fit a large or small portafilter.



DUSTING BRUSH

Quickly cleans up spilled grinds.

Figure 5.1: Coarseness adjustment knob with 16 grind settings.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Disassemble:** Remove the bean container, its lid, and the ground coffee collection container.

3. **Clean Removable Parts:** Wash the bean container, lid, collection container, and portafilter holders with warm, soapy water. Rinse thoroughly and dry completely.
4. **Clean Burrs:**
 - Remove the upper burr by twisting it counter-clockwise and lifting it out.
 - Use the provided wooden cleaning brush to remove any coffee grounds from both the upper and lower burrs.
 - Do not wash the burrs with water.
 - Reinsert the upper burr, aligning it correctly, and twist clockwise to lock it in place.
5. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
6. **Storage:** Store the grinder in a dry place. The power cord can be stored under the base.



14 oz. BEAN CONTAINER

SEE-THRU BEAN HOPPER

Processes up to 10 cups
in a single cycle.

SAFETY FEATURE

The bean container must be locked
in place to activate the grinder.

5 oz. COLLECTION CONTAINER

& 1 Tbsp (15 ml) Coffee Scoop



Figure 6.1: Use the provided dusting brush for cleaning burrs and spilled grounds.

7. TROUBLESHOOTING

If you encounter issues with your ChefWave Conical Burr Coffee Grinder, refer to the following table:

Problem	Possible Cause	Solution
Grinder does not turn on.	◦ Bean container not securely locked. ◦ Ground coffee collection container not properly seated. ◦ Appliance not plugged in.	◦ Ensure the bean container is rotated clockwise until it locks. ◦ Push the collection container firmly into place until it clicks. ◦ Check power connection.
Inconsistent coarse grind (e.g., for French Press).	Burrs may be slightly misaligned or require cleaning.	◦ Clean the burrs thoroughly as per maintenance instructions. ◦ Ensure the upper burr is correctly seated and locked. ◦ Experiment with slightly coarser settings.
Coffee grounds static/messy.	Environmental humidity or type of coffee beans.	◦ Lightly mist beans with water before grinding (a few drops per batch). ◦ Ensure the collection container is completely dry.
Grind not fine enough for espresso.	Grind setting too coarse or burrs need cleaning.	◦ Adjust to the finest grind settings (1-4). ◦ Clean burrs to remove any blockages.

8. SPECIFICATIONS

Feature	Detail
Model	B08246XFTQ
Brand	ChefWave
Grinder Type	Conical Burr
Grind Settings	16 (Coarse to Ultra-Fine)
Bean Container Capacity	14 oz.

Feature	Detail
Ground Coffee Container Capacity	5 oz.
Material	Die Cast Aluminum Housing, Stainless Steel Burrs
Color	Stainless Steel
Wattage	150 Watts
Voltage	120 Volts
Item Weight	1 Pound
UPC	663701789669

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official ChefWave website. Keep your purchase receipt as proof of purchase.
For additional assistance, you may contact ChefWave customer service directly.

© 2026 ChefWave. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question