

Kitvision KVACTLAP4K

KitVision 4K Action Camera Adventure Pack User Manual

Model: KVACTLAP4K

INTRODUCTION

The KitVision 4K Action Camera Adventure Pack is designed to capture your most thrilling moments in stunning 4K resolution. This comprehensive kit provides all the essential tools for recording high-quality videos and photos, whether on land or underwater. With its robust design and versatile accessories, you can document every adventure with clarity and ease.

PACKAGE CONTENTS

Before you begin, please ensure all components listed below are present in your KitVision 4K Action Camera Adventure Pack:

- KitVision 4K Action Camera
- 32 GB Memory Card
- Waterproof Housing (up to 30m)
- Floating Grip
- Extension Pole
- Smartphone Adapter
- Microfiber Lens Cloth
- USB Charging Cable
- Rechargeable Lithium-ion Battery



Image: All components of the KitVision 4K Action Camera Adventure Pack, including the camera, waterproof case, various mounts, memory card, and charging cable.

SETUP GUIDE

1. Charging the Battery

The camera comes with a rechargeable Lithium-ion battery. For first use, fully charge the battery. Insert the battery into the camera's battery compartment. Connect the camera to a USB power source using the provided USB cable. The charging indicator light will typically show the charging status and turn off or change color when fully charged.

2. Inserting the Memory Card

The KitVision 4K Action Camera supports SDHC memory cards. A 32 GB memory card is included in your pack. Locate the memory card slot on the camera, usually on the side or bottom. Insert the memory card with the gold contacts facing the correct direction until it clicks into place. Ensure the camera is powered off before inserting or removing the memory card.

3. Assembling with Waterproof Housing

For underwater use or protection against dust and impact, place the camera inside the waterproof housing. Ensure the housing is clean and free of debris, and the rubber seal is properly seated. Close the latch securely. The housing allows for operation of the camera's buttons.



Image: Front view of the KitVision 4K Action Camera, showing the lens and mode button.

4. Attaching Accessories

The Adventure Pack includes several accessories for versatile mounting:

- **Floating Grip:** Attach the camera (preferably in its waterproof housing) to the floating grip using the standard action camera mount. This accessory helps keep your camera afloat in water.



Image: The KitVision 4K Action Camera, enclosed in its waterproof housing, securely mounted on the floating grip.

- **Extension Pole:** Extend your reach for selfies or wider shots. Attach the camera (with or without housing) to the top of the extension pole.



Image: The KitVision 4K Action Camera, inside its waterproof housing, attached to the extension pole for extended reach.

- **Smartphone Adapter:** This adapter allows you to mount your smartphone onto the extension pole, useful for remote viewing or capturing different perspectives.



Image: A smartphone mounted on the extension pole using the provided smartphone adapter.

OPERATING INSTRUCTIONS

Power On/Off

To power on the camera, press and hold the Power/Mode button (usually on the front or top) for a few seconds until the LCD screen illuminates. To power off, press and hold the same button until the screen turns off.

Mode Selection

Press the Power/Mode button repeatedly to cycle through different modes: Video Recording, Photo Capture, Playback, and Settings. The current mode will be displayed on the 2-inch LCD screen.

Video Recording (4K)

In Video Recording mode, press the Shutter/OK button (usually on the top) to start recording. Press it again to stop recording. The camera records in 4K (2160p) resolution, capturing high-definition video with a 140-degree wide-angle lens.

Photo Capture

In Photo Capture mode, press the Shutter/OK button to take a still photograph. The camera's high-resolution sensor ensures clear and detailed images.

Using the 2-inch LCD Screen

The integrated 2-inch LCD screen provides a live preview of your shot, allowing you to frame your videos and photos accurately. It also serves as a display for navigating menus, reviewing captured content, and adjusting settings.

Connectivity (Bluetooth, USB)

The camera supports Bluetooth and USB connectivity. Use the USB cable to transfer files to a computer or for charging. Bluetooth can be used for remote control via a compatible smartphone app (if available, refer to camera settings for pairing instructions).

Underwater Operation

When using the camera with the waterproof housing, ensure all seals are clean and properly closed. The housing is rated for depths up to 30 meters. Buttons on the housing allow you to operate the camera's functions underwater.

MAINTENANCE

- **Cleaning:** Use the provided microfiber lens cloth to clean the camera lens and LCD screen. For the waterproof housing, rinse with fresh water after saltwater use and allow to air dry. Do not use harsh chemicals.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. If storing for extended periods, charge the battery to about 50% capacity.
- **Storage:** Store the camera and accessories in a protective case to prevent damage from dust, moisture, and impacts.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Battery is depleted. Charge the battery fully. Ensure battery is inserted correctly.
Cannot record video/take photos.	Memory card is full or not inserted correctly. Format the memory card (this will erase all data). Ensure camera is in the correct mode.

Problem	Possible Cause / Solution
Poor video/photo quality.	Lens may be dirty. Clean with microfiber cloth. Ensure sufficient lighting. Check resolution settings.
Water inside waterproof housing.	Housing not properly sealed. Check for debris on the rubber seal. Ensure latch is securely closed. Do not exceed 30m depth limit.

SPECIFICATIONS





Feature	Detail
Brand	KitVision
Model Name	KVACTLAP4K
Video Recording Resolution	2160p (4K)
Photo Sensor Technology	CCD
Flash Memory Type	SDHC
Screen Size	2 Inches (LCD)
Connectivity Technology	Bluetooth, USB
Color	Grey
Optical Zoom	1x
Included Components	Camera Body & Accessories (32 GB Memory Card, Waterproof Housing, Floating Grip, Extension Pole, Smartphone Holder, Microfiber Lens Cloth)
Batteries	1 Lithium Ion battery (included)
Package Dimensions	24.7 x 17.1 x 6.4 cm; 470 g
First Available Date	January 15, 2020

WARRANTY AND SUPPORT

KitVision cameras and accessories are designed for life's adventures and come with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official KitVision website or contact their customer service department. Contact details can typically be found on the product packaging or the manufacturer's website.

Related Documents

	<p>Kitvision Escape UHD 4K Action Camera User Manual</p> <p>Comprehensive user manual for the Kitvision Escape UHD 4K Action Camera, detailing its features, functions, setup, operation, connectivity, accessories, specifications, and care instructions.</p>
	<p>Kitvision Escape HD5 Action Camera User Manual</p> <p>User manual for the Kitvision Escape HD5 Action Camera, covering setup, functions, modes, and specifications.</p>
	<p>Kitvision Escape HD5W Action Camera User Manual and Guide</p> <p>Comprehensive user manual for the Kitvision Escape HD5W Action Camera, covering features, setup, operation, Wi-Fi connectivity, accessories, technical specifications, and troubleshooting.</p>
	<p>Kitvision Immerse 360 Duo Camera User Manual</p> <p>User manual for the Kitvision Immerse 360 Duo 360° Camera, covering box contents, functions, charging, memory card usage, power modes, video and photo modes, Wi-Fi app usage, menu settings, PC connection, specifications, care instructions, and troubleshooting.</p>