

EWA EWA W300 Gray

EWA W300 Bluetooth Speaker Instruction Manual

Model: EWA W300 Gray

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your EWA W300 Bluetooth Speaker. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: Front view of the EWA W300 Bluetooth Speaker, showcasing its gray finish and rectangular design.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and liquids. This product is not waterproof.
- Use only the provided Micro USB cable for charging.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x EWA W300 Portable Bluetooth Speaker
- 1 x Micro USB Cable
- 1 x Crystal Box (packaging)
- 1 x User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your EWA W300 speaker.

Simple stylish design & Easy to use




- | | | | |
|---|---|---|--|
| M | Bluetooth Mode
SD Card Mode/ USB Mode |  | Long Press: Power On/Off
Press Once: Pause/Play |
|  | Long Press: Volume down
Press Once: Previous track |  | Long Press: Volume up
Press Once: Next track |



Figure 2: Top view of the EWA W300 speaker showing the control buttons. The 'M' button is for mode switching, the power icon button is for power and play/pause, and the '+' and '-' buttons are for volume and track control.

Support TF (Micro SD) Card Mode

Enjoy music all the time even if non bluetooth

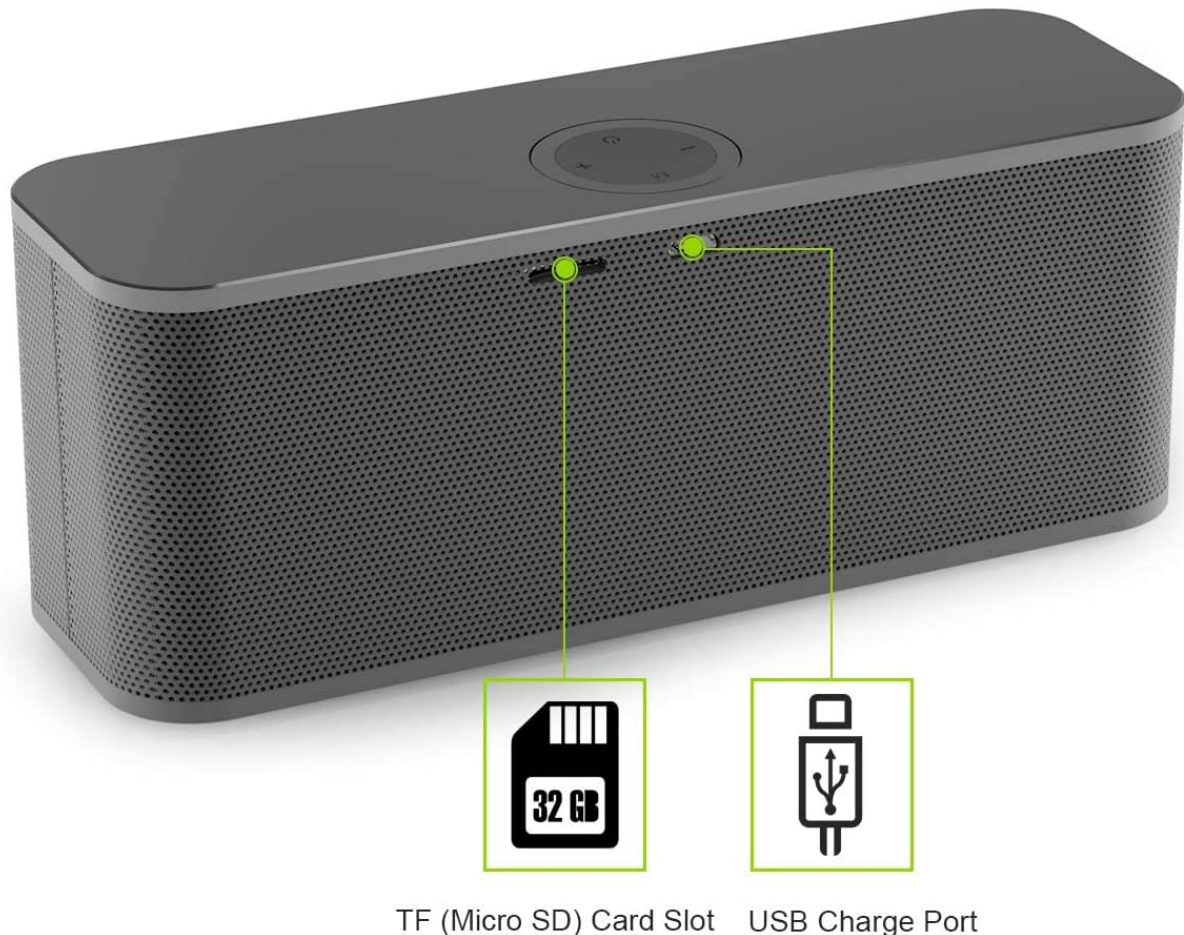


Figure 3: Side view of the EWA W300 speaker highlighting the TF (Micro SD) Card Slot and the USB Charge Port.

Control Buttons:

- **M Button:** Press to switch between Bluetooth Mode, SD Card Mode, and USB Mode.
- **Power/Play/Pause Button:**
 - Long Press: Power On/Off.
 - Press Once: Play/Pause audio.
- **'-' Button:**
 - Long Press: Decrease Volume.
 - Press Once: Previous Track.
- **'+' Button:**
 - Long Press: Increase Volume.
 - Press Once: Next Track.

1. Charging the Speaker

Before first use, fully charge the EWA W300 speaker. A built-in 1800mAh Li-ion battery provides extended playtime.

- Connect the provided Micro USB cable to the USB Charge Port on the speaker (refer to Figure 3).
- Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
- The charging indicator light will illuminate.
- Charging typically takes approximately 2 hours for a full charge. The indicator light will change or turn off once charging is complete.

2. Powering On/Off

- **To Power On:** Long press the Power/Play/Pause button (refer to Figure 2) until you hear an audible prompt or see the indicator light illuminate.
- **To Power Off:** Long press the Power/Play/Pause button again until you hear an audible prompt or the indicator light turns off.

OPERATING THE SPEAKER

1. Bluetooth Mode

The EWA W300 speaker primarily operates via Bluetooth for wireless audio streaming.

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode if no other mode is active. The indicator light will flash, indicating it's ready to pair.
2. On your device (smartphone, tablet, laptop, etc.), enable Bluetooth and search for available devices.
3. Select "EWA W300" from the list of found devices.
4. Once successfully paired, the speaker will provide an audible confirmation, and the indicator light will stop flashing and remain solid.
5. You can now play audio from your device through the EWA W300 speaker.

2. TF (Micro SD) Card Mode

The speaker supports playing audio directly from a TF (Micro SD) card.

1. Insert a TF (Micro SD) card with audio files (e.g., MP3) into the TF Card Slot (refer to Figure 3).
2. Press the 'M' button (Mode button) on the speaker until it switches to TF Card Mode. An audible prompt will confirm the mode change.
3. The speaker will automatically begin playing the audio files from the card.
4. Use the '+' and '-' buttons to control playback (next/previous track) and volume.

3. Playback and Volume Control

- **Play/Pause:** Press the Power/Play/Pause button once.
- **Next Track:** Press the '+' button once.
- **Previous Track:** Press the '-' button once.
- **Volume Up:** Long press the '+' button.

- **Volume Down:** Long press the '-' button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided USB cable.
Cannot pair with Bluetooth device.	Bluetooth is not enabled on your device; speaker is not in pairing mode; too far from device.	Ensure Bluetooth is enabled on your device. Long press the power button to restart the speaker and enter pairing mode. Move the speaker closer to your device (within 10 meters).
No sound from speaker.	Volume too low; incorrect mode selected; device not playing audio.	Increase speaker volume using the '+' button. Check device volume. Press 'M' button to ensure correct mode (Bluetooth/TF Card). Ensure audio is playing on your connected device.
TF card not recognized.	Card inserted incorrectly; unsupported file format; corrupted card.	Re-insert the TF card correctly. Ensure audio files are in a supported format (e.g., MP3). Try a different TF card.

SPECIFICATIONS

Feature	Detail
Model Name	EWA W300
Speaker Type	Dual Speaker
Connectivity Technology	Bluetooth (Wireless)
Audio Output Mode	Stereo
Speaker Maximum Output Power	6 Watts
Battery Capacity	1800mAh Li-ion
Charging Time	Approx. 2 Hours

Feature	Detail
---------	--------

Playtime	Up to 8 hours (at 50% volume)
Product Dimensions (D x W x H)	2.28" x 7.01" x 2.68" (17.8 x 6.8 x 5.8 cm)
Item Weight	402 Grams (14.2 ounces)
Control Method	Touch
Supported Media	TF (Micro SD) Card
Color	Gray

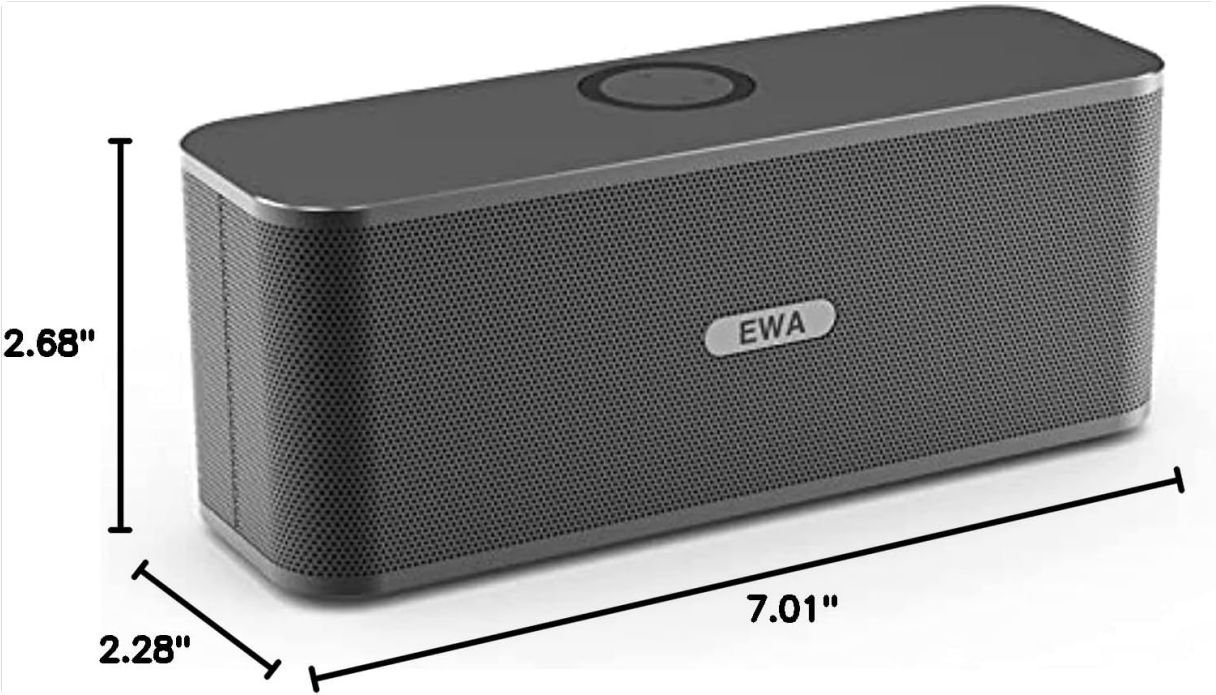


Figure 4: Dimensions of the EWA W300 Bluetooth Speaker, showing its length, width, and height.





WARRANTY INFORMATION

The EWA W300 Portable Bluetooth Speaker comes with a 12-month worry-free warranty from the date of purchase. This warranty covers manufacturing defects and workmanship. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact EWA customer service. We are committed to providing friendly and helpful support. Please refer to the contact information provided on the official EWA website or your purchase platform for the most up-to-date support channels. You can visit the official EWA Store for more information:[EWA Official Store](#)

Related Documents

	<p>EWA A109mini User Manual: Portable Bluetooth Speaker Guide</p> <p>Comprehensive user manual for the EWA A109mini portable wireless Bluetooth speaker, covering setup, controls, specifications, and warranty information.</p>
	<p>EWA A106Pro Wireless Speaker User Manual</p> <p>User manual for the EWA A106Pro wireless speaker, covering setup, connection, charging, commands, LED indicator guide, reset button, specifications, and important care instructions.</p>
	<p>EWA A106Pro Wireless Speaker Welcome Guide and Specifications</p> <p>Comprehensive welcome guide and technical specifications for the EWA A106Pro wireless speaker, including setup instructions, controls, LED indicators, troubleshooting, safety warnings, and FCC compliance.</p>
	<p>EWA A110 Wireless Speaker User Manual - Features, Specifications, and Connection Guide</p> <p>Comprehensive user manual for the EWA A110 Wireless Speaker. Learn about packaging, button functions, Bluetooth connection, TWS pairing, indicator status, technical specifications, and important usage notices.</p>