

[Manuals.plus](#) /

› [LITFAD](#) /

› LITFAD Industrial Water Pipe Style Floor Lamp (Model B0824N45MH) Instruction Manual

LITFAD B0824N45MH

LITFAD Industrial Water Pipe Style Floor Lamp (Model B0824N45MH) Instruction Manual

Model: B0824N45MH

1. INTRODUCTION

Thank you for purchasing the LITFAD Industrial Water Pipe Style Floor Lamp. This manual provides essential information for the safe assembly, operation, and maintenance of your new floor lamp. Please read these instructions thoroughly before installation and retain them for future reference.



Image 1.1: The LITFAD Industrial Water Pipe Style Floor Lamp, featuring a bronze finish and two saucer shades, shown unlit against a brick wall background.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent personal injury or damage to the lamp, please adhere to the following safety guidelines:

- **Professional Installation Recommended:** For a safe and secure installation, it is highly recommended that this fixture be installed by a licensed electrician.
- **Secure Mounting:** Ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.
- **Wiring Precautions:** All wires must be connected correctly. When unpacking, avoid pulling on wires, as this may result in a poor connection.
- **Power Disconnection:** Do not connect electricity until the fixture is fully assembled.
- **Bulb Replacement Safety:** To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug

the fixture and allow it to cool prior to replacing light bulbs.

- **Avoid Direct Contact:** Do not touch the bulb when the fixture is turned on or look directly at a lit bulb.
- **Flammable Materials:** Keep flammable materials away from lit bulbs.
- **Voltage Compatibility:** This lamp operates on AC110-120V. Ensure your power supply matches this requirement.

3. PACKAGE CONTENTS

Carefully unpack all components and inspect for any damage. Ensure all parts listed below are present. If any parts are missing or damaged, contact customer support immediately.

- Lamp Base Assembly
- Vertical Pipe Sections
- Lamp Head Assemblies (2) with Saucer Shades
- Decorative Gauge (pre-attached to top section)
- Red Valve Handle (decorative, pre-attached)
- Power Cord with Plug
- User Manual (this document)
- *Note: Light bulbs are NOT included.*

4. ASSEMBLY INSTRUCTIONS

Assembly of this floor lamp requires careful attention to detail, particularly with electrical connections. It is strongly recommended to have a licensed electrician perform the wiring steps.

1. **Prepare the Workspace:** Lay out all components on a clean, flat, non-abrasive surface to prevent scratching.
2. **Assemble the Base:** Connect the base legs to the central base connector. Ensure all connections are tight and stable.



Image 4.1: A detailed view of the lamp's metal pipe base, showing the connections for the tripod legs.

3. **Connect Vertical Pipe Sections:** Carefully thread the vertical pipe sections together, ensuring the internal wiring passes through freely without pinching or damage.
4. **Attach Lamp Head Assemblies:** Secure the two lamp head assemblies to their designated positions on the vertical pipe.
5. **Electrical Wiring (Professional Recommended):**
 - The lamp's internal wiring may require connection to the power cord. If wires are cut, they must be properly stripped and connected using appropriate wire nuts or butt splices.
 - Ensure all electrical connections are secure and insulated to prevent short circuits or electrical hazards.
 - *This step is critical for safety and functionality. If you are not experienced with electrical wiring, consult a licensed electrician.*
6. **Install Light Bulbs:** Screw in two E26/E27 base light bulbs (max 40W each, not included) into the lamp sockets. Do not overtighten.
7. **Final Inspection:** Before plugging in, double-check all connections, ensure the lamp is stable, and that no wires are exposed or pinched.

5. OPERATING INSTRUCTIONS

Once assembled and bulbs are installed, your LITFAD floor lamp is ready for use.

1. **Connect to Power:** Plug the lamp's power cord into a standard AC110-120V wall outlet.
2. **Turn On/Off:** The lamp features a touch switch for operation. Locate the touch-sensitive area (often integrated into the base or lower pipe section) and tap it to turn the lamp on or off.

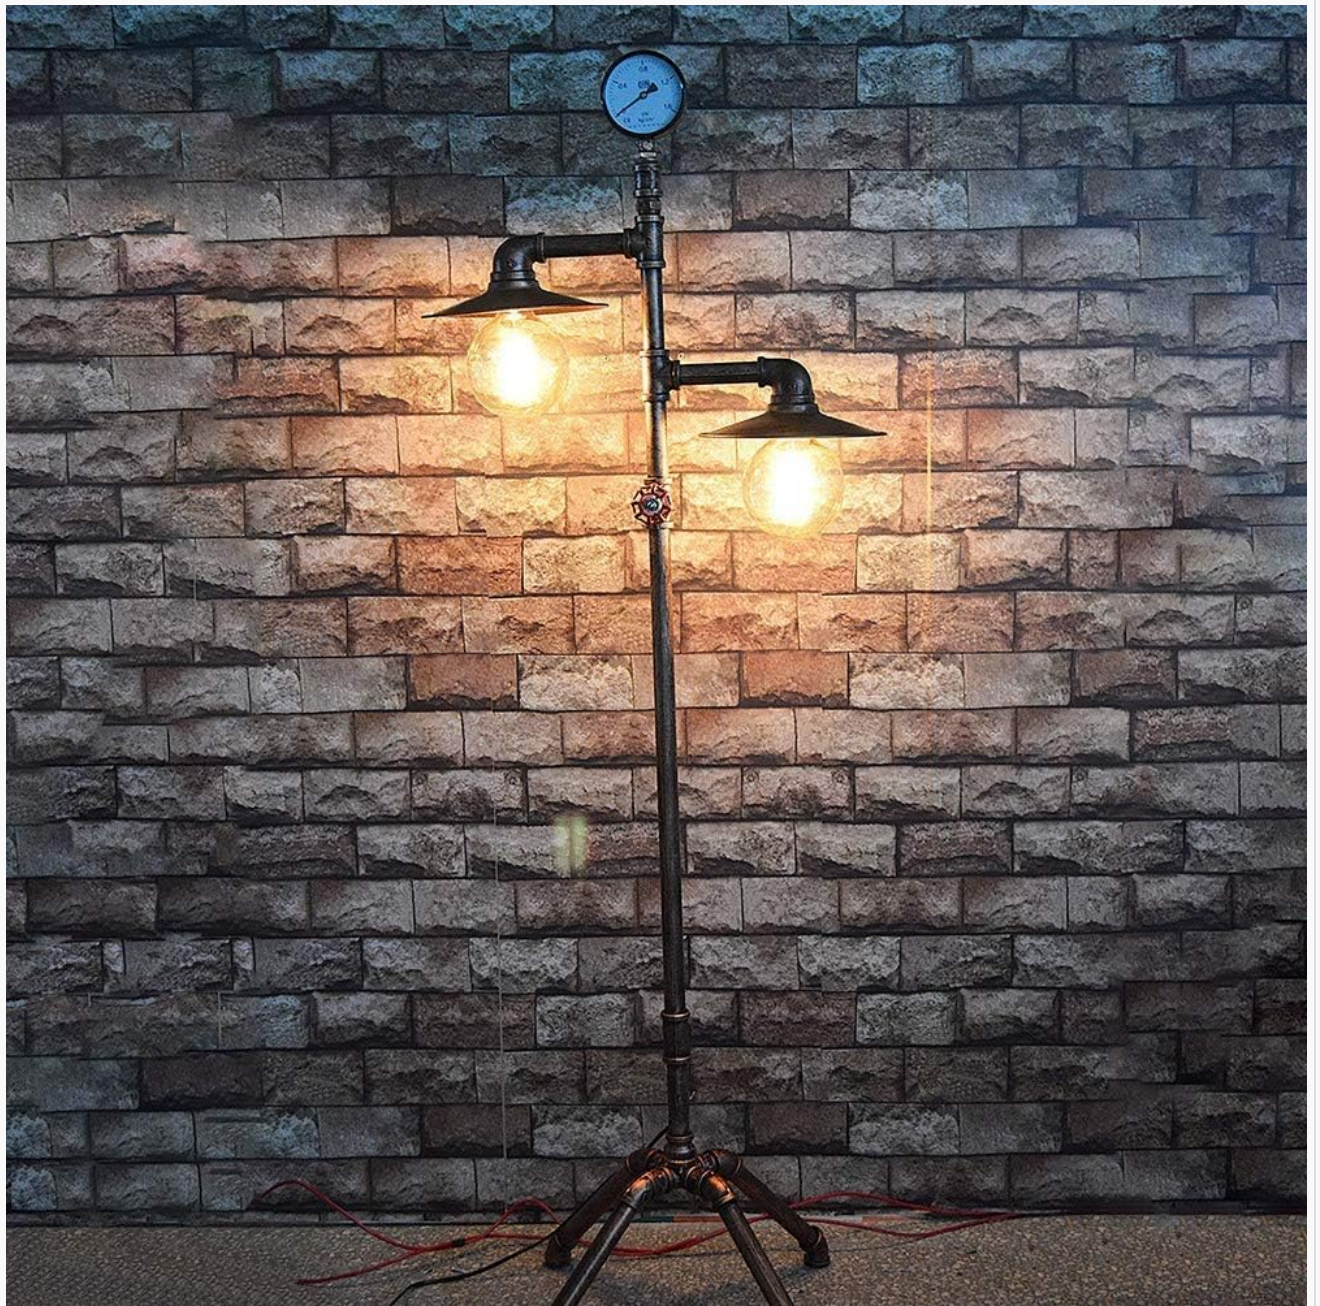


Image 5.1: The LITFAD Industrial Water Pipe Style Floor Lamp illuminated, showcasing the warm glow of the bulbs and the industrial design.



Image 5.2: A close-up view highlighting the decorative red valve handle and the saucer shade of one of the lamp heads.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your lamp.

- **Cleaning:** Disconnect the lamp from power before cleaning. Use a soft, dry cloth to wipe down the metal surfaces. Avoid abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Always ensure the lamp is unplugged and the bulbs have cooled completely before attempting to replace them. Use only E26/E27 base bulbs with a maximum wattage of 40W.
- **Inspection:** Periodically check the power cord for any signs of damage or fraying. Ensure all connections remain secure.

7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

- **Lamp Does Not Light Up:**

- Ensure the power cord is securely plugged into a working outlet.
- Check if the light bulbs are screwed in correctly and are not burnt out. Replace if necessary.
- Verify that the touch switch is functioning.
- If assembly involved wiring, ensure all electrical connections are secure and properly insulated. *(Consult a licensed electrician if unsure.)*

• **Lamp is Unstable/Wobbly:**

- Check all threaded pipe connections, especially at the base, to ensure they are tightened securely.
- Ensure the lamp is placed on a flat, level surface.

• **Flickering Lights:**

- Ensure bulbs are fully screwed into their sockets.
- Try different bulbs to rule out faulty bulbs.
- Check for loose wiring connections. *(Consult a licensed electrician.)*

• **Parts Missing or Damaged Upon Arrival:**

- Contact LITFAD customer support immediately with your purchase details.

8. SPECIFICATIONS

Feature	Detail
Model	B0824N45MH
Brand	LITFAD
Style	Retro / Industrial / Antique
Material	Metal
Finish Type	Metallic (Bronze)
Fixture Height	60" (153 cm)
Fixture Width	22" (56 cm)
Product Dimensions	22"D x 22"W x 60"H
Item Weight	10.23 pounds (4.64 kg)
Number of Lights	2
Bulb Base	E26/E27
Bulb Type	LED/Incandescent/Fluorescent (Bulbs Not Included)
Wattage Per Bulb	Max 40W
Voltage	AC110-120V
Power Source	AC
Switch Type	Touch
Room Type	Living Room, Dining Room, Bedroom, Study, Hotel, Coffee Shop, Restaurant

9. WARRANTY AND SUPPORT

This LITFAD floor lamp comes with a **2-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical assistance, or inquiries regarding missing/damaged parts, please contact LITFAD customer support directly. Provide your purchase details, including the model number (B0824N45MH) and date of purchase, to expedite service.

You can typically find contact information for LITFAD through the retailer where you purchased the product or by visiting the official LITFAD store page online.

Note: Damage resulting from improper installation, misuse, or unauthorized modifications is not covered under warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0824N45MH>

More documents and user manuals: <https://manuals.plus/>