

Eurotime Youth Alarm Clock Instruction Manual

Model: 27148-03

1. PRODUCT OVERVIEW

The Eurotime Youth Alarm Clock, model 27148-03, is designed with a durable plastic casing and a plastic crystal for enhanced safety. It features a high-quality, silent quartz movement, ensuring no disruptive ticking sounds. The alarm clock includes a crescendo alarm function, which starts softly and gradually increases in volume. It also comes with a green light illumination and a snooze function, both activated by pressing the light/snooze button.



Figure 1: Front view of the Eurotime Youth Alarm Clock. The clock face features a vibrant construction site illustration with a yellow steamroller, crane, and buildings. The clock has a yellow frame and a white body.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Remove the cover by sliding or lifting it.
3. Insert one 1.5V AA alkaline battery, ensuring the correct polarity (+/-) as indicated inside the compartment. Rechargeable batteries are not suitable for this model.
4. Replace the battery compartment cover securely.



Figure 2: Back view of the alarm clock. This image shows the battery compartment at the bottom, two adjustment knobs (one for time, one for alarm), and the Eurotime branding.

3. OPERATING INSTRUCTIONS

3.1 Setting the Time

Rotate the time setting knob, typically located on the back of the clock, in either direction until the hour and minute hands display the correct time.

3.2 Setting the Alarm

Rotate the alarm setting knob, also on the back, until the alarm hand points to your desired alarm time. Ensure the alarm is activated using the ON/OFF switch on the side of the clock.

3.3 Using the Alarm and Snooze Function

- The alarm features a crescendo function, starting quietly and gradually increasing in volume to gently wake you.
- To activate the green light illumination, press the large button located on the top of the clock.
- To activate the snooze function, press the same light/snooze button on the top of the clock when the alarm sounds. The alarm will pause and sound again after approximately 5 minutes.





Figure 3: Side view of the alarm clock. This image highlights the ON/OFF switch for the alarm, located on the right side of the clock's body.

4. MAINTENANCE

4.1 Cleaning

To clean the alarm clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the plastic casing or crystal.

4.2 Battery Replacement

If the second hand stops moving or the alarm suddenly ceases to function, it is an indication that the battery needs to be replaced. Refer to section 2.1 for battery installation instructions.

5. TROUBLESHOOTING

- Alarm Not Sounding / Clock Not Functioning:** Approximately 90% of all functional errors can be resolved by using the correct battery. There are significant quality fluctuations among different battery manufacturers and brands. Please ensure you use a fresh, full alkaline battery for this product. Rechargeable batteries are not suitable for this model.
- Alarm Repetition Issue:** The alarm repetition time is approximately one hour. Within this hour, it is not technically possible to adjust the alarm without it triggering. For example, if the alarm is set for 7:00 AM but you initially set it at 7:00 PM, it will not function correctly for the morning alarm because an analog alarm clock does not differentiate between AM and PM. This behavior is typical for any analog alarm clock with a snooze function. If the alarm is first set at, for example, 9:00 PM and is intended to sound at 7:00 AM, it will function correctly as it is outside the one-hour alarm repetition window.

6. SPECIFICATIONS

Feature	Specification
Brand	Eurotime
Model Number	27148-03
Color	Steamroller (Construction Theme)
Dimensions (L x W x H)	9.5 x 4.5 x 9.5 cm
Weight	170 g
Material	Plastic

Special Features	Alarm, Silent Clock (Non-Ticking)
Display Type	Analog
Style	Youth
Power Source	Battery (1 x AA 1.5V, not included)

7. WARRANTY AND SUPPORT

For any questions or issues regarding the use or functionality of your Eurotime Youth Alarm Clock, please contact Eurotime customer support. We are committed to assisting you and resolving any concerns you may have.