

[Manuals.plus](#) /

- › [Sony](#) /
- › Sony PlayStation 4 (PS4) 1TB HDD Gaming Console Bundle User Manual

Sony CUH-1215A

Sony PlayStation 4 (PS4) 1TB HDD Gaming Console Bundle

Model: CUH-1215A - User Manual

1. INTRODUCTION

Welcome to the world of PlayStation 4. This bundle provides a powerful gaming experience with a 1TB hard drive, a DualShock 4 Wireless Controller, and three critically acclaimed games: *God of War*, *The Last of Us Remastered*, and *Horizon Zero Dawn: Complete Edition*. This manual will guide you through the setup, operation, and maintenance of your new console.



Image 1.1: The Sony PlayStation 4 1TB Console Bundle, showcasing the console, Dualshock 4 controller, and the included game titles.

2. WHAT'S IN THE BOX

Your Sony PlayStation 4 1TB HDD Gaming Console Bundle includes the following components:

- Sony PlayStation 4 (PS4) 1TB HDD Console (Jet Black)
- Dualshock 4 Wireless Controller
- *God of War* (Physical Game Disc)
- *The Last of Us Remastered* (Physical Game Disc)
- *Horizon Zero Dawn: Complete Edition* (Physical Game Disc)
- HDMI Cable
- Power Cable
- USB Charging Cable for Controller
- Mono Headset

PS4

Only On PlayStation®

PLAYSTATION® HITS

GOD OF WAR



Image 2.1: God of War game case.

PS4

Only On PlayStation®

PLAYSTATION® HITS

THE LAST OF US REMASTERED

OVER 200
GAME OF THE YEAR
AWARDS - 2014



Image 2.2: The Last of Us Remastered game case.

PS4

PLAYSTATION HITS

HORIZON
ZERO DAWN

COMPLETE EDITION

10/10

PS LIFESTYLE

9.5/10

PS UNIVERSE

9.3/10

IGN



GIANT BOMB

4.5/5

NERDIST



GUERRILLA

Image 2.3: Horizon Zero Dawn: Complete Edition game case.

3. SETUP GUIDE

3.1 Console Placement

Place your PS4 console on a flat, stable surface with adequate ventilation. Ensure there is enough space around the console for proper airflow to prevent overheating.

3.2 Connecting the Console

1. **Connect the HDMI Cable:** Insert one end of the HDMI cable into the HDMI OUT port on the back of the PS4 console and the other end into an HDMI input on your TV or display.
2. **Connect the Power Cable:** Plug the power cable into the AC IN connector on the back of the PS4 console, then plug the other end into a wall outlet.
3. **Connect to the Internet (Optional):** For a wired connection, connect an Ethernet cable from your router to the LAN port on the back of the PS4. For a wireless connection, you will set this up during the initial software setup.

3.3 Connecting the Dualshock 4 Wireless Controller

1. Connect the USB charging cable to the USB port on the front of the PS4 console.
2. Connect the other end of the USB charging cable to the micro USB port on the Dualshock 4 controller.
3. Press the PS button on the controller. The controller will pair with the console and begin charging. Once paired, you can disconnect the USB cable for wireless play.

3.4 Initial Software Setup

Upon first power-on, the PS4 will guide you through an initial setup process. This includes:

- Language selection
- Internet connection setup (Wi-Fi or wired)
- Date and time settings
- User account creation or login to PlayStation Network (PSN)

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- **To Power On:** Press the power button on the front of the console or the PS button on a paired controller.
- **To Power Off:** From the function screen, select **Power > Turn Off PS4**. Alternatively, press and hold the power button on the console for at least 7 seconds until the system beeps twice.
- **Rest Mode:** To put the console into Rest Mode (low power state for charging controllers, downloading updates), select **Power > Enter Rest Mode**.

4.2 Navigating the User Interface (XMB)

The PlayStation 4 uses the Cross Media Bar (XMB) for navigation. Use the directional buttons or left analog stick on your Dualshock 4 controller to move between icons. The XMB is divided into two main rows:

- **Function Screen (Top Row):** Accesses system features like Notifications, Friends, Trophies, Settings, Power, and PlayStation Store.
- **Content Area (Bottom Row):** Displays your installed games, applications, and media content.

4.3 Playing Games

- **Disc-Based Games:** Insert the game disc into the disc slot on the front of the console. The game icon will appear in the Content Area. Select it to start playing.
- **Digital Games:** Download games from the PlayStation Store. Once downloaded and installed, their icons will appear in the Content Area. Select an icon to launch the game.

4.4 Dualshock 4 Wireless Controller

The Dualshock 4 controller features:

- **Touch Pad:** A clickable, multi-touch pad for unique gameplay interactions.
- **Light Bar:** Changes color to indicate player number, health, or other in-game information.
- **SHARE Button:** Allows you to share screenshots and video clips of your gameplay.
- **OPTIONS Button:** Replaces the START/SELECT buttons, providing in-game menus and options.
- **Built-in Speaker and Headset Jack:** For immersive audio and communication.

5. MAINTENANCE

5.1 Cleaning the Console

Regularly clean the exterior of your PS4 console with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Ensure ventilation ports are free from dust and debris to maintain optimal performance.

5.2 Software Updates

Keep your PS4 system software updated to the latest version for improved performance, new features, and security enhancements. The console can be set to download updates automatically in Rest Mode.

5.3 Data Management

The 1TB hard drive provides ample storage. You can manage your storage by:

- Deleting unused games or applications.
- Backing up saved data to PlayStation Plus cloud storage (subscription required) or a USB storage device.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

- **No Power:** Ensure the power cable is securely connected to both the console and the wall outlet. Try a different power outlet.
- **No Display:** Verify the HDMI cable is securely connected to both the PS4 and your TV. Try a different HDMI port on your TV or a different HDMI cable. Ensure your TV is set to the correct HDMI input.
- **Controller Not Connecting:** Reconnect the controller to the console with the USB cable and press the PS button to re-pair. Ensure the controller is charged.
- **Disc Not Reading:** Ensure the game disc is clean and free of scratches. Insert the disc correctly with the label facing up.
- **System Freezes/Crashes:** Try restarting the console. If the issue persists, consider rebuilding the database from Safe Mode (turn off PS4, then press and hold power button until you hear two beeps).

6.2 Error Codes

If you encounter an error code, note the code (e.g., CE-XXXXX) and visit the official PlayStation Support website for detailed information and specific troubleshooting steps related to that code.

7. SPECIFICATIONS

Feature	Specification
Model Number	CUH-1215A

Hard Drive	1 TB HDD
Processor Brand	Sony
Graphics Coprocessor	AMD Radeon
Memory Speed	1600 MHz
Computer Memory Type	DDR SDRAM
Max Screen Resolution	3840 x 2160 pixels
Screen Resolution	1920 x 1080 pixels
Item Weight	7.28 pounds
Product Dimensions	19 x 15 x 5 inches
Color	Jet Black
Platform	PlayStation 4

8. WARRANTY AND SUPPORT

8.1 Warranty Information

For detailed warranty information regarding your Sony PlayStation 4 console and accessories, please refer to the warranty card included in your product packaging or visit the official Sony PlayStation website for your region.

8.2 Customer Support

If you require further assistance, technical support, or have questions not covered in this manual, please contact Sony PlayStation Customer Support through their official website or by phone. Have your console's model number (CUH-1215A) and serial number ready when contacting support.