

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [GUESS](#) /
- > [GUESS Bounce U1281L4 Women's Digital Watch Instruction Manual](#)

## GUESS Bounce

# GUESS Bounce U1281L4 Digital Watch Instruction Manual

Model: Bounce U1281L4

## 1. PRODUCT OVERVIEW

---

The GUESS Bounce U1281L4 is a multifunction digital watch designed for daily use. It features a clear digital display for easy readability, a backlight for low-light conditions, and essential functions such as a stopwatch, alarm, and countdown timer to assist with time management and fitness activities.



Figure 1: Front view of the GUESS Bounce U1281L4 Digital Watch, showcasing the digital display and pink silicone strap.

## 2. INITIAL SETUP

---

### 2.1. Setting Time and Date

1. Locate the "MODE" button (usually on the bottom left) and the "SET" button (usually on the top left).
2. Press the "MODE" button repeatedly until the time setting mode is displayed (e.g., flashing hours).
3. Use the "START/STOP" button (usually top right) to adjust the flashing value (hours, minutes, year, month, day).
4. Press the "SET" button to move to the next setting parameter.
5. Once all settings are complete, press the "MODE" button to exit the setting mode.

### 2.2. Adjusting the Strap

The silicone strap features a tang buckle clasp for secure and comfortable wear. Adjust the strap by inserting the buckle pin into the appropriate hole that provides a snug fit without being too tight. Ensure the watch is positioned correctly on your wrist for optimal comfort.



Figure 2: Close-up of the watch strap and tang buckle, illustrating the adjustment mechanism.



Figure 3: Side view of the watch, showing the control buttons for various functions.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Display Modes

Press the "MODE" button to cycle through different display modes: Time, Stopwatch, Alarm, and Countdown Timer.

### 3.2. Backlight Function

To illuminate the display in low-light conditions, press the "LIGHT" button (usually on the bottom right). The backlight will remain active for a few seconds.

### 3.3. Stopwatch

1. Navigate to the Stopwatch mode using the "MODE" button.
2. Press the "START/STOP" button to begin timing.
3. Press "START/STOP" again to pause the stopwatch.
4. Press the "RESET" button (usually top right, or "SET" in some models) to clear the stopwatch to zero.

### 3.4. Alarm

1. Enter Alarm mode by pressing the "MODE" button.
2. Press the "SET" button to activate the alarm setting. The hour digits will flash.
3. Use the "START/STOP" button to adjust the hour.
4. Press "SET" to move to minutes and adjust using "START/STOP".
5. Press "MODE" to exit alarm setting.
6. To turn the alarm ON/OFF, press the "START/STOP" button while in Alarm mode (without entering setting mode).

### 3.5. Countdown Timer

1. Switch to Countdown Timer mode using the "MODE" button.
2. Press the "SET" button to set the desired countdown time. Adjust hours, minutes, and seconds using the "START/STOP" button and "SET" to move between values.
3. Press "MODE" to exit setting.
4. Press "START/STOP" to begin the countdown.
5. The watch will emit an alert sound when the countdown reaches zero.

## 4. MAINTENANCE

---

### 4.1. Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch case, crystal, or silicone strap. For the silicone strap, mild soap and water can be used, ensuring it is thoroughly rinsed and dried.

### 4.2. Water Resistance

This watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid pressing any buttons while the watch is wet to prevent water ingress.

### 4.3. Battery Replacement

The watch uses 1 Lithium Ion battery (included). When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

## 5. TROUBLESHOOTING

---

- **Watch not displaying time or functions:** Check if the battery needs replacement. If recently replaced, ensure it was installed correctly.
- **Incorrect time/date:** Refer to Section 2.1 "Setting Time and Date" to reset the watch.
- **Buttons not responding:** Ensure the watch is not wet. If it is, dry it thoroughly. If the issue persists, contact customer support.
- **Alarm/Timer not sounding:** Verify that the alarm/timer function is activated and the volume (if adjustable) is set appropriately.

If you encounter issues not listed here or if troubleshooting steps do not resolve the problem, please contact customer support for assistance.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Name	Bounce
Model Number	U1281L4
Brand	GUESS
Movement Type	Quartz
Display Type	Digital
Case Diameter	41 Millimetres
Case Thickness	13.7 Millimetres
Band Material	Silicone
Band Colour	Pink
Clasp Type	Tang Buckle
Water Resistance Depth	30 Metres (3 ATM)
Crystal Material	Mineral Glass
Batteries	1 Lithium Ion battery (included)
Item Weight	113 g
Product Dimensions (LxWxH)	8 x 9 x 9 cm
UPC	091661507748

## 7. WARRANTY INFORMATION

---

This GUESS Bounce U1281L4 watch comes with a **1-year warranty against manufacturer defects**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from accidents, improper use, unauthorized repairs, or normal wear and tear.

For warranty claims or service, please retain your proof of purchase and contact the authorized service center or retailer.

## 8. CUSTOMER SUPPORT

---

For further assistance, technical support, or inquiries regarding your GUESS Bounce U1281L4 watch, please contact the manufacturer or authorized service provider.

- **Manufacturer:** Guess
- **Importer/Packer:** Timex Group India Limited
- **Address:** Plot No. 10, Industrial Area- Katha, Bhatoli Kalan, Baddi, Himachal Pradesh – 173205
- **GUESS Store:** [Visit the Official GUESS Store on Amazon.in](#)