

[Manuals.plus](#) /

› [Valera](#) /

› Valera Salon Exclusive Vario Pro 7.0 Professional Hair and Beard Trimmer User Manual

## Valera Vario Pro 7.0

# Valera Salon Exclusive Vario Pro 7.0 Professional Hair and Beard Trimmer User Manual

Model: Vario Pro 7.0 | Brand: Valera

## 1. INTRODUCTION

Thank you for choosing the Valera Salon Exclusive Vario Pro 7.0 Professional Hair and Beard Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY WARNINGS

**Always observe the following safety precautions to reduce the risk of electric shock, injury, or fire:**

- Read all instructions carefully before using the appliance.
- Keep the appliance away from water. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Do not immerse the appliance in water or any other liquid.
- Always unplug the appliance immediately after use and before cleaning.
- Do not use the appliance if the cord or plug is damaged, or if it is not working properly.
- Keep the appliance out of reach of children. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use only the charging cable and accessories provided by Valera.
- Do not attempt to repair the appliance yourself. Contact authorized service personnel for repairs.

## 3. PACKAGE CONTENTS

Your Valera Salon Exclusive Vario Pro 7.0 package should contain the following items:

- Valera Salon Exclusive Vario Pro 7.0 Trimmer
- Charging Cable

- Charging Stand with Accessory Compartment
- 5 Cutting Combs
- Oil Bottle for Blade Maintenance
- Cleaning Brush
- User Manual

## 4. PRODUCT OVERVIEW

The Valera Salon Exclusive Vario Pro 7.0 is a professional-grade hair and beard trimmer designed for precision and durability. It features an ergonomic design for comfortable handling and advanced cutting technology.



The Valera Vario Pro 7.0 trimmer shown on its charging stand, accompanied by various comb attachments.



A closer view of the Valera Vario Pro 7.0 trimmer, highlighting its blade and integrated length adjustment dial.

### Key Features:

- **Durablade:** Diamond-ground steel blades ensure absolute cutting precision and long-lasting sharpness. The blade set is detachable for easy rinsing under water.
- **Vario-Cut System:** Offers 30 different cutting lengths, ranging from 0.8 mm to 23 mm. This is achieved

through 5 integrated length settings on the trimmer and 5 clip-on cutting combs.


- **Powerful Motor:** Maintains full power even when the battery is low, ensuring consistent performance.
- **Rechargeable:** Features quick charging and provides up to 60 minutes of cordless operation. Can also be used corded.



Professional Powerful Motor



Diamond Ground Razor  
Blades

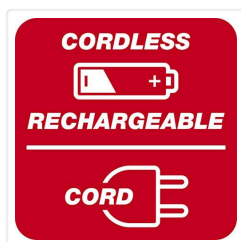

Cordless Rechargeable &  
Corded



Vario-Cut System



Universal Voltage (100-  
240V)

## 5. SETUP

### 5.1 Initial Charging

1. Before first use, fully charge the trimmer for approximately 60 minutes.
2. Connect the charging cable to the charging stand and plug it into a suitable power outlet (100-240V).

3. Place the trimmer into the charging stand. The charging indicator light will illuminate.
4. Once fully charged, the indicator light may change color or turn off, depending on the model.

## 5.2 Attaching Cutting Combs

1. Ensure the trimmer is switched off before attaching or detaching any comb.
2. Select the desired cutting comb based on the length you wish to achieve.
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Selecting Cutting Length

The Vario Pro 7.0 offers 30 cutting lengths:

- **Integrated Length Settings:** Use the dial on the trimmer body to select one of the 5 base lengths (e.g., 0.8mm, 1.2mm, 1.6mm, 2.0mm, 2.4mm).
- **Cutting Combs:** For longer lengths, attach one of the 5 provided cutting combs. Each comb corresponds to a specific range of lengths when combined with the integrated settings. Refer to the comb markings for guidance.

### 6.2 Trimming Hair and Beard

1. Ensure hair is clean and dry before trimming.
2. Select the desired cutting length using the integrated dial and/or by attaching a comb.
3. Switch on the trimmer.
4. For hair, start from the nape of the neck and move upwards against the direction of hair growth. For beard, trim against the direction of hair growth for an even cut.
5. Use slow, steady strokes. Do not force the trimmer through thick hair.
6. Regularly clear accumulated hair from the comb and blade during use to maintain optimal performance.
7. For detailing or very short cuts, remove the comb and use the integrated length settings. Exercise caution when using without a comb.
8. After use, switch off the trimmer.

## 7. MAINTENANCE

---

### 7.1 Cleaning the Blades

1. Ensure the trimmer is switched off and unplugged from the charger.
2. Detach the blade set by gently pushing it off the trimmer body.
3. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer head.
4. The detachable blade set can be rinsed under running water. Ensure it is completely dry before reattaching or oiling.
5. Do not rinse the main body of the trimmer under water.

### 7.2 Oiling the Blades

1. After cleaning and drying the blades, apply 1-2 drops of the provided oil to the blade teeth.

- 2. Switch on the trimmer for a few seconds to allow the oil to distribute evenly.
- 3. Wipe off any excess oil with a soft cloth.
- 4. Regular oiling (after every few uses) ensures optimal cutting performance and extends blade life.

7.3 Storage

Store the trimmer and its accessories in a dry place, away from direct sunlight and extreme temperatures. Keep it in its original packaging or the charging stand when not in use.

8. TROUBLESHOOTING

| Problem                   | Possible Cause                                      | Solution                                                                                                                     |
|---------------------------|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| Trimmer does not turn on. | Battery is discharged.<br>Not properly charged.     | Charge the trimmer fully. Ensure the charging cable and stand are correctly connected.                                       |
| Poor cutting performance. | Blades are dull, dirty, or not oiled. Hair buildup. | Clean and oil the blades as per maintenance instructions. Remove any hair buildup. If blades are dull, consider replacement. |
| Trimmer pulls hair.       | Blades are dirty or not oiled. Battery is low.      | Clean and oil the blades. Ensure the trimmer is fully charged.                                                               |
| Trimmer gets hot.         | Prolonged use. Blades are dirty or not oiled.       | Allow the trimmer to cool down. Clean and oil the blades.                                                                    |

9. SPECIFICATIONS

- **Model:** Vario Pro 7.0
- **Model Number:** 193076
- **Brand:** Valera
- **Manufacturer:** Valera
- **Color:** Black
- **Dimensions (L x W x H):** 0.1 x 0.1 x 0.1 cm (Product); 32 x 24.7 x 7.6 cm (Package)
- **Weight:** 402 grams (Product); 1.09 Kilograms (Package)
- **Power Source:** Rechargeable (Electric Cable for charging)
- **Special Feature:** Rechargeable, Cordless/Corded operation
- **Blade Material:** High Carbon Stainless Steel (Diamond Ground)
- **Cutting Lengths:** 0.8 mm to 23 mm (30 settings with Vario-Cut System)
- **Battery Autonomy:** Up to 60 minutes
- **Recommended Uses:** Hair and Beard Trimming
- **Target Audience:** Unisex-Adult
- **Universal Voltage:** 100-240V

10. WARRANTY AND SUPPORT

Valera products are manufactured to high-quality standards. For information regarding warranty coverage, service, or technical support, please refer to the warranty card included with your product or visit the official Valera website. Do not attempt to open or repair the device yourself, as this may void your warranty.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0825HLRX7>

More documents and user manuals: <https://manuals.plus/>