

[Manuals.plus](#) /

› [Spurtar](#) /

› Spurtar 60W 5000 Lumen Rechargeable LED Camping Lantern (Model LHS-017) Instruction Manual

Spurtar LHS-017

Spurtar 60W 5000 Lumen Rechargeable LED Camping Lantern Instruction Manual

Model: LHS-017

1. INTRODUCTION

Thank you for choosing the Spurtar 60W 5000 Lumen Rechargeable LED Camping Lantern. This portable and versatile lighting solution is designed for various outdoor and indoor activities, offering multiple lighting modes and a convenient power bank function. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.



Image 1.1: The Spurtar camping lantern providing illumination at a campsite.

2. PRODUCT OVERVIEW

The Spurtar LHS-017 is a powerful and compact LED lantern featuring a 60W output and up to 5000 lumens of brightness. It is equipped with a built-in rechargeable battery that also functions as an 8000 mAh power bank for charging mobile devices. The lantern offers five distinct lighting modes to suit various needs and includes a sturdy hanging hook for easy placement.



Image 2.1: Key components of the Spurtar Camping Lantern.

Key Features:

- **High Brightness:** Up to 5000 lumens (60W) for extensive illumination.
- **Multiple Lighting Modes:** 5 modes including High, Medium, Low, Slow Flash, and Fast Flash.
- **Rechargeable Battery:** Integrated long-lasting rechargeable battery.
- **Power Bank Function:** 8000 mAh capacity to charge mobile devices via USB.
- **Portable Design:** Compact with a built-in hanging hook for easy transport and placement.
- **Durable Construction:** Made from ABS plastic.

3. SETUP

3.1 Unboxing

1. Carefully remove the lantern and all accessories from the packaging.
2. Verify that all components are present: Spurtar Camping Lantern, USB charging cable.

3.2 Initial Charging

Before first use, fully charge the lantern. This ensures optimal battery performance and longevity.

1. Connect the provided USB charging cable to the lantern's charging port.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will show the charging status (e.g., red for charging, green for fully charged).
4. A full charge typically takes 4 to 5 hours.



4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Mode Selection

The lantern features a single power button to control its functions.

1. **To Power On:** Press the power button once. The lantern will turn on in the High Light mode.
2. **To Change Modes:** Press the power button repeatedly to cycle through the 5 lighting modes in the following order:
 - High Light
 - Middle Light
 - Low Light
 - Slow Flash (Emergency/Signal mode)
 - Fast Flash (Emergency/Signal mode)
3. **To Power Off:** After cycling through all five modes, pressing the button a sixth time will turn the lantern off.

5 Lighting Modes



☀ High Light



☀ Middle Light



☀ Low Light

• Slow Flash



• Fast Flash



Image 4.1: The five distinct lighting modes.

4.2 Using the Hanging Hook

The integrated metal hook allows for convenient hanging in various locations:

- Inside tents or shelters.
- On branches or ropes.
- Under car hoods for repair work.
- In workshops or garages.

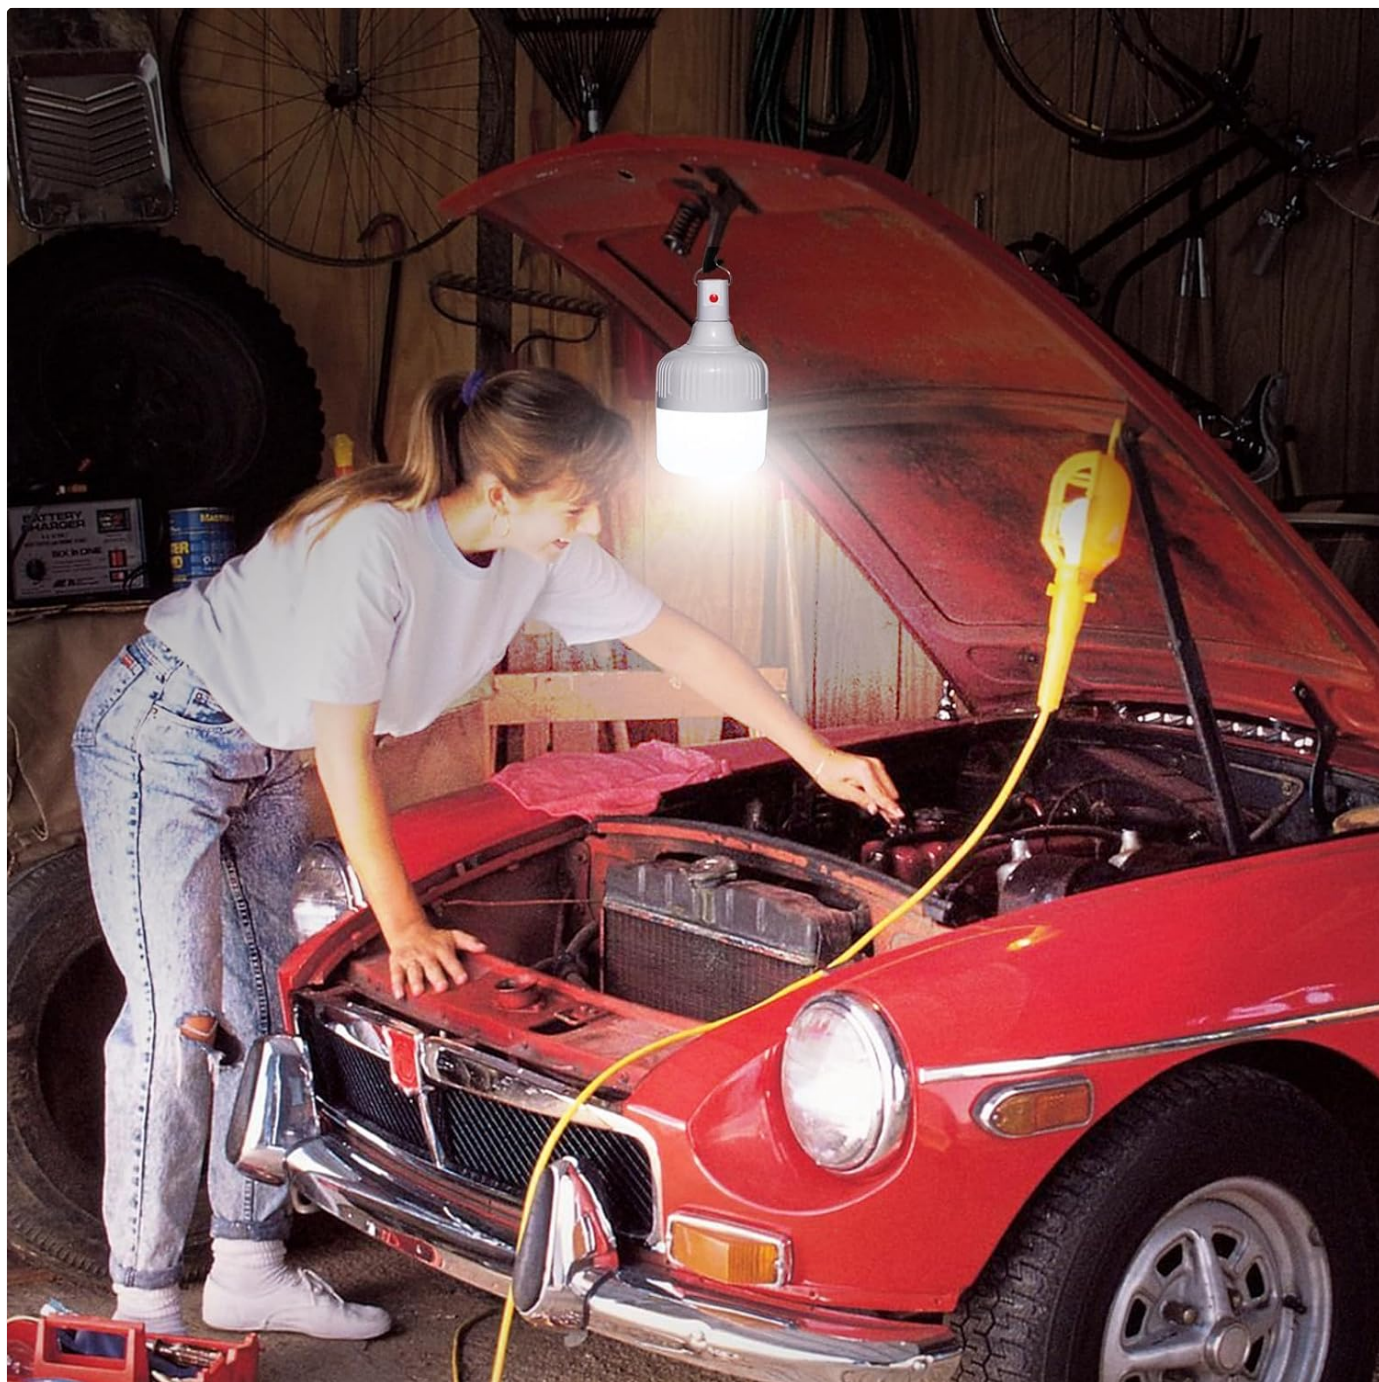


Image 4.2: Lantern used for car repair.

5. POWER BANK FUNCTION

The Spurtar lantern can also serve as an emergency power bank for your mobile devices.

1. Ensure the lantern has sufficient battery charge.
2. Connect your mobile device's charging cable to the USB output port on the lantern.
3. The lantern will begin charging your device.

This feature is ideal for emergencies or when away from traditional power sources.



Image 5.1: Using the lantern as a power bank.

6. MAINTENANCE

6.1 Cleaning

- Wipe the lantern with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as these can damage the plastic housing.
- Ensure the charging ports are clean and free of debris.

6.2 Battery Care and Storage

- For optimal battery life, fully charge the lantern at least once every three months if not in regular use.
- Store the lantern in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid completely draining the battery frequently, as this can reduce its overall lifespan. The integrated batteries are designed for over 10,000 recharge cycles.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Battery is depleted.	Charge the lantern fully (refer to Section 3.2).
Lantern does not charge.	Faulty USB cable or power adapter.	Try a different USB cable and power adapter. Ensure connections are secure.
Mobile device not charging from lantern.	Lantern battery is low or depleted.	Charge the lantern fully.
Mobile device not charging from lantern.	Incompatible charging cable or device.	Ensure your device and cable are compatible with standard USB charging.

8. SPECIFICATIONS

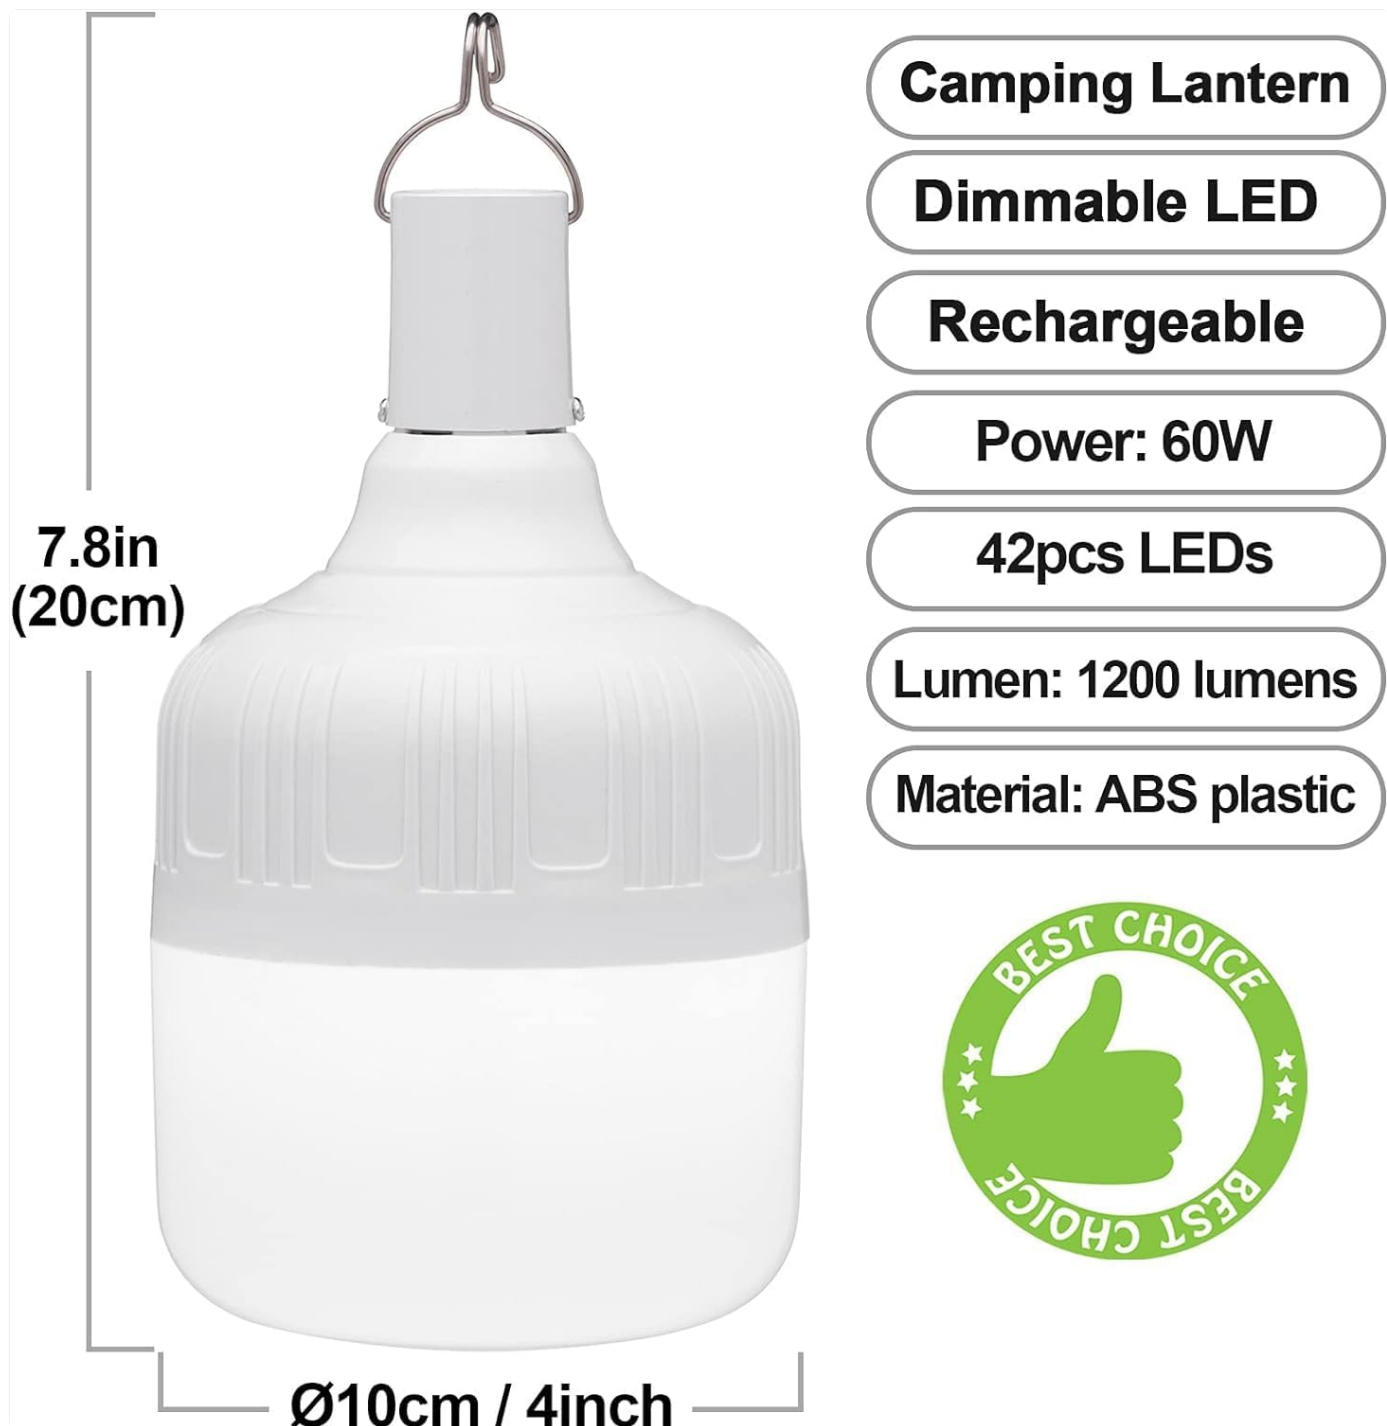


Image 8.1: Physical dimensions and key specifications.

Feature	Detail
Brand	Spurtar
Model Number	LHS-017
Product Dimensions (L x W x H)	20 x 10 x 10 cm
Weight	360 grams
Light Source Type	LED (Light Emitting Diode)
Wattage	60 Watts
Maximum Light Output	5000 Lumens

Feature	Detail
Number of LEDs	42
Power Source	Battery Powered
Battery Type	Lithium-ion
Number of Batteries	2 AA (included, likely internal equivalent)
Material	Plastic
Finish Type	Lacquered
Color	White
Water Resistance Level	Not Waterproof
Mounting Type	Ceiling Mount (via hook)
UPC	696177831426
GTIN	696177831426

9. SAFETY INFORMATION

- **Not Waterproof:** This lantern is not waterproof. Avoid exposure to rain, splashes, or immersion in water to prevent damage and electrical hazards.
- Do not disassemble or attempt to repair the lantern yourself. This may void the warranty and pose a safety risk.
- Keep out of reach of children.
- Do not stare directly into the LED light when it is on, as it can be very bright and may cause temporary vision impairment.
- Use only the provided or a certified USB cable for charging.
- Avoid exposing the lantern to extreme heat or open flames.

10. WARRANTY AND SUPPORT

Specific warranty information for the Spurtar LHS-017 lantern is not provided in the product details. For warranty claims, technical support, or further inquiries, please contact the manufacturer or your point of purchase directly. Please retain your proof of purchase for any warranty-related issues.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question