

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control Instruction Manual for Samsung BN59-01315B Series

Easytry123 BN59-01315B

Easytry123 Replacement Remote Control Instruction Manual

For Samsung BN59-01315B Series and Compatible Models

INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control. This remote is designed to function with various Samsung LED LCD HDTV models. Please review this manual to ensure proper setup and operation.

Compatible Samsung TV Models include:

- BN59-01315B
- UE43RU7100K
- UE43RU7100W
- BN59-01315D
- UA43RU7100W
- UE65RU7105K
- UE65RU7170S

Note: As a replacement remote, some advanced or specific functions of your original remote may not be fully supported. Ensure your TV model is listed above for compatibility.

SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the remote control with the battery cover detached, revealing the empty battery slots. This illustrates where to insert the AAA batteries.

OPERATING INSTRUCTIONS

This remote control operates using infrared technology. Ensure there is a clear line of sight between the remote and your television's IR receiver for optimal performance.

Basic Functions:

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the sound level.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute:** Silences the TV audio.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Home Button:** Accesses the TV's Smart Hub or main menu.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and selects options.
- **Return:** Goes back to the previous screen or menu.
- **Exit:** Exits the current menu or application.



Image: Front view of the remote control, displaying the full button layout including power, number pad, volume, channel, navigation, and special function buttons. This image helps identify each button's location and function.

MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Ensure the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's IR receiver.
 - Make sure the TV is powered on.
- **Limited Functionality:**
 - This is a replacement remote. Some advanced features or smart TV functions specific to your

original remote model may not be fully supported.

- Verify that your TV model is listed in the "Introduction" section for compatibility.

SPECIFICATIONS

Brand	Easytry123
Model Number	BN59-01315B (Compatible Series)
Compatible Devices	Samsung LED LCD HDTV Television
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design
Batteries Required	2 x AAA (not included)

SUPPORT

For further assistance or inquiries regarding this product, please contact the seller directly through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt support.