

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› [Universal Remote Control User Manual](#)

Easytry123 Universal Remote Control

Universal Remote Control User Manual

Model: Universal Remote Control (Compatible with JVC RM-C13G1H, RM-C14G, RM-C14G1H, RM-C15G, RM-C15G1H, RM-C18G, RM-C18G1H, RM-C18G1HNP, RM-C203)

Brand: Easytry123

1. INTRODUCTION

This manual provides essential information for the use and maintenance of your Easytry123 Universal Remote Control. This remote is designed as a direct infrared (IR) replacement for various JVC LCD LED HDTV TV models, including RM-C13G1H, RM-C14G, RM-C14G1H, RM-C15G, RM-C15G1H, RM-C18G, RM-C18G1H, RM-C18G1HNP, and RM-C203. It is intended to function immediately upon battery installation, without the need for complex programming, provided your original remote matches the appearance of this replacement.

Please ensure your original remote control is identical in appearance to the remote shown in this manual for guaranteed compatibility and full functionality. While designed as a direct replacement, some advanced or specific functions present on your original remote may not be fully replicated.

2. SPECIFICATIONS

- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Compatible Devices:** JVC LCD LED HDTV Televisions (Specific models listed in Introduction)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design, direct replacement functionality

3. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries for operation. Please follow these steps to install the batteries correctly:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery cover downwards or press the latch (if present) and lift to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Replace the battery cover by sliding it back into place until it clicks securely.



Figure 3.1: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process. Note the polarity markings inside the compartment.

Once batteries are installed, the remote control should be ready for use with your compatible JVC television.

4. BASIC OPERATION

This replacement remote control is designed to mimic the functions of your original JVC remote. Point the remote directly at your television's IR receiver for optimal performance. Below are common buttons and their general functions:





Figure 4.1: Front view of the Easytry123 Universal Remote Control, displaying the layout of all control buttons.

Common Button Functions

Button Name	Function
POWER	Turns the television on or off.
INPUT / SOURCE	Cycles through available input sources (e.g., HDMI, AV, Component).
CH +/- (Channel Up/Down)	Changes the television channel up or down.
VOL +/- (Volume Up/Down)	Adjusts the television's volume level.
MUTE	Mutes or unmutes the television's audio.
MENU	Opens the television's on-screen menu.

Button Name	Function
Navigation Buttons (Up, Down, Left, Right, OK)	Used to navigate through menus and confirm selections.
Number Buttons (0-9)	Directly enter channel numbers.
BACK / EXIT	Returns to the previous screen or exits the current menu.
INFO / GUIDE	Displays program information or the electronic program guide.

For specific functions not listed, refer to your television's original user manual, as this remote is designed to replicate the original's functionality.

5. TROUBLESHOOTING

If your remote control is not functioning as expected, please try the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old or depleted batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the television's IR receiver.
 - Ensure you are pointing the remote directly at the television.
- **Certain Functions Not Working:**
 - This remote is a direct replacement. If your original remote had unique or advanced features, this replacement may not support them fully.
 - Verify that your television model is listed as compatible. If your model is not included in the product title, functionality may be limited or non-existent.

6. CARE AND MAINTENANCE

To ensure the longevity and proper functioning of your remote control, please observe the following:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical agents, as these can damage the surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Removal:** If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal circuitry.

7. WARRANTY AND SUPPORT

This product is provided as a replacement remote control. Specific warranty details are typically handled by the seller at the point of purchase. For any questions, concerns, or issues regarding the functionality or compatibility of this remote control, please contact the seller directly through your purchase platform.

It is important to verify that your current remote matches the appearance of this replacement. If your model is not explicitly listed in the product title or if you have doubts, it is recommended to contact the seller before purchase to confirm compatibility.

Related Documents - Universal Remote Control

	<p><u>Universal Remote Control Code List and Setup Guide</u></p> <p>Comprehensive remote control code list for universal remote programming, including setup instructions and codes for various TV, DVD, VCR, Audio, and AUX devices from numerous brands.</p>
	<p><u>Universal Remote Control Programming Guide</u></p> <p>Comprehensive guide for programming a universal remote control to operate set-top boxes and televisions, including brand code, auto search, and manual search methods. Features instructions for battery installation and volume priority settings.</p>
	<p><u>Universal UR2-211 Easy Clicker Remote Control Operating Manual Setup & Programming Guide</u></p> <p>Operating manual for the Universal UR2-211 Easy Clicker remote control. Provides instructions on setup, button functions, battery replacement, and programming for various devices like TVs, cable boxes, and IPTV set-top boxes. Includes quick setup, manual programming, and auto-search methods.</p>
	<p><u>UR2-211 Universal Remote Control Operating Manual</u></p> <p>Comprehensive operating manual for the UR2-211 Universal Remote Control, detailing setup, programming methods (Quick Set-Up, Manual, Auto Search), and device code tables for various brands of cable boxes and TVs.</p>
	<p><u>Universal Remote Control MX-350 Owner's Manual</u></p> <p>User manual for the Universal Remote Control MX-350, providing step-by-step instructions for setup, programming, and advanced features to automate your home entertainment system.</p>
	<p><u>Universal Remote Control UR2-211: Operating Manual and Programming Guide</u></p> <p>Comprehensive guide for the Universal Remote Control UR2-211, detailing its features, button functions, battery replacement, and step-by-step programming instructions for various audio-visual devices. Includes setup code tables for popular brands.</p>