

## ForeverPRO W10350906

# ForeverPRO WPW10350906 Appliance Switch Dor User Manual

Brand: ForeverPRO

Model: W10350906

## INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of the ForeverPRO WPW10350906 Appliance Switch Dor. This part is a replacement component designed for various Whirlpool appliances. Please read this manual thoroughly before attempting any installation or repair to ensure safety and proper function.

## PRODUCT OVERVIEW

The ForeverPRO WPW10350906 Appliance Switch Dor is a high-quality replacement part engineered to meet or exceed OEM specifications. It is designed to replace part numbers PS11753511 and W10350906.

### Key Features:

- Direct replacement for Whirlpool WPW10350906 Switch Dor.
- PRO Grade Premium quality.
- Designed for compatibility with a wide range of Whirlpool appliances.

### Compatibility:

This switch is compatible with many Whirlpool, Maytag, KitchenAid, Jenn-Air, Amana, Magic Chef, Admiral, and Norge appliances. Some compatible models include, but are not limited to:

NED5700BW0, NED5800DW0, NGD5700BW0, NGD5800DW0, NGD5800DW1

YNED5700BW0, YNED5800DW0, YNED5800DW1, YNED5800DW2

7MWED81HEDW0, 7MWED90HEFW0, 7MWED90HEFW1, 7MWED90HEFW2

7MWGD72HEDW0, 7MWGD72HEDW1, 7MWGD75HEFW0, 7MWGD81HEDW0

WED70HEBW0, WED71HEBW0, WED71HEDW0, WED71HEDW1, WED72HEDW0, WED72HEDW1

WED7505FW0, WED7540FW1, WED7590FW0, WED7590FW1, WED75HEFW0, WED75HEFW1  
WED7990FW0, WED80HEBC0, WED80HEBW0, WED81HEDW0, WED81HEDW1  
WED8540FW0, WED8540FW1, WED8540FW2, WED85HEFC0, WED85HEFC1, WED85HEFC2  
WED85HEFW0, WED85HEFW1, WED85HEFW2, WED86HEBC0, WED86HEBW0  
WED8740DC0, WED8740DC1, WED8740DW0, WED8740DW1, WED87HEDC0, WED87HEDC1  
WED87HEDW0, WED87HEDW1, WED88HEAC0, WED88HEAC1, WED88HEAW0, WED88HEAW1  
WED90HEFC0, WED90HEFC1, WED90HEFC2, WED90HEFW0, WED90HEFW1, WED90HEFW2  
WED9290FC0, WED9290FW0, WED92HEFBD0, WED92HEFBD1, WED92HEFBD2  
WED92HEFC0, WED92HEFC1, WED92HEFC2, WED92HEFU0, WED92HEFU1, WED92HEFU2  
WED92HEFW0, WED92HEFW1, WED92HEFW2



*This image displays the electrical connector of the WPW10350906 Appliance Switch Dor, showing the three metal prongs designed for secure electrical connection within the appliance.*

## SAFETY INFORMATION

---

**WARNING:** Before attempting any repair or installation, always disconnect the appliance from its power source by unplugging it or turning off the circuit breaker. Failure to do so can result in serious injury or death from electrical shock.

- Wear appropriate personal protective equipment (PPE), such as gloves and safety glasses.
- If you are unsure about any step of the installation process, it is highly recommended to consult a qualified appliance repair technician.
- Ensure all connections are secure and properly insulated after installation.
- Keep children and pets away from the work area.

## SETUP AND INSTALLATION

---

The installation of the WPW10350906 Appliance Switch Dor typically involves replacing an existing faulty switch. The exact steps may vary depending on your specific appliance model. Always refer to your appliance's service manual for detailed, model-specific instructions.

### General Installation Steps:

1. **Disconnect Power:** Unplug the appliance from the wall outlet or turn off the corresponding circuit breaker at your home's electrical panel. Verify that power is off before proceeding.

2. **Access the Switch:** Depending on your appliance, you may need to remove panels, the top, or the front of the unit to gain access to the existing door switch. Use appropriate tools and take care not to damage other components.
3. **Document Connections:** Before disconnecting the old switch, take photos or make a diagram of the wiring connections. This will help ensure correct reassembly.
4. **Remove Old Switch:** Carefully disconnect the wires from the old switch. There may be clips, screws, or tabs holding the switch in place. Release these to remove the faulty component.
5. **Install New Switch:** Position the new ForeverPRO WPW10350906 switch in the same location as the old one. Secure it using the original mounting hardware or clips.
6. **Connect Wiring:** Reconnect the wires to the new switch according to your documentation (photos/diagram). Ensure all connections are firm and correct.
7. **Reassemble Appliance:** Replace any panels or covers that were removed to access the switch. Ensure all screws and fasteners are tightened.
8. **Restore Power:** Plug the appliance back into the wall outlet or turn on the circuit breaker.
9. **Test Functionality:** Test the appliance to ensure the new door switch is functioning correctly. For a dryer, this typically involves opening and closing the door to see if the drum light turns on/off and if the dryer operates when the door is closed.

## OPERATING INSTRUCTIONS

---

The ForeverPRO WPW10350906 Appliance Switch Dor is a passive component that facilitates the safe operation of your appliance. Its function is to detect the open or closed state of the appliance door and communicate this information to the appliance's control system. There are no direct user operating controls for this part.

Once correctly installed, the switch will automatically engage when the appliance door is closed, allowing the appliance to operate, and disengage when the door is open, typically stopping operation for safety.

## MAINTENANCE

---

The ForeverPRO WPW10350906 Appliance Switch Dor is designed to be maintenance-free. No regular cleaning, lubrication, or adjustment is required for the switch itself.

To ensure the longevity of the switch and the appliance, it is advisable to:

- Keep the area around the appliance door clean and free of debris that might obstruct the switch mechanism.
- Avoid slamming the appliance door, as this can put undue stress on the switch and its mounting.

## TROUBLESHOOTING

---

If your appliance is not functioning correctly after replacing the door switch, consider the following troubleshooting steps:

- **No Power to Appliance:** Ensure the appliance is properly plugged in and the circuit breaker has not tripped.
- **Incorrect Wiring:** Double-check all electrical connections to the new switch against your documentation. Loose or incorrect wiring is a common issue.
- **Switch Not Seating Properly:** Verify that the new switch is securely mounted and properly aligned with the door strike mechanism. The door must fully engage the switch when closed.
- **Door Latch Issue:** Inspect the door latch or strike on the appliance door itself. If it is bent, broken, or

misaligned, it may not properly activate the door switch.

- **Other Appliance Faults:** If the switch appears to be installed correctly and is functioning, the issue might lie with another component of the appliance (e.g., motor, thermal fuse, control board). In such cases, professional diagnosis is recommended.

If troubleshooting does not resolve the issue, it is advisable to contact a qualified appliance repair technician.

## SPECIFICATIONS

<b>Manufacturer</b>	ForeverPRO
<b>Part Number</b>	FP-WPW10350906
<b>Item Model Number</b>	W10350906
<b>Replaces Part Numbers</b>	PS11753511, W10350906
<b>Compatibility</b>	Whirlpool, Maytag, KitchenAid, Jenn-Air, Amana, Magic Chef, Admiral, Norge, Roper appliances

## WARRANTY AND SUPPORT

ForeverPRO stands behind the quality of its products. This product comes with a "No Questions Asked Money Back Guarantee."

For further support or inquiries, please refer to the contact information provided with your purchase or visit the official ForeverPRO website. ForeverPRO is a proud USA-based company.