

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool AMW 4900/IX Built-in Microwave Oven Instruction Manual

Whirlpool AMW4900IX

Whirlpool AMW 4900/IX Built-in Microwave Oven Instruction Manual

Model: AMW 4900/IX

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installing and using the appliance. Keep this manual for future reference. The manufacturer is not responsible for any damage resulting from incorrect installation or improper use.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly earthed.
- Always use microwave-safe cookware.

2. PRODUCT OVERVIEW

The Whirlpool AMW 4900/IX is a built-in microwave oven designed for seamless integration into your kitchen cabinetry. It offers efficient microwave cooking with a user-friendly interface.



Figure 1: Whirlpool AMW 4900/IX Built-in Microwave Oven with key dimensions (Height: 38.2cm, Width: 59.5cm, Depth: 32cm).

Key features include:

- **Capacity:** 22 Liters
- **Microwave Power:** 750 Watts
- **Turntable Diameter:** 280 mm
- **Power Levels:** 4 adjustable levels
- **Material:** Stainless steel and Ceramic interior



Figure 2: The Whirlpool AMW 4900/IX microwave seamlessly integrated into a modern kitchen setting.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the microwave oven from its packaging. Inspect the appliance for any signs of damage. If any damage is found, do not install or operate the oven and contact your retailer.

3.2 Placement and Electrical Connection

Ensure the installation location meets the required dimensions for a built-in appliance. The electrical outlet should be easily accessible after installation. The appliance requires a 220 Volt power supply.

3.3 Installation Process

Installation and electrical connections must be carried out by a qualified technician. Refer to the detailed installation instructions provided with the trim kit for your specific model. The following video provides a general overview of the installation process for Whirlpool built-in microwave trim kits.

Your browser does not support the video tag.

Video 1: Whirlpool Built-in Microwave Trim Kit Installation Guide. This video demonstrates the steps for installing a Whirlpool microwave with a trim kit into kitchen cabinetry, including securing the frame and connecting power.

4. OPERATING INSTRUCTIONS

The microwave oven features an intuitive control panel for easy operation.

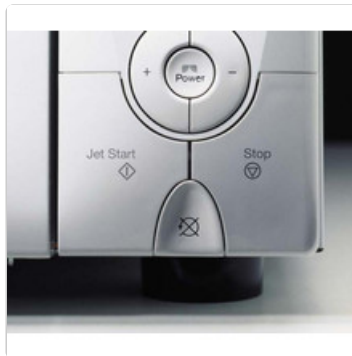


Figure 3: Detailed view of the control panel with buttons for power, time, and special functions.

4.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Select the desired power level (e.g., 750W for full power) using the power setting controls.
4. Set the cooking time using the timer controls.
5. Press the Start button to begin cooking.

4.2 Defrost Function

The defrost function allows you to thaw frozen food efficiently.

1. Place the frozen food on the turntable.
2. Select the defrost function.

3. Enter the weight of the food or the desired defrost time. The oven will automatically calculate the appropriate defrosting time and power level.
4. Press the Start button. The oven may pause during defrosting to prompt you to turn or separate the food.

4.3 Setting the Clock

To set the clock, refer to the specific instructions in your full user manual, typically involving pressing a clock button and using the time adjustment controls.

5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.



Figure 4: Interior view of the microwave oven, showing the turntable and cavity walls.

5.1 Cleaning the Interior

- Clean the oven cavity after every use with a damp cloth. For more thorough cleaning, use a mild detergent.
- Remove the turntable and its support for separate cleaning. Wash them in warm, soapy water or in a dishwasher.
- Do not use abrasive cleaners or sharp metal scrapers to clean the oven door glass, as they can scratch the surface, which may result in shattering of the glass.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its finish.

6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door securely; Replace fuse or reset circuit breaker.
Food not heating	Incorrect power level or cooking time set; Microwave-safe cookware not used.	Adjust power/time; Use appropriate cookware.
Turntable not rotating	Turntable not correctly placed; Obstruction under turntable.	Ensure turntable is on its support; Remove any obstructions.

Problem	Possible Cause	Solution
Unusual noise during operation	Food container touching oven walls; Turntable not properly seated.	Reposition food container; Re-seat turntable.

If the problem persists after checking these solutions, please contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	AMW4900IX
Brand	Whirlpool
Capacity	22 Liters
Microwave Power	750 Watts
Voltage	220 Volts
Product Dimensions (H x W x D)	38.2 x 59.5 x 32 cm
Turntable Diameter	280 mm
Material	Stainless Steel, Ceramic
Special Features	Turntable
Energy Efficiency	A to G
Product Weight	12 kg

8. WARRANTY AND SUPPORT

This Whirlpool appliance comes with a standard manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Whirlpool website. For technical assistance, spare parts, or service requests, please contact Whirlpool Customer Service. Have your model number (AMW4900IX) and serial number ready when contacting support. You can find more information and support on the [Whirlpool Brand Store](#).