

[Manuals.plus](#) /

› [KLARSTEIN](#) /

› Klarstein CombiWave Microwave Oven Instruction Manual

KLARSTEIN CombiWave

Klarstein CombiWave Microwave Oven Instruction Manual

Model: CombiWave

INTRODUCTION

Thank you for choosing the Klarstein CombiWave Microwave Oven. This appliance combines microwave, grill, and combination cooking functions, offering versatility for your kitchen needs. With a generous 43-liter capacity, 1000 watts of microwave power, and 1300 watts of grill power, it is designed for efficient cooking, reheating, and grilling. This manual provides essential information for safe operation, installation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.



Image: Front view of the Klarstein CombiWave Microwave Oven, showcasing its stainless steel finish and control panel.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic safety precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (e.g., bent), hinges and latches (e.g., broken or loosened), or door seals and sealing surfaces.
- Only qualified service personnel should adjust or repair the oven.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.

- Do not use corrosive chemicals or vapors in this appliance.
- Ensure proper ventilation around the appliance.
- Always use oven mitts when handling hot dishes.
- Never operate the oven when empty.
- Metallic containers for food and beverages are not allowed during microwave cooking.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. If any damage is observed, do not operate the oven and contact customer service.

Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in the oven.
- Ensure adequate ventilation. Maintain a minimum clearance of 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides. Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.
- Do not place the oven in a cabinet unless specifically designed for built-in installation (this model is designed for countertop use).

Electrical Connection

- Plug the power cord into a properly grounded electrical outlet (230-240V ~ 50Hz).
- Do not use extension cords or adapters.

Turntable and Grill Rack Assembly

Place the roller ring in the center of the oven cavity. Position the glass turntable securely on top of the roller ring. For grill functions, place the metal grill rack on the glass turntable. Ensure the turntable rotates freely.

OPERATING INSTRUCTIONS

Control Panel Overview

The Klarstein CombiWave features an intuitive LED display and push-button controls for easy operation. The display shows time, power settings, and program indicators. Specific buttons are dedicated to functions like Microwave, Grill, Defrost, Auto Programs, Start, and Stop/Cancel.

Setting the Clock (Initial Setup)

Upon first plug-in or after a power outage, the display may show "0:00". To set the clock:

1. Press the "Clock" button (if available, otherwise consult specific button for time setting).
2. Use the number buttons or turn the dial to set the hour.
3. Press "Clock" again.
4. Use the number buttons or turn the dial to set the minutes.
5. Press "Clock" to confirm.

Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable. Close the door.
2. Press the "Microwave" button.
3. Select the desired power level (11 settings from 10% to 100%) by repeatedly pressing the "Microwave" button or using the power level selection control.
4. Use the time setting dial or buttons to set the cooking time (up to 60 minutes).
5. Press "Start" to begin cooking.

Quick Start Function: For immediate cooking at 100% power, simply press the "Start" button. Each press adds 30 seconds of cooking time.

Grill Function

The grill function is ideal for browning and crisping food. Use the provided metal grill rack for best results.

1. Place food on the grill rack, which should be on the glass turntable. Close the door.
2. Press the "Grill" button.
3. Use the time setting dial or buttons to set the grilling time.
4. Press "Start" to begin grilling.

Combination Cooking (Microwave + Grill)

This function combines microwave energy with grilling for faster cooking and browning.

1. Place food on the grill rack. Close the door.
2. Press the "Combi" button (or relevant button for combination mode). There may be different combi modes (e.g., C-1, C-2). Select the desired mode.
3. Use the time setting dial or buttons to set the cooking time.
4. Press "Start" to begin combination cooking.

Defrost Function

The defrost function allows you to thaw food by weight or time.

1. Place the frozen food in a suitable container on the turntable. Close the door.
2. Press the "Defrost" button.
3. Select defrost by weight or time (if applicable) and adjust the value using the dial or buttons.
4. Press "Start" to begin defrosting.

Automatic Programs

The oven features 8 automatic programs for convenient cooking of common food items. Refer to the specific program chart (not provided in this manual) for details on each program.

1. Place food in the oven. Close the door.
2. Press the "Auto Menu" or "Program" button.
3. Turn the dial or press the corresponding number button to select the desired program.
4. Press "Start" to begin the automatic program.

Child Safety Lock

To prevent unintended operation, especially by children, activate the child safety lock.

- **To activate:** Press and hold the "Stop/Cancel" button for approximately 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the "Stop/Cancel" button again for approximately 3 seconds. The lock indicator will disappear.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the efficient operation and extend the lifespan of your microwave oven.

- **Before Cleaning:** Always unplug the oven from the power outlet.
- **Oven Interior:** Wipe the interior cavity after each use with a damp cloth and mild detergent. For stubborn stains, boil a cup of water with lemon juice in the oven for a few minutes to loosen residue, then wipe clean.
- **Glass Turntable and Roller Ring:** These can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Oven Exterior:** Clean the exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Door and Door Seals:** Keep the door and door seals clean to ensure proper closure and safe operation. Wipe with a damp cloth.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Child lock activated; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Deactivate child lock (hold "Stop/Cancel" for 3 seconds); Check household fuse or reset circuit breaker.
Food not heating	Door not closed properly; Incorrect cooking time or power level set; Food container not microwave-safe.	Ensure door is closed; Adjust cooking time and power level; Use microwave-safe cookware.
Turntable not rotating	Turntable or roller ring not correctly placed; Obstruction under turntable.	Re-position turntable and roller ring; Remove any obstructions.
Excessive steam inside oven	High moisture content in food.	This is normal for foods with high moisture. Wipe the interior after use.

SPECIFICATIONS

Feature	Detail
Brand	KLARSTEIN

Feature	Detail
Model Name	CombiWave
Capacity	43 Liters
Microwave Output Power	1000 Watts
Microwave Consumption	1500 Watts
Grill Power	1300 Watts
Power Levels	11 (10% to 100%)
Automatic Programs	8
Voltage	230-240 V ~ 50 Hz
Max. Warm-up Time	60 minutes
External Dimensions (W x H x D)	Approx. 55.3 x 31.1 x 48.5 cm
Internal Dimensions (W x H x D)	Approx. 40 x 25 x 43.2 cm
Glass Turntable Diameter	Approx. 30.5 cm
Weight	Approx. 18.3 kg
Material	Stainless Steel
Special Features	Defrost function, LED display, Child safety lock

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Klarstein website. If you require technical assistance or have questions regarding your Klarstein CombiWave Microwave Oven, please contact Klarstein customer support. Contact details can typically be found on the manufacturer's website or in your purchase invoice.
Manufacturer: KLARSTEIN

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question