

[Manuals.plus](#) /

> [Maegoo](#) /

> Maegoo Wireless Controller for Nintendo Switch User Manual Model AN12-1117-SW

Maegoo AN12-1117-SW

Maegoo Wireless Controller for Nintendo Switch User Manual

Model: AN12-1117-SW

1. PRODUCT OVERVIEW

The Maegoo Wireless Controller is designed for use with Nintendo Switch and Switch Lite consoles. It features Bluetooth connectivity, dual motor vibration, 6-axis gyro somatosensory, and a Turbo function for an enhanced gaming experience.



Image 1: Maegoo Wireless Controller for Nintendo Switch.



Image 2: Maegoo Switch Pro Controller highlighting Dual Vibration and Gyro Sensor features.

Key Features:

- **Wireless Bluetooth Connectivity:** Seamless connection to Nintendo Switch and Switch Lite.
- **Dual Motor Vibration:** Provides immersive haptic feedback during gameplay.
- **6-Axis Gyro Somatosensory:** Supports motion control for compatible games.
- **Turbo Function:** Allows for rapid, repeated button presses.
- **Ergonomic Design:** Comfortable grip for extended gaming sessions.
- **Rechargeable Battery:** Built-in 500mA lithium battery for long playing time.
- **Multi-Controller Support:** Connect up to four controllers simultaneously.

Note: This controller does not support NFC or console wake-up functions.

2. CONTROLLER LAYOUT

Familiarize yourself with the buttons and indicators on your Maegoo Wireless Controller.



Image 3: Detailed diagram of the Maegoo Controller's button layout and functions.

- **Turbo Button:** Activates/deactivates Turbo function.
- **Menu-Selection Buttons (+/-):** For in-game menu navigation.
- **Home Button:** Returns to the Switch Home menu.
- **Capture Button:** Takes screenshots.
- **L/R Sticks:** Analog joysticks for movement and camera control.
- **D-pad:** Directional pad for precise input.
- **Action Buttons (A, B, X, Y):** Primary game input buttons.
- **LED Indicators (1, 2, 3, 4):** Show connection status and player number.
- **LT/RT (Triggers):** Shoulder buttons.
- **ZL/ZR (Bumpers):** Shoulder buttons.
- **Reset Button:** Small button on the back for resetting the controller.

3. SETUP AND CONNECTION

3.1 First-Time Connection

1. Power on your Nintendo Switch console.
2. From the Switch Home menu, select "Controllers".
3. Then, select "Change Grip / Order".
4. Press and hold the **HOME** button on the Maegoo controller for 5 seconds.
5. The four LED indicators on the controller will blink rapidly. Once successfully connected, LED 1 will remain steadily lit.

3.2 Subsequent Connections

1. From any page on your Nintendo Switch, simply press the **HOME** button on the Maegoo controller.
2. The four LED indicators will blink slowly. Upon successful reconnection, LED 1 will remain steadily lit.

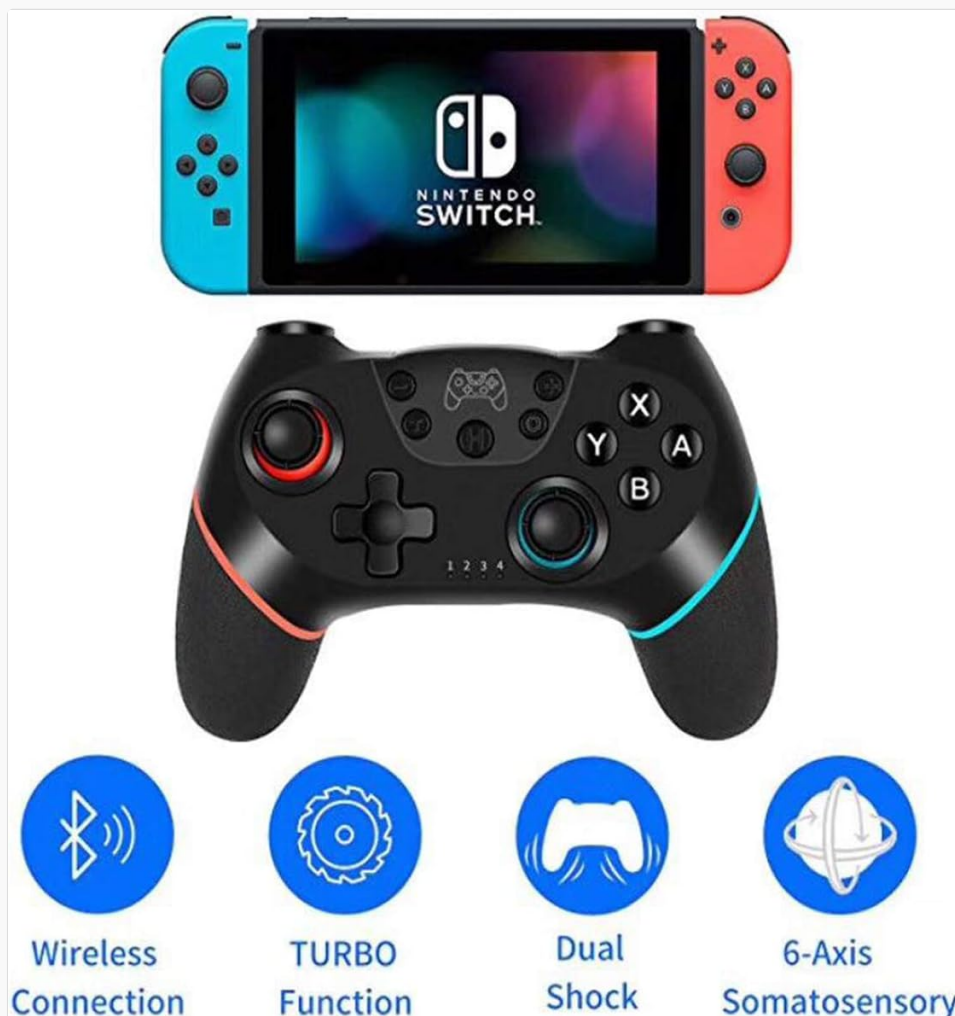


Image 4: Maegoo Controller connected to a Nintendo Switch, illustrating its core features.

The stable connection distance for the controller is approximately 10 meters in a barrier-free environment.

4. OPERATING INSTRUCTIONS

4.1 Charging the Controller

The controller features a built-in 500mA rechargeable lithium battery. Use the provided Type-C charging cable to charge the device.

- **Charging when unconnected to Switch:** All four LED indicators will blink slowly.
- **Charging when connected to Switch:** The matched LED indicator (e.g., LED 1 if it's Player 1) will blink slowly.

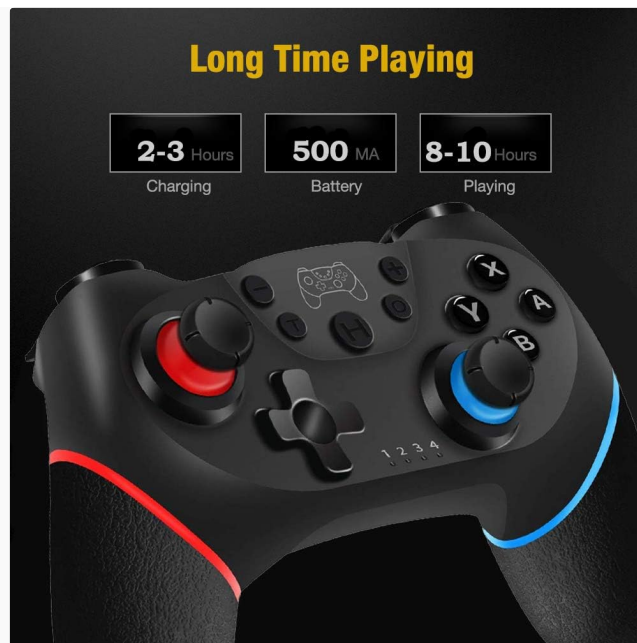


Image 5: Charging and battery life information for the Maegoo Controller.

Important: The controller can be used normally while charging. Do not use a USB charger with a current greater than 1A.

4.2 Using the Turbo Function

1. To activate Turbo, press and hold any action button (A, B, X, Y, L, R, ZL, ZR).
2. While holding the action button, press the **Turbo** button once. The Turbo function is now active for that action button.
3. To deactivate Turbo, press the **Turbo** button again while holding the action button.



5. MAINTENANCE

To ensure the longevity and optimal performance of your Maegoo Wireless Controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Always use the provided Type-C cable and a compatible USB power adapter (not exceeding 5V/1A) for charging. Avoid overcharging.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts.



Image 7: Close-up view of the controller's non-slip grips and 360-degree analog sticks.

6. TROUBLESHOOTING

If you encounter issues with your Maegoo Wireless Controller, please refer to the following common solutions:

- **Controller not connecting:** Ensure the controller is charged. Repeat the first-time connection steps (Section 3.1). Make sure the Switch console is updated to the latest firmware.
- **Buttons unresponsive:** Check if the controller is charged. Try resetting the controller by pressing the small reset button on the back with a thin object (e.g., a paperclip).
- **Vibration not working:** Ensure the vibration setting is enabled in your Nintendo Switch system settings and within the game you are playing.
- **Charging issues:** Verify that the Type-C cable is securely connected to both the controller and the power source.

Try a different USB port or power adapter. Ensure the adapter does not exceed 1A output.

- **Controller disconnects frequently:** Ensure you are within the 10-meter operating range and there are no significant obstructions between the controller and the Switch console. Reduce wireless interference from other devices.

For persistent issues or specific calibration concerns, please contact Maegoo customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	AN12-1117-SW
Connectivity	Bluetooth
Compatible Devices	Nintendo Switch, Switch Lite
Battery Capacity	500mA Lithium Ion
Charging Time	2-3 hours
Playing Time	6-8 hours
USB Input Voltage	5V
USB Input Current	350mA
Controller Weight	200g
Controller Dimensions	157mm x 110mm x 57mm
Material	ABS
Number of Buttons	16

8. WARRANTY AND SUPPORT

The Maegoo Wireless Controller comes with a**3-year warranty**.

For any questions regarding connection, calibration, or other usage issues, please do not hesitate to contact Maegoo customer support. We are committed to providing assistance within 24 hours.



Image 8: Maegoo controllers available in various colors.

© 2023 Maegoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0828S617Q>

More documents and user manuals: <https://manuals.plus/>