

VEGA VSHH-25N

VEGA I-Kandy Hair Straightener

Model: VSHH-25 N

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Keep the cord away from heated surfaces.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- This appliance is for household use only.
- Do not use this appliance for any purpose other than its intended use.
- Do not operate this appliance with a damaged cord or plug, or if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Always store the appliance in a moisture-free area.

2. PRODUCT OVERVIEW

The VEGA I-Kandy Hair Straightener VSHH-25 N is designed to provide sleek, straight hair with ease. It

features wide ceramic coated plates for efficient styling and quick heat-up.



Image: VEGA I-Kandy Hair Straightener showcasing its design and main features.

Key Features:

- **Wide Ceramic Coated Plates:** Ensures smooth gliding and even heat distribution.
- **35 mm Wide Plates:** Ideal for straightening larger sections of hair, suitable for long and thick hair.
- **ON/OFF Switch with Power Indicator Light:** For easy operation and status indication.
- **Easy Lock System:** For convenient storage and travel.
- **360° Swivel Cord:** Prevents tangling during use.
- **Quick Heat Up:** Ready to use in approximately 60 seconds.

3. SETUP

Unpacking and Initial Inspection:

1. Carefully remove the hair straightener from its packaging.
2. Check the contents: 1 Hair Straightener, 1 user manual, 1 warranty card.
3. Inspect the appliance for any visible damage. Do not use if damaged.

Power Connection:

- Ensure your hands are dry before plugging in or unplugging the appliance.
- Plug the straightener into a suitable electrical outlet (110-240V).

4. OPERATING INSTRUCTIONS

Preparation:

- Ensure your hair is clean, dry, and tangle-free before styling.
- For best results, apply a heat protectant spray to your hair.

Turning On and Heating:

1. Plug the straightener into an electrical outlet.
2. Slide the ON/OFF switch to the 'ON' position. The power indicator light will illuminate.
3. Allow the straightener to heat up for approximately 60 seconds. The plates will reach their maximum temperature of 200°C.



ON/OFF SWITCH

Image: The ON/OFF switch for activating the straightener.



POWER INDICATOR LIGHT

Image: The power indicator light, which illuminates when the straightener is on.

Straightening Hair:

1. Divide your hair into small, manageable sections.
2. Take one section of hair and place it between the ceramic plates, close to the roots.
3. Gently close the plates and glide the straightener slowly down the hair section, from roots to ends.
4. Repeat this process for all sections of hair until desired straightness is achieved.
5. Avoid holding the straightener in one place for too long to prevent heat damage.



CERAMIC COATED PLATES

Image: The ceramic coated plates, designed for smooth styling.

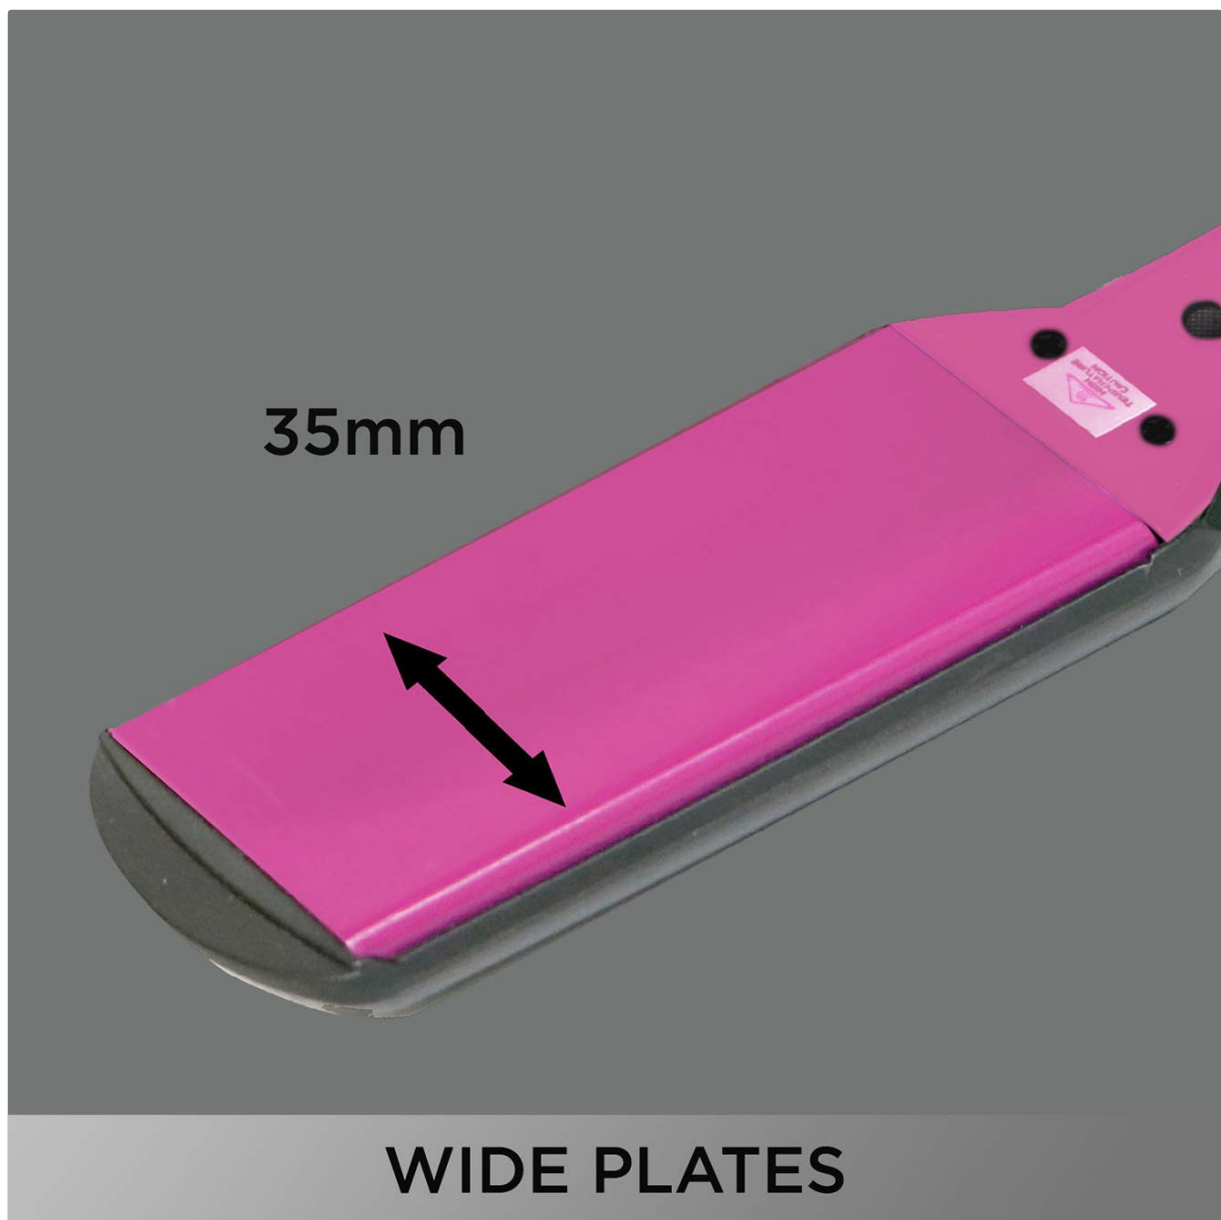


Image: Illustration of the 35mm wide plates, suitable for thick hair.

After Use:

1. Slide the ON/OFF switch to the 'OFF' position. The power indicator light will turn off.
2. Unplug the appliance from the electrical outlet.
3. Allow the straightener to cool down completely on a heat-resistant surface before storing.
4. Use the easy lock system to keep the plates closed for compact storage.

5. MAINTENANCE AND CLEANING

Cleaning:

- Ensure the straightener is unplugged and completely cool before cleaning.
- Wipe the ceramic plates and the exterior of the appliance with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals.
- Ensure no water enters the appliance.

Storage:

- Once cool, engage the easy lock system to keep the plates closed.
- Store the straightener in a dry, safe place, out of reach of children.
- Do not wrap the power cord around the appliance, as this can damage the cord. Instead, coil it loosely.

6. TROUBLESHOOTING

Common Issues:

- **Appliance not heating:**
 - Ensure the straightener is properly plugged into a working electrical outlet.
 - Check if the ON/OFF switch is in the 'ON' position and the power indicator light is illuminated.
- **Power indicator light not on:**
 - Verify the power connection and the ON/OFF switch.
 - If the issue persists, the appliance may require servicing.
- **Hair not straightening effectively:**
 - Ensure hair is completely dry and free of tangles.
 - Work with smaller sections of hair.
 - Glide the straightener slowly and evenly through each section.

If you encounter any issues not listed here or if troubleshooting steps do not resolve the problem, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	VHSH-25N
Heater Surface Material	Ceramic
Plate Width	35 mm
Maximum Temperature	200°C
Power Source	Corded Electric
Voltage	110-240V
Item Weight	334 g
Product Dimensions (LxWxH)	300 x 90 x 50 mm
Included Components	1 Hair Straightener, 1 user manual, warranty card

8. WARRANTY INFORMATION

This VEGA I-Kandy Hair Straightener (VHSH-25 N) comes with a **2 Years Manufacturer Warranty** from

the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.

The warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

9. CUSTOMER SUPPORT

For any queries, assistance, or warranty claims regarding your VEGA I-Kandy Hair Straightener, please contact:

VEGA Industries Private Ltd.

B43, Sector 80, Phase-2, Noida 201305, U.P. India

Phone: +91-120-41700 00