

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY N2QAYB000570 Replacement Remote Control User Manual](#)

ALLIMITY AMT-N2QAYB000570

ALLIMITY N2QAYB000570 Replacement Remote Control User Manual

Model: AMT-N2QAYB000570

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ALLIMITY N2QAYB000570 Replacement Remote Control. This remote is designed to be compatible with various Panasonic Viera LED HDTV models, offering a direct replacement without the need for programming.

PACKAGE CONTENTS

- 1 x N2QAYB000570 Replacement Remote Control

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating correct battery insertion.

OPERATING INSTRUCTIONS

Basic Operation

This remote control operates using Infrared (IR) technology. For optimal performance, point the remote control directly towards the IR sensor on your Panasonic Viera LED HDTV. Ensure there are no physical obstructions between the remote and the television's sensor.

No programming or pairing is required. Once new batteries are installed, the remote is ready for immediate use with compatible Panasonic Viera LED HDTV models.

Button Functions



Image: Front view of the remote control, displaying all functional buttons.

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI, AV).
VIERA TOOLS	Accesses the VIERA Tools menu.
MENU	Opens the main menu for TV settings.

Button	Function
OK / Navigation Arrows	Confirms selections and navigates through menus.
VOL +/-	Adjusts the volume level.
CH ^ / v	Changes TV channels.
MUTE	Mutes or unmutes the TV audio.
INFO	Displays program information.
Number Buttons (0-9)	Direct channel selection.
Playback Controls	Controls for media playback (e.g., Play, Pause, Stop, Fast Forward, Rewind).

MAINTENANCE AND CARE

- Keep the remote control dry. Avoid exposure to liquids or high humidity.
- Do not expose the remote to extreme temperatures (hot or cold).
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol.
- If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage.
- Avoid dropping the remote control or subjecting it to strong impacts.

TROUBLESHOOTING

- **Remote not responding:**
 - Check battery installation and ensure correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no physical obstructions between the remote control and the TV's IR sensor.
 - Verify that the remote is pointed directly at the TV's IR sensor.
- **Some functions not working:**
 - Confirm that your specific TV model is listed as compatible with this remote control.
 - Ensure the TV's IR sensor is clean and unobstructed.

SPECIFICATIONS

- **Model Number:** AMT-N2QAYB000570
- **Product Material:** Plastic
- **Connective Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.7 inches
- **Item Weight:** 2.82 ounces
- **Compatible Devices:** Panasonic Viera LED HDTVs

COMPATIBLE TV MODELS

This remote control is compatible with the following Panasonic Viera LED HDTV models:

- TC-L32E3, TC-L37E3, TC-L42E3
- TC-P42X3, TC-P46X3, TC-P50X3
- TC-42PX34, TC-50PX34, TC-60PS34
- TC-L42E30, TC-L32X30
- TC-P4232C, TC-P4632C, TC-P5032C
- TC-P42S30, TC-P46S30, TC-P50S30, TC-P60S30

SUPPORT

If your specific TV model is not listed among the compatible models, or if you encounter any issues not covered in this instruction manual, please contact the manufacturer or seller for further assistance. Provide your remote control model number (N2QAYB000570) and your TV's model number when seeking support.