

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [INFANS](#) /

› [INFANS Foldable High Chair Instruction Manual \(Model B0829H4D6D\)](#)

## INFANS B0829H4D6D

# INFANS Foldable High Chair Instruction Manual


**Brand:** INFANS | **Model:** B0829H4D6D

## 1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use of the high chair. Keep this manual for future reference.

- **Always fasten the five-point safety belt when using the high chair.**
- Ensure the high chair is placed on a flat, stable surface.
- Never leave your child unattended in the high chair.
- Do not use the high chair if any parts are damaged or missing.
- Maximum child weight: 50 pounds. Suitable for children from 0 to 5 years old.
- This product is US. CPSIA & ASTM APPROVED. Made of non-toxic and food-grade PP without any odor, FREE from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde. No sharp points or edges. Passed the tests of stability, asphyxiation, load, and shear.

## 2. PRODUCT FEATURES

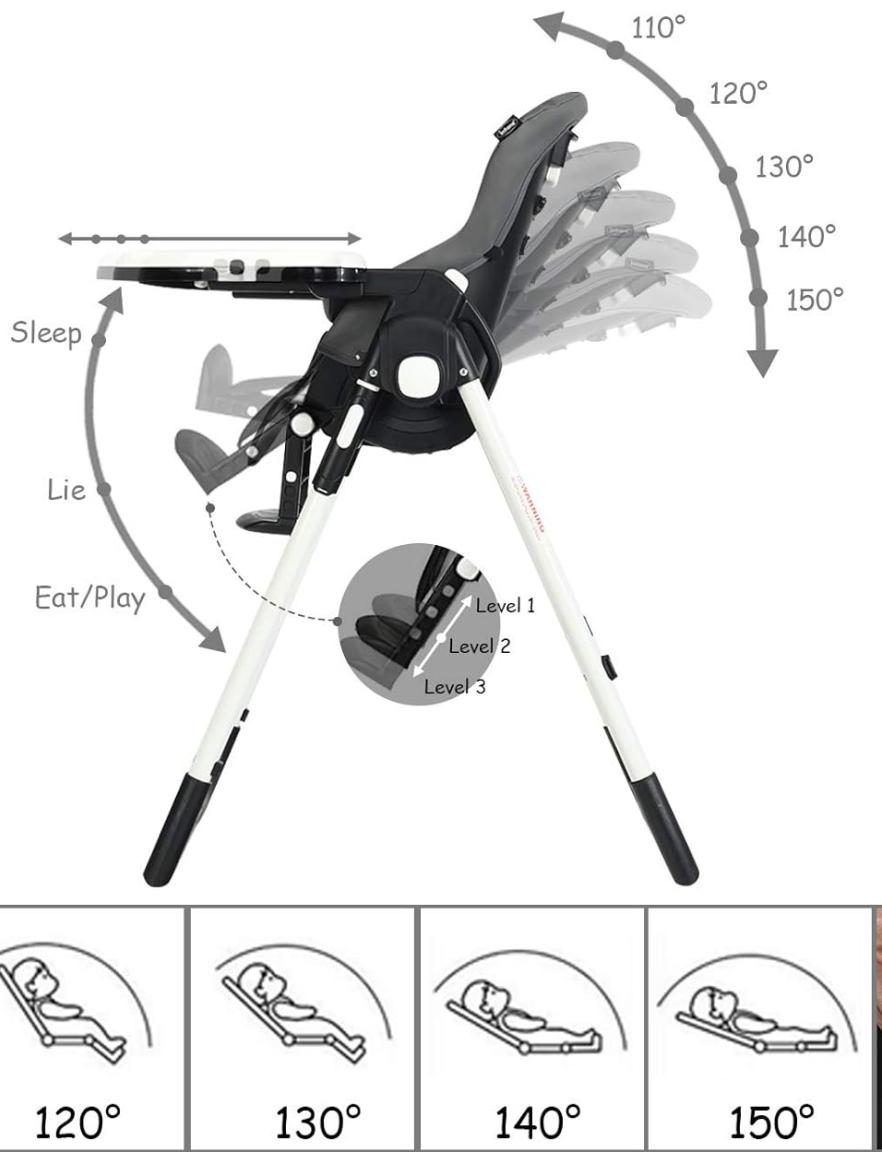

## Backrest Angle Adjustment

The backrest can be adjusted to different angles according to different seating postures that maximize the babies' comfort

Figure 1: The INFANS Foldable High Chair, showcasing its sleek design and adjustable features.

- **5-Point Safety Harness:** Ensures maximum comfort and security for your child.
- **Scientific Frame & Stable Pyramid Structure:** Designed to prevent rolling over.
- **No Installation Required:** The high chair comes pre-assembled for immediate use.
- **Removable BPA-Free Plastic Trays:** Dishwasher safe for easy cleaning.
- **Removable Waterproof PU Leather Cushion:** Can be wiped clean with a damp cloth.
- **Foldable Design:** Folds effortlessly in 5 seconds and stands freely for compact storage.
- **7 Height Positions:** Adjusts to various table heights.
- **5 Tilt Positions:** Allows for eating, playing, or resting.
- **3 Adjustable Footrest Positions:** Accommodates growing children.
- **3 Telescopic Positions:** Further enhances adjustability.
- **Removable & Adaptable Tray:** Features 3 positions for optimal feeding.
- **2 Rear Wheels:** For easy mobility.
- **Multi-Use:** Functions as a dining chair, play chair, feeding chair, or toddler chair (without trays).

### 3. SETUP AND ASSEMBLY

---

The INFANS High Chair is designed for convenience and requires no complex assembly. It arrives pre-assembled and ready for use.

#### 3.1 Unfolding the High Chair

1. Place the folded high chair on a flat surface.
2. Locate the release buttons on the sides of the main frame.
3. Press the buttons and gently pull the legs apart until the chair locks into its upright position. Ensure all locking mechanisms are engaged.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1 Adjusting Seat Height

The high chair offers 7 height positions to match various table heights or your preference.

1. Locate the height adjustment buttons on both sides of the main frame.
2. Press and hold both buttons simultaneously.
3. Raise or lower the seat to the desired height. Release the buttons to lock the position. Ensure both sides are locked evenly.

#### 4.2 Adjusting Backrest Recline

The backrest has 5 tilt positions, allowing your child to sit upright for eating, recline for playing, or lay back for resting.

1. Locate the recline adjustment lever behind the backrest.
2. Press the lever and adjust the backrest to one of the 5 positions. Release the lever to lock.

#### 4.3 Adjusting Footrest

The footrest can be adjusted to 3 positions to provide comfortable support for your child's legs as they grow.

1. Locate the footrest adjustment buttons on the sides of the footrest.
2. Press the buttons and move the footrest to the desired position. Release to lock.

#### 4.4 Using the Detachable Tray

The high chair features a double detachable tray with 3 adaptable positions.

1. **Attaching the Tray:** Align the tray with the armrests and slide it forward until it clicks into place. Adjust to one of the 3 positions as needed.
2. **Removing the Top Tray:** The top layer of the tray can be easily unclipped and lifted for cleaning.
3. **Removing the Entire Tray:** Press the release buttons located on the underside of the tray, near the armrests, and pull the tray outwards.
4. **Tray Storage:** The tray can be stored on the back of the high chair when not in use.

#### 4.5 Folding the High Chair for Storage

The high chair folds compactly for easy storage.

1. Ensure the tray is removed or stored on the back.
2. Locate the folding mechanisms (usually buttons or levers) on the sides of the chair.
3. Activate the mechanisms and fold the chair inward until it is compact and stands freely.

### 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and hygiene of your INFANS High Chair.

- **Tray:** The removable BPA-free plastic trays are dishwasher safe. For manual cleaning, wash with warm soapy water and rinse thoroughly.

- **Seat Cushion:** The detachable waterproof PU leather cushion can be wiped clean with a damp cloth and mild soap. Allow to air dry completely before reattaching.
- **Frame:** Wipe the metal and plastic parts of the frame with a damp cloth. Avoid abrasive cleaners.
- **Harness:** The 5-point safety harness straps can be removed and washed. Refer to the care label on the straps for specific washing instructions.
- **General:** Periodically check all screws, bolts, and fasteners to ensure they are tight and secure.

## 6. SPECIFICATIONS

Product Dimensions	29.53 x 21.26 x 41.34 inches (75 x 54 x 105 cm)
Item Weight	18.5 pounds (8.4 kg)
Maximum Weight Recommendation	50 Pounds (22.7 kg)
Material Type	PP + Iron + PU Leather (seat cushion)
Style	Standard
Color	Dark Grey
Is Portable	Yes
Batteries Required	No

# Removable PU leather seat cushion for easy cleaning and maintenance



Figure 2: Detailed product dimensions for the INFANS High Chair.

## 7. TROUBLESHOOTING

If you encounter any issues with your INFANS High Chair, please refer to the following common solutions:

- Tray difficult to attach/detach:** Ensure the release buttons are fully pressed when attaching or detaching the tray. Sometimes a slight jiggle can help align the mechanisms.
- Chair not locking into position:** Verify that all adjustment buttons are fully released and the chair is extended or folded until a click is heard, indicating it's securely locked.
- Stability concerns:** Always ensure the high chair is on a flat, even surface. Check that all legs are fully extended and locked.

## 8. WARRANTY AND SUPPORT

INFANS is committed to providing quality and comfortable products. Your satisfaction is our priority.

- Quality Guarantee:** Should you have any questions or require assistance, please do not hesitate to reach out to us. We are dedicated to providing a timely and considerate response within 12 hours.

- **Contact:** For support, please refer to the contact information provided with your purchase or visit the official INFANS website.