

BOMAZ R017F

BOMAZ Replacement Remote Control User Manual

Model: R017F

INTRODUCTION

This manual provides instructions for the BOMAZ Replacement Remote Control, designed for various Hitachi Projector models. This remote is a direct replacement and requires no programming or setup.

Compatible Hitachi Projector Models:

- CP-X206, CP-X250, CP-X253, CP-X255, CP-EX250, CP-EX250N, CP-WX3014WN, CP-X2530WN, CP-BX301WN, CP-CW251WN, CP-X2011N, CP-X2510, CP-X2515WN, CP-AW2519N, CP-X2541WN
- CP-A302WN, CP-AW2519N, CP-AW312WN, CP-D27WN, CP-D32WN, CP-DW25WN, CP-EW250N, CP-X3021WN, CP-X3030WN, CP-W251NM, CP-X4015WN, CP-A221NM
- CP-A221N, CP-A301N, CP-AW251N, CP-EX250, CP-EX300, CP-RX78, CP-RX93, CP-RX94, CP-WX2515WN, CP-WX3015WN, CP-X2015WN, CP-X3015WN, CP-A222WN, CP-A352WN, CP-AW252WN, CP-X2514WN, CP-X3014WN, CP-X4014WN, CP-WX3014WN
- HL02881, R016F, CP-EW300N, CP-EX250N, CP-EX251N, CP-EX300N, CPWX12WN, CPX10WN, CPX11WN, CP-X2021WN, CP-X2515WN, CP-X2521WN, CP-X2530WN, CP-X2011N, CP-X2511N, CP-X3011N, CP-X4011N

SETUP

The BOMAZ Replacement Remote Control is designed for immediate use with compatible Hitachi Projectors without any programming required.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

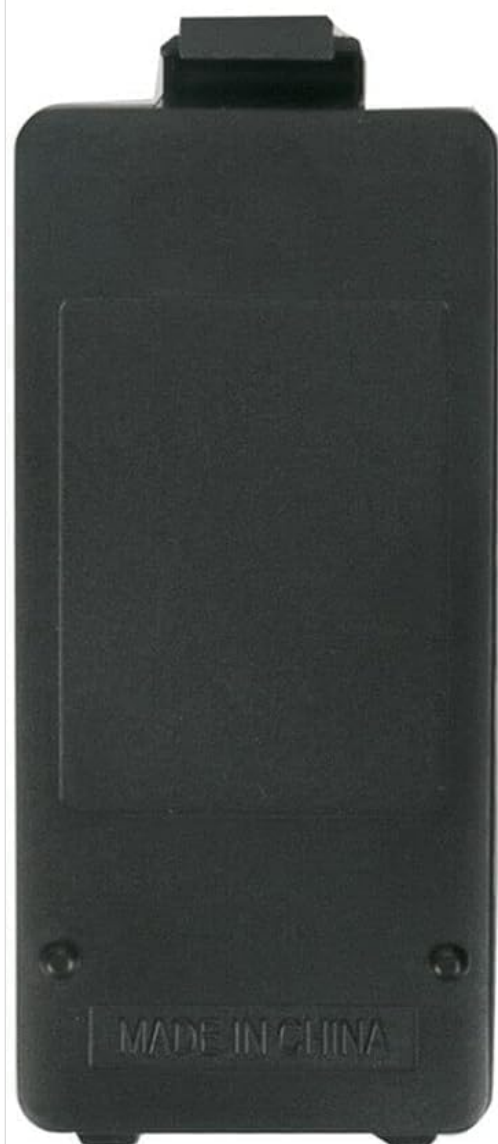


Figure 1: Battery Compartment. This image displays the back of the remote control with the battery cover removed, showing the two slots for AA batteries and the spring contacts.

OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible Hitachi Projectors. Ensure the remote is pointed towards the projector's IR receiver for optimal performance.



Figure 2: Front View of the Remote Control. This image shows the layout of all buttons on the remote, including power, source selection, navigation, volume, and menu controls.

Key Functions

Button	Function
Power Button (●)	Turns the projector On or Off.
MY SOURCE / VIDEO / COMPUTER / DOC.CAMERA	Selects the input source for the projector.
ASPECT	Adjusts the aspect ratio of the projected image.
AUTO	Automatically adjusts the image settings.
SEARCH	Initiates a search function (if supported by projector).
BLANK	Blanks the projected image.
MAGNIFY ON / OFF	Enables or disables image magnification.
FREEZE	Freezes the current projected image.
PAGE UP / DOWN	Navigates through pages or slides.
VOLUME + / -	Adjusts the audio volume.
KEystone	Adjusts keystone correction for image distortion.
MY BUTTON 1 / 2	Customizable function buttons (refer to projector manual for setup).
MUTE	Mutes or unmutes the audio.
FOCUS + / -	Adjusts the image focus.
D-ZOOM + / -	Adjusts digital zoom.
POSITION	Adjusts the image position.
MENU	Opens or closes the projector's on-screen menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options or adjusts settings.
ENTER	Confirms a selection or enters a menu.
ESC (Escape)	Exits a menu or cancels an operation.
RESET	Resets certain projector settings (refer to projector manual).

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. Do not use liquid cleaners, aerosols, or abrasive materials, as these may damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types

of batteries.

- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, moisture, and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
Remote is not responding.	Batteries: Check if batteries are inserted correctly with correct polarity (+/-). Replace with new AA batteries. Line of Sight: Ensure there are no obstructions between the remote and the projector's IR receiver. Point the remote directly at the projector. Distance: Ensure you are within the operable distance (more than 8 meters).
Some buttons are not working.	Projector Compatibility: Verify that the specific function is supported by your Hitachi projector model. Battery Level: Low batteries can sometimes cause intermittent button functionality. Replace batteries.
Remote works intermittently.	Low Batteries: Replace batteries. Interference: Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

If the issue persists after following these steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	R017F (Internal: 70b1fc42-a11b-4b90-8482-ef76bfdc7537)
Brand	BOMAZ
Compatible Devices	Hitachi Projectors (various models listed in Introduction)
Power Source	2 x AA Batteries (not included)
Operable Distance	More than 8 meters
Material	ABS Material
Color	Black
Special Feature	No Programming Required
Item Weight	2.08 ounces
Package Dimensions	8.07 x 4.57 x 1.34 inches

Warranty Information

This product comes with a**90-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote control functions as described.

The product also has a**30-day return policy** for refund or replacement, as per the seller's terms.

Customer Support

If you experience any issues with your remote control or have questions not covered in this manual, please contact the seller directly. The seller tests every remote before shipment to ensure functionality.

For support, please refer to your purchase platform or contact the seller "Billy088" via the Amazon platform[Seller Profile](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question