

Manuals.plus /

› VINABTY /

› VINABTY AXD7661 Replacement Remote Control for Pioneer AV Receivers VSX-822-K, VSX-1022-K User Manual

## VINABTY AXD7661

# VINABTY AXD7661 Replacement Remote Control User Manual

For Pioneer AV Receivers VSX-822-K, VSX-1022-K, and compatible models

## 1. INTRODUCTION

This manual provides instructions for the VINABTY AXD7661 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Pioneer AV Receiver models, including VSX-822-K, VSX-1022-K, VSX-822, VSX-1022, VSX822, VSX1022, VSX822K, and VSX1022K. It operates using infrared (IR) technology and requires no programming for immediate use with compatible devices.

## 2. SETUP

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

### 2.2 Initial Use

The VINABTY AXD7661 remote control is designed for immediate use with compatible Pioneer AV Receivers. No programming or code entry is required. Simply install the batteries, point the remote at your receiver, and begin operation.

## 3. OPERATING INSTRUCTIONS

This remote control replicates the functions of your original Pioneer AV Receiver remote. Ensure there is a clear line of sight between the remote control and the infrared sensor on your AV receiver.







Figure 1: Front view of the VINABTY AXD7661 remote control with button layout.





Figure 2: Angled view of the VINABTY AXD7661 remote control.

- **Power Button:** Press to turn the AV receiver on or off.
- **Input Select Buttons (BD, DVD, SAT/CBL, GAME, VIDEO, CD, TV, TUNER, NETWORK, iPod/USB, DVR/BDR):** Press to select the desired audio/video input source on your receiver.
- **Volume Control (+/-):** Adjusts the master volume level of the AV receiver.
- **Mute Button:** Toggles the audio output on or off.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections on your receiver's display.
- **Audio Parameter:** Accesses audio settings.
- **Tools Menu:** Opens the receiver's main menu for various settings.
- **Bass/Treble (+/-):** Adjusts bass and treble levels.
- **Number Buttons (0-9):** For direct input selection or numerical entries.
- **Receiver Button:** Ensures the remote is controlling the AV receiver.

For detailed functions of specific buttons, please refer to your Pioneer AV Receiver's original user manual.

## 4. MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, high temperatures, humidity, or liquids.

## 5. TROUBLESHOOTING

---

- **Remote is not working:**
  - Ensure batteries are correctly installed with proper polarity (+/-).
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote control and the AV receiver's IR sensor.
  - Ensure you are within the maximum operating range (approximately 33 feet) and pointing the remote directly at the receiver.
- **Specific buttons are not responding:**
  - Verify that the remote is set to control the AV receiver (e.g., by pressing the 'RECEIVER' button if applicable).
  - Some functions may require the AV receiver to be in a specific mode or input. Refer to your receiver's manual.

- **No programming needed:** This remote is a direct replacement and does not require any programming. If it is not working, the issue is likely with batteries, line of sight, or the receiver's IR sensor.

## 6. SPECIFICATIONS

---

<b>Brand</b>	VINABTY
<b>Model Name</b>	AXD7661
<b>Compatible Devices</b>	Pioneer AV Receivers (VSX-822-K, VSX-1022-K, VSX-822, VSX-1022, VSX822, VSX1022, VSX822K, VSX1022K, and others)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Battery Type</b>	2 x AAA batteries (not included)
<b>Maximum Range</b>	33 Feet (10 meters)
<b>Color</b>	Black
<b>Dimensions (L x W x H)</b>	5"L x 1.9"W x 0.5"H (approx. 12.7cm x 4.8cm x 1.3cm)
<b>Button Quantity</b>	30
<b>Special Feature</b>	Ergonomic design

---

## 7. SUPPORT

---

If you encounter any issues or have questions regarding your VINABTY AXD7661 replacement remote control, please do not hesitate to contact our customer support. We are committed to providing assistance and will respond to your inquiries within 24 hours.

Please refer to the retailer's website or your purchase documentation for specific contact methods.