



Manuals.plus /

› Orbegozo /

› Orbegozo EX 6000 Espresso Machine User Manual

Orbegozo EX 6000

Orbegozo EX 6000 Espresso Machine User Manual

Model: EX 6000

1. INTRODUCTION

Thank you for choosing the Orbegozo EX 6000 Espresso Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Ensure the appliance is connected to a grounded power outlet with the correct voltage.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Always unplug the machine before cleaning or when not in use.
- Do not operate the appliance with a damaged cord or plug.
- Use only cold, fresh water in the water tank.
- Exercise caution when operating the steam wand, as hot steam can cause burns.
- Do not open the filter holder during brewing, as hot water and steam are under pressure.
- Place the machine on a stable, flat, heat-resistant surface.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Orbegozo EX 6000 espresso machine.



Figure 3.1: Front view of the Orbegozo EX 6000 Espresso Machine, showing the control panel, portafilter, and steam wand.



Figure 3.2: Side view illustrating the removable 1.5-liter water tank on the right side of the machine.

Components:

1. **Control Panel:** Touch-sensitive interface for selecting functions (Single, Double, Power, Manual, Steam).
2. **Portafilter:** Holds the coffee filter basket and ground coffee or coffee pod.
3. **Steam Wand:** Used for heating water, coffee, and frothing milk.
4. **Removable Water Tank:** 1.5-liter capacity, located at the back or side for easy refilling.
5. **Drip Tray:** Collects excess liquid and is removable for cleaning.
6. **Cup Warmer:** Top surface designed to pre-heat coffee cups.
7. **Accessories:** Includes a measuring spoon, tamper, and three different sized coffee filter baskets.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all packaging materials from the espresso machine.
2. Check that all components and accessories are present and undamaged.
3. Place the machine on a stable, level, and dry surface.

4.2 Filling the Water Tank

1. Remove the water tank from the back/side of the machine.
2. Fill the tank with fresh, cold water up to the MAX level indicator.
3. Replace the water tank securely into its position.



Figure 4.1: Close-up view of the removable water tank, showing the MAX fill line.

4.3 First Use / Priming the Pump

Before brewing coffee, it is recommended to prime the pump and rinse the internal components.

1. Ensure the water tank is filled.
2. Place a cup under the portafilter outlet (without coffee).
3. Plug in the machine and press the **Power** button. The indicator light will flash while heating.
4. Once the light is solid, press the **Manual** button to dispense hot water. Let it run for approximately 30 seconds.
5. Turn the steam knob to the steam position and let steam release for a few seconds to clear the steam wand.
6. Turn off the machine. It is now ready for use.

5. OPERATING INSTRUCTIONS

5.1 Making Espresso (Ground Coffee)

1. Ensure the machine is plugged in and the water tank is filled.
2. Press the **Power** button. Wait for the indicator light to become solid, indicating the machine is preheated.
3. Select the appropriate filter basket (single or double shot) and place it into the portafilter.
4. Using the measuring spoon, add ground coffee to the filter basket. For a single shot, use one level spoon; for a double shot, use two.
5. Use the tamper to gently press the coffee grounds evenly. Do not over-compress.
6. Attach the portafilter to the brewing head by aligning it and turning it firmly to the right until secure.
7. Place one or two cups on the drip tray beneath the portafilter spouts.
8. Press the **Single** or **Double** button for pre-programmed espresso volume, or the **Manual** button to control the brewing time manually (press again to stop).
9. Once brewing is complete, carefully remove the portafilter and discard the used coffee grounds.



Figure 5.1: The Orbegozo EX 6000 dispensing two shots of espresso into glass cups.

5.2 Making Espresso (Coffee Pods)

The EX 6000 is compatible with standard coffee pods.

1. Follow steps 1-2 from section 5.1.
2. Place a coffee pod into the appropriate filter basket (usually a single shot basket).
3. Attach the portafilter to the brewing head.
4. Place a cup under the portafilter.
5. Press the **Single** button to brew.
6. After brewing, carefully remove the portafilter and discard the used pod.

5.3 Using the Steam Wand for Milk Frothing

1. Ensure the machine is powered on and preheated.
2. Fill a stainless steel frothing pitcher with cold milk (do not fill more than one-third).
3. Press the **Steam** button on the control panel. The indicator light will flash as the machine heats to steaming temperature.
4. Once the light is solid, position the steam wand just below the surface of the milk.
5. Turn the steam control knob to release steam. Move the pitcher up and down to create foam.
6. When the desired texture and temperature are reached, turn the steam control knob off.
7. Press the **Steam** button again to turn off the steam function.
8. Immediately clean the steam wand with a damp cloth to prevent milk residue from drying.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your espresso machine.

6.1 Daily Cleaning

- **Portafilter and Filter Baskets:** After each use, remove the portafilter, discard coffee grounds, and rinse the portafilter and filter basket under hot water.
- **Drip Tray:** Empty and rinse the drip tray daily or when the indicator shows it is full.
- **Steam Wand:** Immediately after frothing milk, wipe the steam wand with a damp cloth. Purge a small amount of steam to clear any internal milk residue.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.

6.2 Water Tank Cleaning

Clean the water tank weekly or as needed.

1. Remove the water tank.
2. Wash it with mild detergent and rinse thoroughly with clean water.
3. Ensure no soap residue remains before refilling and replacing.

6.3 Descaling

Depending on water hardness and frequency of use, descaling should be performed every 2-3 months. Use a commercial descaling solution suitable for espresso machines and follow the product's instructions carefully. Descaling removes mineral buildup that can affect machine performance and coffee taste.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee dispenses.	Water tank empty; machine not preheated; clogged filter.	Fill water tank; wait for preheat indicator; clean filter basket.
Coffee brews too slowly or drips.	Coffee grounds too fine or over-tamped; machine needs descaling.	Use coarser grind or less pressure when tamping; descale the machine.
Coffee brews too quickly.	Coffee grounds too coarse or under-tamped; insufficient coffee.	Use finer grind or more pressure when tamping; add more coffee.
Steam wand not producing steam.	Machine not at steaming temperature; wand clogged.	Wait for steam indicator; clean steam wand nozzle.
Water leaking from machine.	Water tank not seated correctly; drip tray full.	Ensure water tank is secure; empty drip tray.

8. TECHNICAL SPECIFICATIONS

Model: EX 6000

Brand: Orbegozo

Power: 1050 W

Pressure: 20 Bar

Water Tank Capacity: 1.5 Liters

Dimensions (L x W x H): 28.5 x 24.5 x 33.11 cm

Weight: 3.61 kg

Noise Level: 44 dB

Compatible Coffee: Ground coffee, coffee pods

Special Features: Touch control panel, steam wand, cup warmer, removable drip tray.



Figure 8.1: Diagram showing the approximate dimensions of the Orbegozo EX 6000 espresso machine.

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact your retailer or the OrbeGozo customer service department. Contact information can typically be found on the manufacturer's official website or on the product packaging.

