

Mastela 6921.0

Mastela Baby Rocker Model 6921.0 Instruction Manual

Newborn to Toddler Rocker

1. IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the Mastela Baby Rocker. Keep this instruction manual for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- **WARNING:** Never leave child unattended. Always keep your child in view.
- **WARNING:** This product is not intended for prolonged periods of sleep. If your child falls asleep, move them to a suitable sleeping surface.
- **WARNING:** Do not use this product once your child can sit up unaided or weighs more than 15 kg (33 lbs), whichever comes first.
- **WARNING:** Always use the restraint system. Ensure the harness is correctly fitted and adjusted.
- **WARNING:** Do not use the product if any components are broken, torn, or missing.
- **WARNING:** Do not use accessories or replacement parts other than those approved by the manufacturer.
- **WARNING:** Place the rocker on a flat, level surface. Do not place near stairs, heat sources, or open flames.
- **WARNING:** Do not move or lift the product with the child inside.
- **WARNING:** Keep all packaging materials away from children to avoid suffocation.

2. PRODUCT OVERVIEW

The Mastela Baby Rocker Model 6921.0 is designed to provide a comfortable and engaging space for your newborn to toddler. It features a portable design, adjustable seating, soothing melodies, and gentle vibrations to calm your baby. The removable toy bar offers engaging accessories for playtime.



Image: Packaging highlighting key features like engaging toys, two-position setting, and melodies & vibrations.

Key Features:

- Unique two-position setting for comfort.
- Adjustable 3-point harness for security.
- Can be locked into a stationary seat.
- 12 melodies and soothing vibration to calm the baby.
- Removable toy bar with fun accessories for easy access to the baby.
- Suitable for ages: Birth+ (up to 3 years or 15 kg).

3. PARTS LIST

Before assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not use the product and contact customer support.

- Rocker Frame (metal components)
- Seat Fabric (with harness)
- Toy Bar with hanging toys
- Vibration/Music Unit (requires 3 AA batteries, not included)
- Assembly Hardware (screws, caps, etc., if applicable)

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully. It is recommended to assemble the rocker on a soft, clean surface to prevent damage.

1. **Unpack Components:** Carefully remove all parts from the packaging.

2. **Assemble the Frame:** Connect the metal frame components as per the diagrams provided in the original packaging. Ensure all connections are secure and click into place.
3. **Attach the Seat Fabric:** Drape the seat fabric over the assembled frame. Secure the fabric to the frame using the loops, snaps, or straps provided. Ensure the harness straps are correctly positioned.
4. **Install Vibration/Music Unit:** Locate the compartment for the vibration/music unit, typically under the seat. Insert 3 AA batteries (not included) into the unit, observing polarity. Secure the unit in its compartment.
5. **Attach Toy Bar:** Insert the toy bar into the designated slots on the side of the rocker frame. Ensure it is firmly attached and cannot be easily dislodged.
6. **Final Check:** Before placing your child in the rocker, ensure all parts are correctly assembled, secure, and the harness functions properly.



Image: A fully assembled Mastela Baby Rocker, showcasing its design and toy bar.

5. OPERATING INSTRUCTIONS

Follow these steps for safe and effective use of your Mastela Baby Rocker.

5.1 Securing Your Child

1. Place your child in the seat.
2. Fasten the 3-point harness. Ensure the straps are snug but not too tight, allowing for comfortable movement.

3. Always double-check that the harness is securely fastened before leaving your child in the rocker.

5.2 Adjusting Seat Position

The rocker features a unique two-position setting. Locate the adjustment mechanism, usually on the sides or rear of the frame. Follow the instructions in your original packaging to recline or raise the seat to the desired position. Ensure the seat is securely locked in place before use.

5.3 Using Melodies and Vibrations

The vibration and music unit requires 3 AA batteries (not included). Once batteries are installed:

- Locate the control panel on the unit.
- Press the power button to turn on the unit.
- Use the melody button to cycle through the 12 available tunes.
- Press the vibration button to activate the gentle vibration feature.
- Adjust volume if applicable.
- Turn off the unit when not in use to conserve battery life.

5.4 Stationary Seat Function

To convert the rocker into a stationary seat, locate the locking mechanism on the frame (often a kickstand or a rotating foot). Engage this mechanism to prevent rocking motion. Ensure it is securely locked before use.

5.5 Toy Bar

The toy bar can be easily removed for convenient access to your child. To remove, gently pull the toy bar upwards from its attachment points. To reattach, align the posts with the slots and push down until secure.

6. MAINTENANCE

Proper maintenance ensures the longevity and safety of your Mastela Baby Rocker.

- **Cleaning:** Wipe the frame and plastic components with a clean, damp cloth. For the fabric seat, refer to the care label for specific washing instructions. Generally, spot cleaning with mild soap and water is recommended. Do not use harsh abrasives or bleach.
- **Battery Replacement:** When the melodies or vibrations weaken, it's time to replace the batteries. Always replace all 3 AA batteries at the same time. Do not mix old and new batteries or different types of batteries. Dispose of used batteries responsibly.
- **Storage:** When not in use, store the rocker in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly check all parts for wear, damage, or loose fasteners. Tighten any loose screws. Discontinue use if any part is damaged or broken.

7. TROUBLESHOOTING

If you encounter any issues with your Mastela Baby Rocker, refer to the following common solutions:

- **No Sound/Vibration:**
 - Check if batteries are installed correctly (polarity).
 - Replace with fresh 3 AA batteries.

- Ensure the unit is switched on.

- **Rocker is Unstable:**

- Ensure all frame connections are securely fastened.
- Verify the rocker is placed on a flat, level surface.
- If using as a stationary seat, ensure the locking mechanism is fully engaged.

- **Harness Not Securing:**

- Check for any twists in the straps.
- Ensure the buckle is fully engaged.
- Adjust straps for a snug fit.

If problems persist, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	6921.0
Target Gender	Unisex
Maximum Weight Recommendation	15 Kilograms
Material	Foam, Metal, Plastic
Material Composition	Metal, Plastic & Polyester
Care Instructions	Wipe With Clean Cloth
Additional Product Features	Adjustable Comfort, Baby swing & bouncer
Batteries Required	Yes (3 AA batteries)
Is Portable	Yes
Product Dimensions (LxWxH)	62 x 50 x 57 cm
Item Weight	2.22 kg
Manufacturer Recommended Age	0 - 3 years
Country of Origin	India
Assembly Required	Yes



Image: Product dimensions for the Mastela Baby Rocker.

9. WARRANTY AND SUPPORT

This product is manufactured by Mastela. For warranty claims, product support, or inquiries, please contact the authorized reseller or importer.

Importer/Packer: Trucare Kidz India Private Limited | Mumbai

Contact: Online@trucareindia.in



Image: Trucare badge indicating authorized reseller status and warranty provision.

Warranty is provided as per the terms and conditions of Trucare Kidz India Private Limited.

