

## OliveTech OTXX8030

# OliveTech Mini 150ml Essential Oil Diffuser Instruction Manual

Model: OTXX8030

## 1. INTRODUCTION

The OliveTech Mini 150ml Essential Oil Diffuser is an ultrasonic aromatherapy device designed to disperse essential oils into the air, creating a pleasant environment. It features a compact design with a light wood grain finish, soft mood lighting, and an automatic shut-off function for safety.

This diffuser is suitable for small to medium-sized rooms and operates quietly using advanced ultrasonic technology.

## 2. SAFETY PRECAUTIONS

- Always unplug the diffuser from the power outlet before cleaning or when not in use.
- Do not add water over the MAX line indicated inside the water tank. Overfilling can affect mist output.
- Ensure the diffuser is placed on a stable, flat surface to prevent spills.
- Keep out of reach of children and pets.
- Do not touch the ultrasonic vibrating plate directly with your fingers or sharp objects.
- Only use the provided power adapter.
- Essential oils are not included with this product.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x OliveTech Aroma Diffuser (Model: OTXX8030)
- 1x Power Adapter
- 1x Measuring Cup

- 1x User Manual

## 4. PRODUCT OVERVIEW

---

The OliveTech Mini Essential Oil Diffuser features a unique flower vase design with a light wood grain finish. It includes two control buttons for mist and light functions.



Image: OliveTech Mini Essential Oil Diffuser, showcasing its design and mist output.

## 5. SETUP INSTRUCTIONS

---

Follow these steps for initial setup:

1. **Lift up the cover:** Gently remove the top cover of the diffuser.
2. **Insert the power cable:** Connect the power adapter to the DC jack located at the bottom of the diffuser. Then plug the adapter into a standard wall outlet.

3. **Add water and essential oil:** Using the provided measuring cup, fill the water tank with clean tap water up to the MAX line (150ml). Add 3-5 drops of your preferred essential oil directly into the water. Do not exceed the MAX line.
4. **Replace the cover:** Carefully place the top cover back onto the diffuser, ensuring it is securely seated.




1. Lift up the cover



2. Insert the power cable



3. Add water and add drops of essential oil (oil not included)

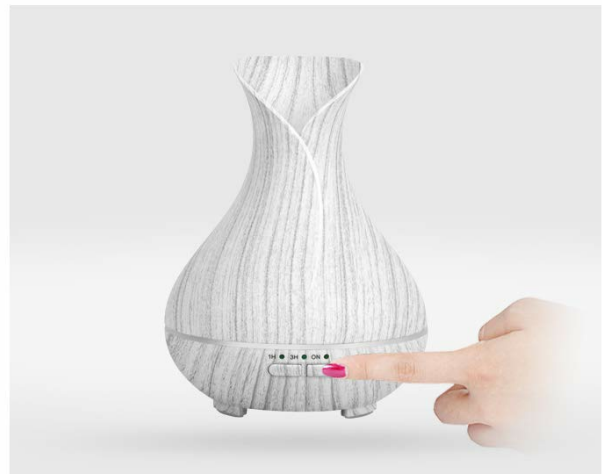

4. Press button to turn on

Image: Step-by-step visual guide for setting up the diffuser.

## 6. OPERATION

### 6.1 Mist Control

- Press the **'Mist'** button once to turn on continuous mist.
- Press the **'Mist'** button again to cycle through timer settings: 1 hour, 3 hours, or continuous. The corresponding indicator light will illuminate.
- To turn off the mist, press the **'Mist'** button until all mist indicator lights are off.
- The diffuser will automatically shut off when the water level is too low or runs out.

## 6.2 Light Control

- Press the '**Light**' button once to turn on the LED light. The light will cycle through various colors.
- Press the '**Light**' button again to fix the light to a specific color.
- Continue pressing the '**Light**' button to cycle through different colors and brightness levels (dim/brighter).
- To turn off the light, press and hold the '**Light**' button for 3 seconds, or cycle through all options until the light turns off.

## 7. MAINTENANCE

Regular cleaning helps maintain optimal performance and extends the lifespan of your diffuser.

1. **Unplug:** Always unplug the diffuser from the power source before cleaning.
2. **Empty Water:** Remove the cover and carefully empty any remaining water from the tank, ensuring water does not enter the air outlet.
3. **Wipe Tank:** Use a soft cloth or sponge to wipe the inside of the water tank. For stubborn residue, add a few drops of white vinegar to the water and let it sit for 10-15 minutes before wiping clean.
4. **Clean Ultrasonic Plate:** Gently clean the ultrasonic vibrating plate (the small ceramic disc at the bottom of the tank) with a cotton swab dipped in white vinegar or rubbing alcohol. Do not scrub or use abrasive materials.
5. **Dry:** Allow all parts to air dry completely before reassembling or storing the diffuser.
6. **Frequency:** Clean the diffuser after every 5-6 uses or every 3-5 days, especially when changing essential oils.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or weak mist	<ul style="list-style-type: none"><li>• Insufficient water in tank</li><li>• Water level exceeds MAX line</li><li>• Ultrasonic plate dirty or blocked</li><li>• Diffuser not placed on a flat surface</li></ul>	<ul style="list-style-type: none"><li>• Add water to the appropriate level</li><li>• Empty excess water</li><li>• Clean the ultrasonic plate as per maintenance instructions</li><li>• Place on a stable, flat surface</li></ul>
Light not working	<ul style="list-style-type: none"><li>• Power not connected</li><li>• Light function turned off</li></ul>	<ul style="list-style-type: none"><li>• Ensure power adapter is securely plugged in</li><li>• Press the 'Light' button to activate</li></ul>
Diffuser leaks water	<ul style="list-style-type: none"><li>• Cover not properly seated</li><li>• Overfilled water tank</li><li>• Diffuser tilted or knocked over</li></ul>	<ul style="list-style-type: none"><li>• Ensure cover is securely in place</li><li>• Do not exceed MAX water line</li><li>• Place on a stable surface and avoid movement during operation</li></ul>

Problem	Possible Cause	Solution
Unusual noise	<ul style="list-style-type: none"><li>• Insufficient water</li><li>• Diffuser not on a flat surface</li></ul>	<ul style="list-style-type: none"><li>• Add water</li><li>• Ensure diffuser is on a stable, flat surface</li></ul>

## 9. SPECIFICATIONS

---

- **Model:** OTXX8030
- **Capacity:** 150ml
- **Material:** BPA-free PP (Wood grain finish)
- **Mist Output:** 25-30ml/hour
- **Run Time:** 4-6 hours (continuous output)
- **Dimensions:** Approximately 4.9 inches (width) x 6.7 inches (height)
- **Weight:** Approximately 13.62 ounces
- **Auto Shut-Off:** Yes, when water runs out
- **Light:** Soothing LED light with adjustable brightness and color options

## 10. WARRANTY AND SUPPORT

---

OliveTech provides a **45-day money-back guarantee** and an **18-month worry-free warranty** for this product. For any questions, concerns, or warranty claims, please contact OliveTech customer support through your original purchase platform or the contact information provided with your product packaging.

