

[Manuals.plus](#) /

› [CubiCubi](#) /

› CubiCubi 40-inch Study Computer Desk Instruction Manual

CubiCubi US-SD-40G

CubiCubi 40-inch Study Computer Desk Instruction Manual

Model: US-SD-40G

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your CubiCubi 40-inch Study Computer Desk. Please read these instructions carefully before beginning assembly and retain this manual for future reference.



Image: The CubiCubi 40-inch Study Computer Desk with a rustic brown top and black metal frame.

SAFETY INFORMATION

WARNING:

- Ensure proper assembly and handling to avoid damage and ensure stability.
- Do not exceed the weight limits specified in the 'Specifications' section.
- Keep small parts away from children during assembly to prevent choking hazards.
- Always use the desk on a flat, stable surface.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop Panel (Melamine-faced board)
- Metal Frame Components (Alloy Steel)
- Storage Bag (Non-woven fabric)
- Iron Hook
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two people and takes approximately 30-60 minutes. An Allen wrench is included. Follow the steps below carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Attach the metal frame components using the provided screws and Allen wrench. Ensure all connections are secure. The frame includes triangle iron and diagonal scaffold braces for enhanced stability.
3. **Attach Desktop:** Place the desktop panel onto the assembled frame. Align the pre-drilled holes in the desktop with the frame and secure it using the appropriate screws. Do not overtighten.
4. **Install Storage Bag:** Attach the non-woven fabric storage bag to the side of the desk frame using the designated hooks or fasteners.
5. **Install Iron Hook:** Secure the iron hook to the desired side of the desk frame.

For a visual guide, please refer to the official installation video:

Your browser does not support the video tag.

Video: Official CubiCubi Computer Desk Installation Guide. This video demonstrates the step-by-step assembly process for the desk.



Image: Detail of the X-brace design on the desk frame, providing structural support and stability.

OPERATING INSTRUCTIONS

Your CubiCubi desk is designed for versatile use in various environments such as a home office, study, or writing area. Its features enhance organization and convenience.

- **Using the Storage Bag:** The non-woven fabric storage bag can be used to hold documents, books, magazines, or other small office supplies, keeping your desktop clear and organized. It can be positioned on either side of the desk.
- **Utilizing the Iron Hook:** The iron hook provides a convenient place to hang headphones, bags, or other items, keeping them easily accessible and off your workspace. It can also be positioned on either side.



Image: A close-up view of the desk's side-mounted storage bag, demonstrating its capacity for organizing books and papers.



Image: A close-up of the iron hook attached to the desk frame, shown holding a pair of headphones.

MAINTENANCE

To ensure the longevity and appearance of your CubiCubi desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the desktop and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining, especially on the rustic brown tabletop.
- **Hardware:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain stability.
- **Heat and Moisture:** Avoid placing hot items directly on the desktop. Use coasters for beverages to protect against moisture rings.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration of the desktop finish.

TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk is wobbly	Loose screws or uneven floor.	Check and tighten all assembly screws. Ensure the desk is on a level surface; use shims if necessary.
Screws do not fit or are too long	Incorrect screw used for the specific part, or manufacturing variation.	Refer to the assembly diagram to ensure the correct screws are used for each step. If a screw is genuinely too long or a hole is misaligned, contact customer support for replacement parts.
Missing parts	Packaging error.	Review the package contents list. Contact customer support with the specific missing part number.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	CubiCubi
Model Name	US-SD-40G
Product Dimensions (D x W x H)	19.7" x 40" x 30" (50cm x 101.6cm x 76.2cm)
Item Weight	20.1 pounds (9.1 kg)
Color	Rustic Brown (Tabletop), Black (Frame)
Style	Modern, Simple
Top Material Type	Melamine-faced board
Base Material	Alloy Steel
Special Feature	Scratch Resistant, Storage Bag, Iron Hook
Recommended Number of People for Assembly	2
Room Type	Home Office, Study, Bedroom, Living Room

WARRANTY AND SUPPORT

CubiCubi is committed to providing quality products and services. If any parts are received damaged or defective, or if you require assistance with assembly or operation, please contact CubiCubi customer service.

Please retain your proof of purchase for warranty claims. Specific warranty details may vary; refer to the product packaging or contact customer support for more information.

For support, please visit the official CubiCubi store or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question