

[manuals.plus](#) /

› [Moukey](#) /

› [Moukey Karaoke Machine User Manual](#)

Moukey MTs10-1

Moukey Karaoke Machine User Manual

Model: MTs10-1

1. INTRODUCTION

Thank you for purchasing the Moukey Karaoke Machine MTs10-1. This portable PA system is designed to deliver powerful sound with versatile connectivity options and dynamic lighting effects, perfect for various indoor and outdoor events. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience with the product.



Image: Moukey Karaoke Machine MTs10-1, showcasing the main unit, wireless microphone, and remote control.

2. SAFETY INSTRUCTIONS

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure the power adapter is compatible with your local power supply.
- Do not block ventilation openings.
- Avoid placing the unit near heat sources or in direct sunlight.
- Keep out of reach of children.
- Turn off the power using the PWR button when not in use to prolong battery life.
- Charge the unit for 8 hours before first use.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Moukey Karaoke Machine (MTs10-1)
- Wireless Microphone
- Remote Control
- Power Adapter
- 3.5mm AUX Cable
- User Manual



Wireless
Microphone



Power
Adapter



3.5mm to RCA
Cable



3.5mm to Audio
Cable



User Manual




Remote

Image: All items included in the Moukey Karaoke Machine package: the main speaker unit, a wireless microphone, a remote control, a power adapter, a 3.5mm AUX cable, and the user manual.

4. PRODUCT OVERVIEW

4.1. Control Panel

The control panel located on the top of the unit provides access to all functions and settings.

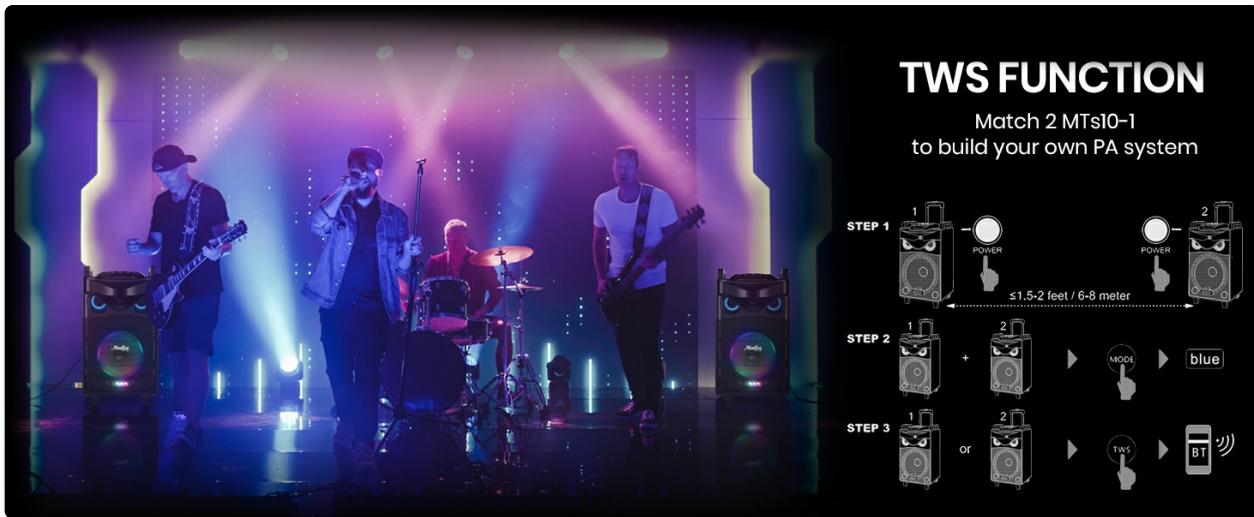

TWS FUNCTION

Match 2 MTs10-1
to build your own PA system

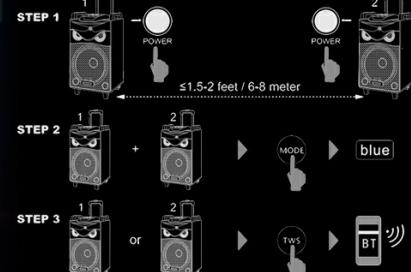


Image: Detailed view of the control panel, highlighting inputs for USB, TF card, AUX, and various knobs for Echo, Treble, Bass, and Volume control.

4.2. Key Features

- Powerful Sound:** Equipped with a 10-inch woofer and 3-inch tweeter for full-range stereo sound and strong bass.
- Colorful Disco Lights:** Integrated LED lights change color with music, enhancing party atmosphere. Lights can be turned off.
- TWS Function:** Connect two MTs10-1 units wirelessly via Bluetooth for a true stereo PA system.
- Multiple Playback Modes:** Supports Bluetooth 5.0, Micro TF card (up to 32GB), USB flash drive (up to 32GB), AUX IN, and FM radio.
- Rechargeable Battery:** Provides extended music playback for indoor and outdoor use.
- Portable Design:** Features a sturdy lever and wheels for easy transport.

BASS BOOST POWERFUL STEREO SOUND



10"
Woofer



3"
Tweeter



3"
Inverter Tube * 2



Image: An illustration detailing the speaker's components, including a 10-inch woofer and 3-inch tweeter, designed for powerful stereo sound and bass boost.

5. SETUP

5.1. Initial Charging

Before first use, fully charge the unit for approximately 8 hours. Connect the power adapter to the DC 15V input on the unit and plug it into a power outlet. The charging indicator will illuminate.

5.2. Power On/Off

To power on the unit, press the PWR button. To power off, press the PWR button again. It is recommended to turn off the unit completely when not in use to preserve battery life.

ROCK IN A LONG TIME

Rechargeable battery, plays it anytime, anywhere



Image: A transparent view of the speaker showing its internal rechargeable battery, with indicators for 8-20 hours playing time and 3-6 hours charging time. A note advises turning off the power when not in use to prevent battery damage.

6. OPERATING INSTRUCTIONS

6.1. Bluetooth Connection

1. Turn on the Moukey Karaoke Machine.
2. The unit will automatically enter Bluetooth pairing mode. The display will show "BLUE".
3. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "Moukey MTs10-1" from the list to pair.
5. Once connected, you will hear a confirmation sound.

6.2. TWS (True Wireless Stereo) Function

The TWS function allows you to connect two MTs10-1 units for a stereo sound experience.

1. Ensure both MTs10-1 units are powered on and in Bluetooth mode.
2. On one of the units (this will be the primary unit), press and hold the "TWS" button.

3. The primary unit will search for the secondary unit. Once connected, both units will play audio in stereo.
4. Connect your Bluetooth device to the primary unit as described in section 6.1.



Image: A step-by-step diagram illustrating the process of pairing two MTs10-1 speakers together to create a True Wireless Stereo (TWS) PA system.

6.3. Microphone Usage

The unit comes with one wireless microphone. Insert batteries into the microphone and power it on. It will automatically connect to the speaker. Adjust the microphone volume using the dedicated knob on the control panel. You can also adjust Echo, Treble, and Bass for the microphone input.

MADE FOR KARAOKE

NOTE :
Only one wireless
microphone in the
package



Image: Two individuals enjoying karaoke with the Moukey Karaoke Machine, demonstrating its primary use for vocal performances. Note: Only one wireless microphone is included in the package.

6.4. Media Playback

The MTs10-1 supports various media inputs:

- **USB/TF Card:** Insert a USB flash drive or TF card (up to 32GB) into the respective slot. The unit will automatically switch to USB/TF mode and begin playing compatible audio files (e.g., MP3).
- **AUX IN:** Connect an external audio device (e.g., smartphone, MP3 player) using the provided 3.5mm AUX cable to the AUX input.
- **FM Radio:** Press the "MODE" button to switch to FM radio mode. Use the play/pause button to auto-scan and save available stations. Use the previous/next track buttons to navigate between saved stations.

MULTIPLE USING WAYS



Image: A visual representation of the various connectivity options available, including Bluetooth 5.0, TF card, USB disk, AUX In, and FM Radio, highlighting the machine's versatility.

6.5. Lighting Effects

The MTs10-1 features dynamic LED disco lights and owl-eye lights. These lights can be turned on or off by pressing the dedicated light button on the control panel or remote control.

TWO LIGHTS FOR KARAOKE

Dynamic colorful lights and owl-eye lights bring a disco atmosphere to your party, more entertaining



Image: The speaker displaying its dynamic colorful lights and distinctive owl-eye lights, designed to create a disco atmosphere.

7. MAINTENANCE

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the unit dry. It is only slightly waterproof; avoid exposure to excessive moisture.
- Store in a cool, dry place when not in use.
- Regularly charge the battery if the unit is stored for long periods to maintain battery health.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------|---|--|
| No power | Battery drained; Power adapter not connected. | Charge the unit; Ensure power adapter is securely connected. |

| Problem | Possible Cause | Solution |
|--------------------------|---|--|
| No sound | Volume too low; Incorrect input mode; Device not connected. | Increase volume; Select correct input mode (Bluetooth, AUX, USB/TF); Reconnect device. |
| Bluetooth not connecting | Unit not in pairing mode; Device too far; Interference. | Ensure unit shows "BLUE"; Move device closer; Turn off other Bluetooth devices. |
| Microphone not working | Microphone off; Batteries low; Microphone volume low. | Turn on microphone; Replace batteries; Increase microphone volume. |
| Lights not working | Lights turned off. | Press the light button to turn them on. |

9. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|--|
| Model Number | MTs10-1 (MK0086) |
| Output Wattage | 520 Watts |
| Woofer Size | 10 inches |
| Tweeter Size | 3 inches |
| Connectivity Technology | Bluetooth 5.0, AUX, USB, TF Card, FM Radio |
| Power Source | Battery Powered (Rechargeable) |
| Playing Time | 8-20 hours (depending on usage) |
| Charging Time | 3-6 hours |
| Item Weight | 22 pounds (10 Kilograms) |
| Product Dimensions (L x W x H) | 24.65 x 14.45 x 14.45 inches |
| UPC | 708302978552 |

10. WARRANTY AND SUPPORT

Moukey products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Moukey website. Keep your purchase receipt as proof of purchase.

