

Full House A10

Full House Wireless Doorbell Kit User Manual

Model: A10

Brand: Full House


1. INTRODUCTION AND OVERVIEW

The Full House Wireless Doorbell Kit provides a reliable and convenient solution for your home, office, or classroom. Featuring an impressive 1000ft wireless range in open space (500ft with walls), it ensures you never miss a visitor. The system boasts strong anti-interference capabilities and one-to-one signal pairing for consistent performance. With 60 selectable melodies and 5 adjustable volume levels (from 0dB to 110dB), you can customize your alert preferences, including a silent mode with just an LED flash. The doorbell push button is IP44 waterproof, making it suitable for outdoor use, and includes a replaceable 23A 12V alkaline battery with a life of up to 3 years. This kit allows you to distinguish between different doors by assigning unique tones to each push button, and it is expandable with up to 8 transmitters and unlimited receivers.

2. PACKAGE CONTENTS

Your Full House Wireless Doorbell Kit includes the following components:

- 2 x Wireless Push Buttons (Transmitters)
- 2 x Plug-In Receivers
- Double-sided adhesive tape for installation
- Screws for alternative installation
- User Manual

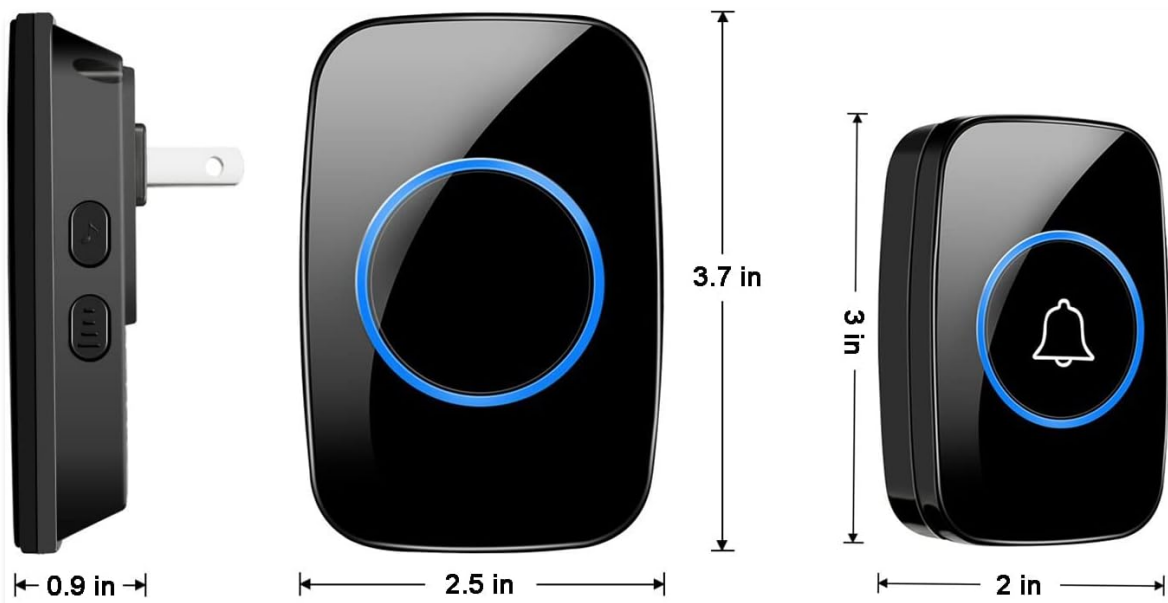

23A 12V Alkaline Battery Include
Last for **2~3** Years

Image: All components included in the Full House Wireless Doorbell Kit.

3. SETUP AND INSTALLATION

The Full House Wireless Doorbell Kit is pre-paired for quick and easy installation.

1. **Plug in the Receiver:** Insert the plug-in receiver into any standard electrical socket indoors. The receiver will light up, indicating it is ready for use.
2. **Install the Push Button:** Choose your desired location for the push button (transmitter) outdoors. You can use the provided double-sided adhesive tape for a simple stick-on installation, or use the included screws for a more permanent mounting. Ensure the location is suitable for the IP44 waterproof rating.



Image: The doorbell receiver plugged into an electrical outlet.

IP44 Waterproof

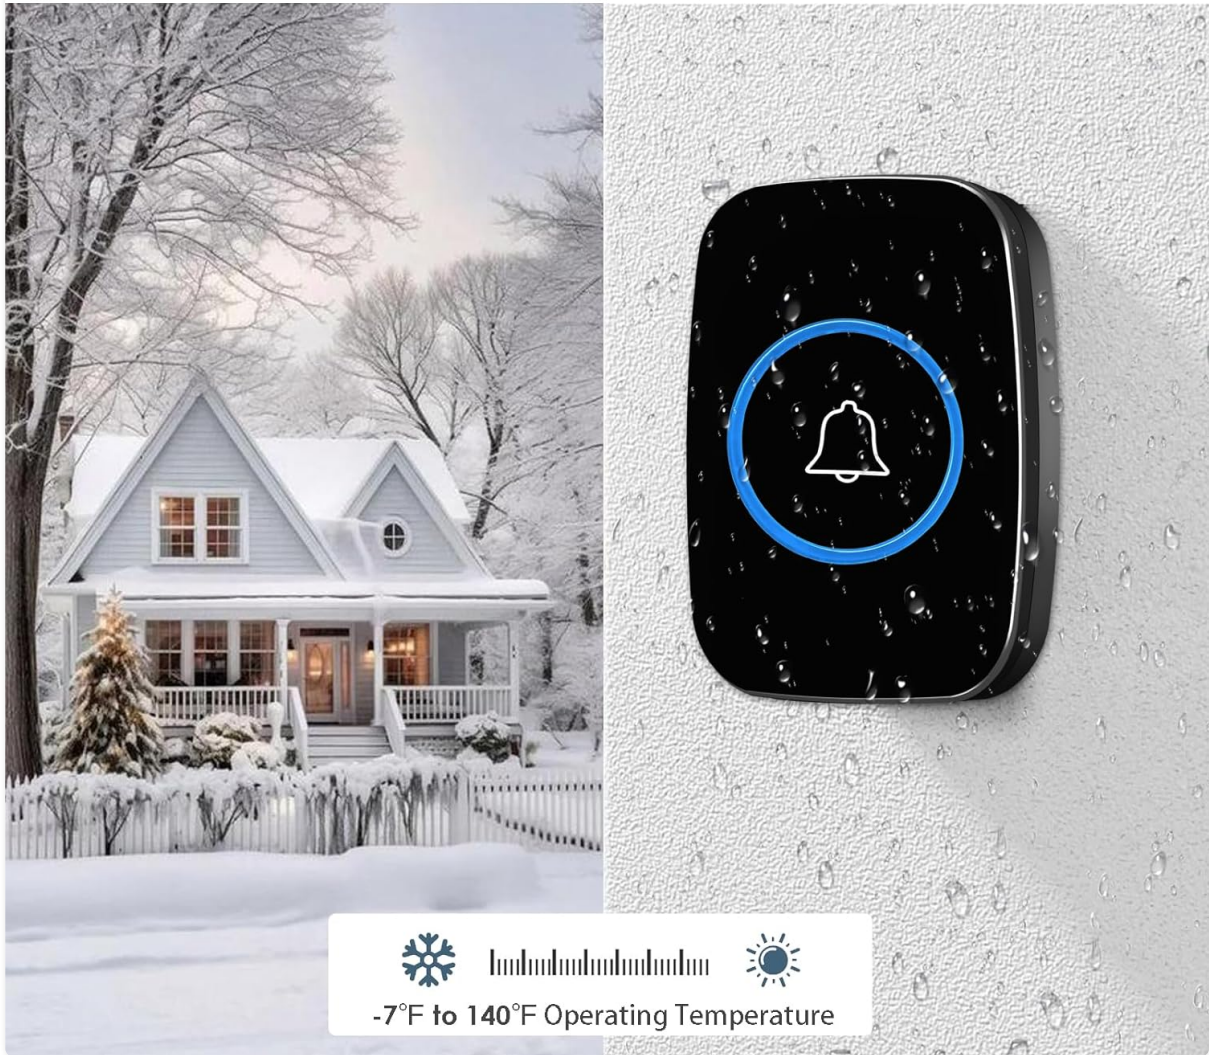


Image: Attaching the adhesive to the back of the push button for installation.

Video: Unboxing and Basic Setup

Video: This official seller video demonstrates the unboxing of the Full House Wireless Doorbell and provides a basic overview of its components and initial setup steps.

4. OPERATING INSTRUCTIONS

Adjusting Volume and Changing Chimes

The receiver offers 5 levels of adjustable volume and 60 different melodies. You can also set it to a silent mode with only an LED flash.

1. **Adjust Volume:** Locate the volume button on the side of the receiver. Press it repeatedly to cycle through the 5 volume levels (0dB to 110dB).
2. **Change Chime:** Locate the chime selection button on the side of the receiver. Press it to cycle through the 60 available melodies.



Image: Visual representation of the 5 volume levels available on the receiver.

Video: How to Adjust Tune or Volume

Video: This official seller video demonstrates how to adjust the volume and change the chime melody on your doorbell receiver.

Distinguishing Front and Rear Doors

The system allows you to assign different tones to individual push buttons, enabling you to distinguish which door a visitor is at. All receivers will ring regardless of which push button is pressed, but the tone will indicate the specific door.

Distinguish front and rear doors & Longer Range



Image: The doorbell system's ability to distinguish between front and rear doors.

Video: Distinguish Between Different Doors

Video: This official seller video demonstrates how to set up and utilize different chime tones for multiple push buttons to distinguish between different entry points.

5. MAINTENANCE

The doorbell push button (transmitter) is powered by a replaceable 23A 12V alkaline battery, designed to last up to 3 years. When the battery needs replacement, carefully open the push button casing to access the battery compartment.



Image: Dimensions of the units and battery replacement instructions for the push button.

The push button is rated IP44 waterproof, meaning it is protected against solid objects larger than 1mm and against splashing water from any direction. While designed for outdoor use, placing it under a porch or overhang can further extend its lifespan by protecting it from direct, prolonged exposure to extreme weather conditions.

Expandable

All FullHouse-branded transmitters and receivers can be paired with each other, and each transmitter can be set to a different tone.



Image: The doorbell's IP44 waterproof rating for various weather conditions.

6. TROUBLESHOOTING

If you encounter any issues with your Full House Wireless Doorbell Kit, please refer to the following common troubleshooting tips:

- **No Sound from Receiver:** Ensure the receiver is securely plugged into a working electrical outlet. Check the volume level and make sure it's not set to 0dB (mute mode).
- **Push Button Not Triggering Receiver:** Verify that the push button's battery is not depleted. Replace the 23A 12V alkaline battery if necessary. Ensure the push button and receiver are within the specified wireless range and that there are no major obstructions (like thick concrete walls) severely impacting the signal.
- **Interference:** While designed with strong anti-interference features, try relocating the receiver or push button if you experience inconsistent performance, especially near large metal objects or other wireless devices.
- **Re-pairing:** If the units lose connection, refer to the detailed re-pairing instructions in the included paper manual. All Full House-branded transmitters and receivers can be paired with each other.

7. SPECIFICATIONS

Feature	Specification
Model Number	A10
Wireless Range	Over 1000ft (open space), 500ft (with walls)
Chimes	60 Melodies
Volume Levels	5 Levels (0dB to 110dB)
Waterproof Rating	IP44 (Push Button)
Push Button Battery	23A 12V Alkaline (included)
Battery Life	Up to 3 years
Product Dimensions	Receiver: 1.98 x 1.99 x 3 inches; Push Button: 2 x 3.7 inches
Item Weight	8.8 ounces
Color	Black

8. WARRANTY AND SUPPORT

Full House offers a 365-day warranty for this product, ensuring peace of mind. Additionally, you are eligible for 30-day free returns. For any support inquiries, troubleshooting assistance, or warranty claims, please contact Full House customer service through the platform where you purchased the product or visit the official Full House Store on Amazon.

Visit the [Full House Store](#) for more information and products.