

[Manuals.plus](#) /

> [CLEANmaxx](#) /

> CLEANmaxx Pro Power Cordless Cyclone Vacuum Cleaner 22.2V Bagless - Instruction Manual

CLEANmaxx CLEANmaxx Akku-Zyklon-Staubsauger

CLEANmaxx Pro Power Cordless Cyclone Vacuum Cleaner

Model: CLEANmaxx Akku-Zyklon-Staubsauger

Brand: CLEANmaxx

IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the appliance and keep it for future reference. Always observe all safety instructions.

- This appliance is designed for vacuuming normal household dust. Do not use it to vacuum liquids, wet substances (e.g., wet carpet shampoo), burning ashes, cigarette butts, matches, flammable or combustible substances, very fine dust (e.g., concrete dust), ashes, toners, or sharp, hard objects like glass shards.
- Keep the appliance away from children and pets.
- Only use original accessories and spare parts.
- Do not operate the appliance if it is damaged or if the power cord/adaptor is faulty.
- Ensure the dust container and filters are correctly installed before use.
- Do not block the air vents during operation.

PACKAGE CONTENTS



Image: The CLEANmaxx vacuum cleaner fully assembled with the extension tube and power brush attached, ready for use.

1. Insert the metal extension tube into the main vacuum unit until it clicks into place.
2. Attach the Power Rotation Electric Brush to the other end of the extension tube, ensuring it is securely fastened.
3. For handheld use, attach the desired nozzle (crevice or brush) directly to the main unit.

Charging the Battery

Before first use, fully charge the Li-ion battery. The battery is removable for convenient charging.

1. Connect the AC adapter to the charging port on the battery or the main unit if the battery is inserted.
2. Plug the AC adapter into a power outlet.
3. The LED indicator will show the charging status. A full charge takes approximately 5 hours.

Wall Mount Installation

The included wall mount allows for convenient storage of your vacuum cleaner and accessories.

1. Choose a suitable location near a power outlet for easy charging.
2. Use the provided fixing material (screws and wall plugs) to securely mount the bracket to the wall.
3. The suction tube holder can be attached to the extension tube for storing the crevice and brush nozzles.



Image: The suction tube holder attached to the extension tube, providing a convenient storage spot for the smaller nozzles.

OPERATION

Powering On/Off

Press the power button once to turn the vacuum cleaner on. Press it again to turn it off. The vacuum cleaner features two suction levels for different cleaning needs.

Using Different Attachments

The CLEANmaxx vacuum cleaner is versatile and can be adapted for various cleaning tasks.

- **Power Rotation Electric Brush:** Ideal for carpets and hard floors. The rotating brush effectively picks up dust and debris.



Image: A detailed view of the Power Rotation Electric Brush head, showing the internal rotating brush mechanism.

- **Crevice Nozzle:** Perfect for narrow gaps, corners, and hard-to-reach areas like between sofa cushions or car seats.
- **Brush Nozzle:** Suitable for delicate surfaces, upholstery, keyboards, and furniture. The soft bristles help to loosen dust without scratching.



Image: A user demonstrating the handheld use of the vacuum cleaner with the brush attachment to clean a sofa.

- **Handheld Mode:** Detach the extension tube to use the main unit as a compact handheld vacuum for quick clean-ups, car interiors, or stairs.



Image: The CLEANmaxx vacuum cleaner in handheld mode, being used to efficiently clean a set of stairs.

CARE AND MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

The bagless cyclonic technology features an easy-to-empty dust container.

1. Locate the dustbin release button on the main unit.
2. Press the button to detach the dustbin.
3. Hold the dustbin over a trash can and open the bottom flap to empty the contents.
4. Close the flap and reattach the dustbin to the main unit until it clicks securely.

Cleaning the Filters

The vacuum cleaner uses a two-chamber filtration system with a stainless steel filter and a foam filter. Clean them regularly to

maintain suction power.

1. Remove the dustbin as described above.
2. Carefully remove the stainless steel filter and the foam filter from the dustbin.
3. Tap the filters gently to remove loose dust. For a more thorough cleaning, rinse them under running water.
4. Ensure the filters are completely dry before reinserting them into the dustbin and reattaching the dustbin to the vacuum cleaner. Do not use the vacuum cleaner with wet filters.

Cleaning the Power Rotation Brush

Periodically check the Power Rotation Electric Brush for tangled hair or debris.

1. Turn off the vacuum cleaner and detach the Power Rotation Electric Brush.
2. Use scissors or a brush to remove any hair, threads, or debris wrapped around the brush roller.
3. Ensure the brush roller spins freely before reattaching the brush head.

TROUBLESHOOTING

If you encounter any issues with your CLEANmaxx vacuum cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged or not properly inserted.	Charge the battery fully. Ensure the battery is securely inserted into the main unit.
Low suction power.	Dustbin is full. Filters are clogged. Nozzle/tube is blocked.	Empty the dustbin. Clean the filters. Check for and remove any blockages in the nozzles, extension tube, or main unit.
Power Rotation Electric Brush is not spinning.	Brush roller is tangled with hair/debris. Brush head is not properly attached.	Clean the brush roller. Ensure the brush head is securely attached to the extension tube or main unit.
Battery runtime is shorter than expected.	Battery not fully charged. Battery degradation over time.	Ensure the battery is fully charged before use. If battery life significantly decreases, consider replacing the battery.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	CLEANmaxx
Model Number	CLEANmaxx Akku-Zyklon-Staubsauger
Color	Blue
Package Dimensions (L x W x H)	72.5 x 28 x 14.4 cm
Power	100 Watts
Voltage	22.2 Volts
Noise Level	75 dB

Feature	Specification
Runtime	Up to 25 minutes
Features	Bagless, Two-chamber filtration system, LED battery level indicator
Item Weight	1.76 Kilograms
ASIN	B082FCBHZL
Date First Available	21 July 2022
Manufacturer	ds Produkte GmbH
Filter Type	Stainless Steel, Foam
Surface Recommendation	Hard Floor, Carpet
Power Source	Battery Powered (AC Adapter for charging)
Included Components	Wall mount, aluminum plug-in tube, various accessories
Charge Time	5 hours

WARRANTY AND CUSTOMER SUPPORT

Specific warranty information for the CLEANmaxx Pro Power Cordless Cyclone Vacuum Cleaner is not provided in this manual. For details regarding warranty coverage, claims, or technical support, please refer to the product packaging, the retailer from whom you purchased the product, or contact the manufacturer directly.

Manufacturer: ds Produkte GmbH