

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Accutime](#) /

› [LOL Surprise Kids Smart Watch User Manual](#)

Accutime LOL4296AZ

LOL Surprise Kids Smart Watch User Manual

Model: LOL4296AZ | Brand: Accutime

INTRODUCTION

Welcome to the user manual for your new LOL Surprise Kids Smart Watch! This interactive timepiece is designed to provide children with a fun and engaging experience, combining entertainment with practical features. It includes a camera, voice recorder, various games, and tools like an alarm and step counter. Please read this manual carefully to ensure proper use and to maximize your child's enjoyment of the watch.



Image: The LOL Surprise Kids Smart Watch in Checker Pink, showcasing its vibrant display and patterned strap.

WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are present:

- LOL Surprise Kids Smart Watch (Model: LOL4296AZ)

- USB Charging Cable
- Instruction Manual (this document)



Image: The LOL Surprise Kids Smart Watch displayed within its clear retail packaging, highlighting the watch and its features.

PRODUCT OVERVIEW

Familiarize yourself with the various components of your smart watch:

Touchscreen Display: The main interface for interacting with the watch's features.

Camera: Located above the display, used for taking photos and videos.

USB Port: Located on the side, used for charging and data transfer.

Power/Home Button: Typically on the side, used to turn the watch on/off and return to the home screen.

Microphone: For voice recording.

Speaker: For audio playback.

Adjustable Strap: Designed for comfortable wear on a child's wrist.



Image: A side view of the smart watch, highlighting the USB port and side button.



Image: The back of the smart watch, showing the LOL Surprise branding and model information.

SETUP

1. Initial Charging

Before first use, fully charge the smart watch. Connect the included USB charging cable to the watch's USB port and the other end to a standard USB power adapter (not included) or a computer's USB port. The watch typically takes a few hours to fully charge. A battery icon on the screen will indicate charging status.

2. Powering On/Off

To turn the watch on, press and hold the Power/Home button until the screen lights up. To turn it off, press and hold the Power/Home button until a power-off option appears on the screen, then confirm.

3. Setting Time and Date

Upon first power-on or after a full battery drain, you may need to set the correct time and date. Navigate to the 'Settings' menu on the watch, then select 'Time' or 'Date' to adjust. Follow the on-screen prompts to set the current time and date.

OPERATING INSTRUCTIONS

Basic Navigation

The watch features a touchscreen display for easy navigation. Swipe left or right to browse through different applications and features. Tap an icon to open an application. Press the Power/Home button to return to the watch face.

Changing Watch Faces

The watch comes with 10 unique LOL Surprise watch faces. From the main watch face screen, tap and hold the screen, then swipe left or right to cycle through the available designs. Tap to select your preferred watch face.



Image: A visual representation of the ten different LOL Surprise character watch faces available on the device.

Using the Camera

To take photos or record videos, locate and tap the 'Camera' icon on the watch. The screen will display a live view from the camera. Tap the camera icon on the screen to take a photo, or the video icon to start/stop recording. Photos and videos are saved to the watch's internal memory.



Image: A close-up of the watch screen displaying a vibrant LOL Surprise watch face with characters and the current time.

Using the Voice Recorder

Find and tap the 'Voice Recorder' icon. Tap the 'Record' button to begin recording audio. Tap 'Stop' to end the recording. Recordings can be played back directly from the watch.

Games

The watch includes 6 entertaining games. Tap the 'Games' icon to view the list of available games. Select a game to start playing. Follow the on-screen instructions for each game.

Pedometer (Step Counter)

The built-in pedometer tracks your child's steps throughout the day. Tap the 'Pedometer' or 'Step Counter' icon to view the current step count. This feature encourages active play and helps monitor daily activity.

Alarm, Timer, and Stopwatch

Access these time management tools by tapping their respective icons.

- **Alarm:** Set multiple alarms for reminders, wake-up calls, or daily routines.
- **Timer:** Set a countdown timer for specific activities.
- **Stopwatch:** Measure elapsed time for games or activities.

Calculator

A basic calculator is included for simple arithmetic. Tap the 'Calculator' icon to open and use it.

MAINTENANCE

Cleaning

Wipe the watch and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the USB port or other openings. Do not use harsh chemicals or abrasive cleaners.

Battery Care

The watch uses a Lithium Polymer battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Do not overcharge the watch; disconnect it once fully charged.
- Store the watch in a cool, dry place when not in use for extended periods.

Storage

When storing the watch, especially for long periods, ensure it is partially charged (around 50%) and kept in a dry environment away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Solution
Watch does not turn on.	Ensure the watch is fully charged. Connect to the USB charger for at least 30 minutes.
Screen is unresponsive.	Try restarting the watch by holding the Power/Home button. If unresponsive, allow the battery to fully drain and then recharge.
Cannot take photos/videos.	Check if the watch's memory is full. Delete old photos/videos if necessary.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Limit continuous use of camera or games.
Watch is frozen.	Perform a soft reset by pressing and holding the Power/Home button for 10-15 seconds until the watch restarts.

SPECIFICATIONS

Model Number: LOL4296AZ

ASIN: B082FP39JW

Brand: Accutime

Product Dimensions: 6.1 x 3.6 x 3.3 inches

Item Weight: 7.8 ounces

Screen Size: 40 Millimeters

Memory Storage Capacity: 512 MB

Operating System: Accutime OS

Battery Type: 1 Lithium Polymer battery (included)

Battery Capacity: 400 mAh

Connectivity Technology: Bluetooth

Special Features: Alarm Clock, Audio Recording, Camera, Pedometer, Time Display

Manufacturer: Accutime Watch Corp.

Date First Available: December 6, 2019

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Accutime website. Keep your purchase receipt as proof of purchase for any warranty claims.

You can also visit the [Accutime Store on Amazon](#) for more information and product updates.