



Manuals.plus /

› LyxPro /

› LyxPro 30 Inch Electric Guitar Starter Kit Instruction Manual

LyxPro LYXEGBK30BL

LyxPro 30 Inch Electric Guitar Starter Kit Instruction Manual

Model: LYXEGBK30BL

1. PRODUCT OVERVIEW

The LyxPro 30 Inch Electric Guitar Starter Kit is designed for beginner and intermediate players, offering a complete package to start playing immediately. This kit includes a 3/4 size electric guitar, a 20-watt amplifier, and essential accessories.

Included Components:

- 30 Inch Electric Guitar (Blue, Right Handed)
- 20 Watt Amplifier
- Soft Case Gig Bag
- Digital Clip-On Tuner
- Guitar Cable
- Two Picks
- Shoulder Strap
- Extra Strings (Set of 6)

COMPLETE ALL-IN-ONE FULL GUITAR KIT

- CARRY BAG
- COMFORTABLE SHOULDER STRAP
- 20 W AMP
- PICKS
- DIGITAL TUNER
- GUITAR CABLE
- EXTRA STRINGS



Figure 1: All components included in the LyxPro 30 Inch Electric Guitar Starter Kit.

2. SETUP GUIDE

2.1 Connecting the Guitar to the Amplifier

1. Ensure both the guitar and amplifier are powered off.
2. Locate the input jack on the electric guitar, typically on the lower edge of the guitar body.
3. Insert one end of the provided guitar cable into the guitar's input jack.
4. Locate the "INPUT" jack on the front panel of the 20-watt amplifier.
5. Insert the other end of the guitar cable into the amplifier's "INPUT" jack.
6. Plug the amplifier's power cord into a standard electrical outlet.
7. Turn on the amplifier using the "POWER" switch.



Figure 2: Guitar body with input jack for cable connection.

2.2 Tuning the Guitar

Accurate tuning is crucial for proper sound. Use the included digital clip-on tuner for best results.

1. Attach the digital clip-on tuner to the headstock of the guitar.
2. Turn on the tuner. Most tuners automatically detect the string being played.
3. Pluck the lowest string (thickest string, E). The tuner display will show the detected note.
4. Adjust the corresponding tuning peg on the headstock. Turn clockwise to raise the pitch, counter-clockwise to lower it.
5. Continue adjusting until the tuner indicates the correct note (E) and the needle is centered, usually turning green.
6. Repeat this process for all six strings: E (low), A, D, G, B, E (high).

DIGITAL TUNER



**STAY IN TUNE
WITH THE INCLUDED
CLIP-ON DIGITAL TUNER**

Figure 3: Digital clip-on tuner attached to the guitar headstock.

3. OPERATING THE AMPLIFIER

The 20-watt amplifier provides various controls to shape your guitar's sound.

COMES COMPLETE WITH A 20W AMP



Figure 4: LyxPro 20-watt amplifier control panel.

Amplifier Controls:

- **INPUT:** Connect your guitar cable here.
- **GAIN:** Adjusts the amount of distortion or overdrive. Higher gain settings produce a more aggressive, distorted sound.
- **BOOST (On/Off Switch):** Engages or disengages an additional gain boost for heavier distortion.
- **VOLUME:** Controls the overall output level (loudness) of the amplifier.
- **TREBLE:** Adjusts the high-frequency response, making the sound brighter or darker.
- **MIDDLE:** Adjusts the mid-range frequency response, affecting the presence and punch of the sound.
- **BASS:** Adjusts the low-frequency response, adding depth or reducing muddiness.
- **PHONE:** Headphone output jack for silent practice. Plugging in headphones will mute the main speaker.
- **AUX:** Auxiliary input jack for connecting external audio devices (e.g., MP3 player, phone) to play along with music.
- **POWER (On/Off Switch):** Turns the amplifier on or off.

4. MAINTENANCE

4.1 String Care and Replacement

- Wipe down strings after each use with a clean, dry cloth to remove oils and sweat, extending their lifespan.
- Replace strings when they sound dull, become discolored, or break. Refer to online tutorials for proper string changing techniques if unfamiliar.
- Use the included extra set of strings as a replacement.

4.2 Cleaning

- Use a soft, dry cloth to clean the guitar body, neck, and headstock. Avoid abrasive cleaners.
- For the amplifier, wipe the exterior with a dry cloth. Do not spray liquids directly onto the amplifier.

4.3 Storage

- Store the guitar in its soft case gig bag when not in use to protect it from dust, scratches, and minor impacts.
- Keep the guitar and amplifier in a stable environment, away from extreme temperatures, humidity, and direct sunlight.

5. TROUBLESHOOTING

- **No Sound from Amplifier:**
 - Ensure the amplifier is plugged in and the power switch is ON.
 - Check that the guitar cable is securely connected to both the guitar and the amplifier.
 - Verify the guitar's volume knob is turned up.
 - If headphones are plugged into the "PHONE" jack, unplug them to enable the main speaker.
- **Guitar Not Staying in Tune:**
 - New strings often stretch and require frequent tuning. Tune the guitar repeatedly until the strings stabilize.
 - Ensure strings are properly wound around the tuning pegs.
 - Check for any loose tuning pegs or bridge components.
- **Buzzing Sound:**
 - Check for loose connections in the guitar cable or amplifier input.
 - Ensure the guitar's strings are not too low, causing them to buzz against the frets. This may require professional adjustment.
 - Try plugging the amplifier into a different electrical outlet to rule out electrical interference.

6. SPECIFICATIONS



Figure 5: Key features and dimensions of the LyxPro 30 Inch Electric Guitar.

Feature	Description
Model Name	LYXEGBK30BL
Instrument Size	30" Right Handed
Color	Blue
Number of Strings	6
Top Material Type	Maple Wood
Body Material	Wood (Phoenix wood)
Neck Material Type	Maple
Fretboard Material Type	Maple Wood
Guitar Pickup Configuration	S-S-S (Single-Single-Single)
String Material Type	Nickel Steel
Guitar Bridge System	Tremolo
Amplifier Power	20 Watt
Amplifier Connector Type	1/4" (6.35mm) audio plug

7. WARRANTY & SUPPORT

7.1 Warranty Information

This LyxPro product is covered by a **1-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

7.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your LyxPro Electric Guitar Starter Kit, please contact our customer support team. Refer to the contact information provided on the product packaging or the official LyxPro website.