

**ERBAUER ECDT18-Li-2**

# Erbauer ECDT18-Li-2 Brushless Cordless Hammer Drill 18V User Manual

Model: ECDT18-Li-2

## 1. INTRODUCTION

Thank you for choosing the Erbauer ECDT18-Li-2 Brushless Cordless Hammer Drill. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new tool. Please read this manual thoroughly before first use and keep it for future reference.

### 1.1 General Safety Information

Always observe basic safety precautions when using power tools to reduce the risk of fire, electric shock, and personal injury. Wear appropriate personal protective equipment (PPE) such as safety glasses, hearing protection, and gloves. Ensure your work area is well-lit and clear of obstructions. Keep children and bystanders away while operating the tool.

### 1.2 Product Overview

The Erbauer ECDT18-Li-2 is a powerful 18V cordless hammer drill featuring a brushless motor for enhanced performance and durability. It offers 24 torque settings and a 3-in-1 function for drilling, percussion drilling, and screwing. The tool is designed for heavy-duty applications and is compatible with all Erbauer EXT 18V batteries and chargers (sold separately).



**Figure 1:** Erbauer ECDT18-Li-2 Brushless Cordless Hammer Drill. This image displays the main body of the drill, including the chuck, motor housing, handle, and trigger. The auxiliary handle and battery are not shown as they are separate components.

## 2. SETUP

---

### 2.1 Battery Installation and Removal

This tool operates with an Erbauer EXT 18V battery (not included). Ensure the battery is fully charged before use.

- **To Install:** Align the battery with the receptacle at the base of the drill handle. Slide the battery into place until it clicks securely.
- **To Remove:** Press the battery release button (usually located on the battery pack) and slide the battery out of the tool.

### 2.2 Attaching the Auxiliary Handle

The auxiliary handle provides additional control and safety, especially during high-torque applications or hammer drilling.

1. Loosen the auxiliary handle by rotating it counter-clockwise.
2. Slide the handle over the chuck and onto the front of the drill body.
3. Adjust the handle to your desired position for optimal grip and control.
4. Tighten the handle by rotating it clockwise until it is securely fastened.

### 2.3 Chuck Operation (Installing/Removing Drill Bits)

The drill features a 13mm self-tightening metal chuck for quick and secure bit changes.

1. **To Open the Chuck:** Hold the rear part of the chuck firmly and rotate the front part counter-clockwise until the jaws are wide enough to accept the bit.
2. **To Install a Bit:** Insert the drill bit or accessory fully into the chuck jaws.
3. **To Close and Tighten the Chuck:** Hold the rear part of the chuck firmly and rotate the front part clockwise until the bit is securely gripped. The self-tightening mechanism will ensure a firm hold.
4. **To Remove a Bit:** Reverse the tightening process by rotating the front part of the chuck counter-clockwise.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Mode Selection

The Erbauer ECDT18-Li-2 offers three operating modes: Screwing, Drilling, and Hammer Drilling. Select the appropriate mode using the mode selector ring located behind the chuck.

- **Screwing Mode (Screw Icon):** For driving and removing screws. Use with appropriate torque settings.
- **Drilling Mode (Drill Bit Icon):** For drilling into wood, metal, and plastics.
- **Hammer Drilling Mode (Hammer Icon):** For drilling into masonry and concrete. Use with masonry drill bits.

### 3.2 Torque Settings

The drill features 24 torque settings, allowing you to adjust the amount of rotational force applied. This prevents over-tightening screws and damaging materials. Rotate the torque adjustment ring (located behind the mode selector) to select the desired setting. Higher numbers indicate greater torque.

- Use lower torque settings for smaller screws or softer materials.
- Use higher torque settings for larger screws or harder materials.
- For drilling, set the ring to the drill icon (usually the highest setting) to bypass the clutch and deliver maximum power.

### 3.3 Variable Speed Trigger and Direction Control

- **Variable Speed Trigger:** The trigger controls the speed of the drill. Pressing the trigger further increases the speed.
- **Forward/Reverse Selector:** A switch located above the trigger allows you to select forward (clockwise) or reverse (counter-clockwise) rotation. Ensure the switch is in the central position to lock the trigger and prevent accidental starting.

### 3.4 LED Work Light

The integrated LED light illuminates the work area when the trigger is pressed, improving visibility in dimly lit conditions.

### 3.5 Belt Clip

The convenient belt clip allows for easy transport and temporary storage of the tool when not in active use. Attach it to your belt or waistband for quick access.

## 4. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your tool.

### 4.1 Cleaning

- Always disconnect the battery before cleaning.
- Wipe the tool's exterior with a clean, damp cloth. Do not use harsh chemicals, solvents, or abrasive cleaners.
- Keep the ventilation openings clear of dust and debris to prevent overheating. Use compressed air if necessary.
- Clean the chuck jaws regularly to ensure proper grip on bits.

### 4.2 Storage

- Store the tool and battery in a cool, dry place, away from direct sunlight and moisture.
- Keep out of reach of children and unauthorized persons.
- Remove the battery from the tool before storing for extended periods.

## 5. TROUBLESHOOTING

---

If you encounter issues with your Erbauer ECDT18-Li-2 drill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drill does not start	Battery not installed correctly or discharged; Forward/Reverse selector in neutral position.	Ensure battery is fully charged and properly inserted. Move selector to forward or reverse position.
Loss of power during operation	Battery charge low; Overload.	Recharge battery. Reduce pressure on the tool or use a lower torque setting.
Chuck not holding bit securely	Chuck jaws dirty or worn; Bit not inserted fully.	Clean chuck jaws. Ensure bit is inserted completely and chuck is tightened firmly.
Excessive vibration or noise	Damaged bit; Loose components.	Replace damaged bit. Check for any loose parts and tighten if possible. If problem persists, discontinue use and contact support.

If the problem persists after attempting these solutions, please contact Erbauer customer support or an authorized service center.

## 6. SPECIFICATIONS

<b>Brand</b>	ERBAUER
<b>Model</b>	ECDT18-Li-2
<b>Voltage</b>	18 V
<b>Motor Type</b>	Brushless
<b>Max Torque</b>	120 Nm (Hard Torque)
<b>Torque Settings</b>	24
<b>Chuck Size</b>	13 mm Self-tightening Metal Chuck
<b>Functions</b>	Drilling, Percussion Drilling, Screwing (3-in-1)
<b>Power Source</b>	Battery Powered (Erbauer EXT 18V, sold separately)
<b>Material</b>	Metal (Gear Housing)
<b>Included Components</b>	Auxiliary Handle

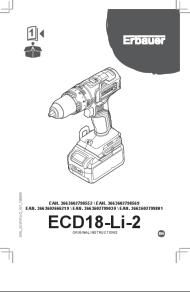
## 7. WARRANTY AND SUPPORT

This Erbauer product is backed by the original manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Erbauer website for detailed warranty terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact your retailer or Erbauer customer support. Ensure you have your proof of purchase and the product model number (ECDT18-Li-2) available when contacting support.

© 2023 Erbauer. All rights reserved.

## Related Documents - ECDT18-Li-2

	<p><a href="#"><u>Erbauer ECDT18-Li-2 18V Cordless Combi Drill User Manual</u></a></p> <p>This manual provides essential safety instructions, product details, operating procedures, maintenance guidelines, and troubleshooting tips for the Erbauer ECDT18-Li-2 18V cordless combi drill.</p>
	<p><a href="#"><u>Erbauer ERH18-Li 18V Cordless SDS Plus Hammer Drill User Manual</u></a></p> <p>Comprehensive user manual for the Erbauer ERH18-Li 18V Cordless SDS Plus Hammer Drill, covering safety, operation, maintenance, specifications, and warranty information.</p>
	<p><a href="#"><u>Erbauer ECD18-Li-2 Cordless Combi Drill User Manual</u></a></p> <p>Comprehensive user manual for the Erbauer ECD18-Li-2 cordless combi drill, covering safety instructions, product description, assembly, usage, care and maintenance, and guarantee information.</p>
	<p><a href="#"><u>Erbauer ERH18-Li 18V Cordless Rotary Hammer: User Manual and Safety Instructions</u></a></p> <p>This document provides comprehensive instructions, safety warnings, and technical specifications for the Erbauer ERH18-Li 18V cordless rotary hammer. Learn about product features, assembly, operation, maintenance, and guarantee information.</p>

	<p><a href="#"><u>Erbauer ECS18-Li Cordless Circular Saw User Manual</u></a></p> <p>Comprehensive user manual for the Erbauer ECS18-Li 18V cordless circular saw, covering safety instructions, product description, assembly, operation, maintenance, and troubleshooting.</p>
	<p><a href="#"><u>Erbauer EBCD18Li-2 Cordless Combi Drill: User Manual and Safety Guide</u></a></p> <p>Comprehensive instruction manual for the Erbauer EBCD18Li-2 18V cordless combi drill, covering safety instructions, product description, operation, technical specifications, troubleshooting, care, maintenance, and guarantee information.</p>