



Manuals.plus /

› Dura Faucet /

› Dura Faucet RV Streamline Single Handle Pull-Down Kitchen Sink Faucet Instruction Manual

Dura Faucet DF-NMK530-XX

Dura Faucet RV Streamline Single Handle Pull-Down Kitchen Sink Faucet

Model: DF-NMK530-XX

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Dura Faucet RV Streamline Single Handle Pull-Down Kitchen Sink Faucet. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your product.

PRODUCT FEATURES

- **Single Handle Control:** Smooth-turning single-lever for precise control of water temperature and stream strength.
- **Pull-Down Sprayer:** Detachable sprayer with dual functions (aerated stream and spray stream) for versatile use.
- **360-Degree Swivel:** Provides full sink access and flexibility.
- **Durable Construction:** Features a durable disc cartridge for leak-free operation and a corrosion- and rust-resistant stainless steel body.
- **Lead-Free Certified:** Ensures safe water usage.
- **Installation Options:** Designed for 1-hole installation, with an optional deck plate included for wider sink openings.
- **Standard Connections:** Equipped with 1/2-inch compression fittings.



Image Description: A diagram highlighting key features of the Dura Faucet. It shows an icon for a pull-down toggling sprayer, a circular arrow for 360-degree swivel, and an icon indicating an optional deck plate is included. The main faucet body is shown in chrome finish.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Dura Faucet RV Streamline Single Handle Pull-Down Kitchen Sink Faucet
- Optional Deck Plate
- Installation Hardware (nuts, washers, gaskets, supply lines)

SAFETY INFORMATION

- Always turn off the main water supply before beginning any plumbing work.
- Wear appropriate personal protective equipment, such as safety glasses and gloves.

- Ensure all connections are secure to prevent leaks. Do not overtighten.
- If you are unsure about any step, consult a qualified plumber.

SETUP AND INSTALLATION

This faucet is designed for a single-hole installation. An optional deck plate is included for installations requiring a wider base or covering additional holes.

1. **Prepare the Sink:** Ensure the mounting surface is clean and dry. If using the optional deck plate, place it over the sink hole(s).
2. **Install the Faucet:** Insert the faucet body through the hole in the sink (and deck plate, if used). Ensure the faucet is oriented correctly.
3. **Secure the Faucet:** From underneath the sink, slide the rubber washer, metal washer, and mounting nut onto the threaded shank. Hand-tighten the mounting nut, then use a basin wrench to fully secure the faucet. Do not overtighten.
4. **Connect Water Supply Lines:** Connect the hot and cold water supply lines from the faucet to your water supply valves. The faucet uses 1/2-inch compression fittings. Ensure connections are tight but do not overtighten.
5. **Connect Sprayer Hose:** Connect the pull-down sprayer hose to the designated port on the faucet's underside. Attach the counterweight to the sprayer hose at the indicated position to ensure smooth retraction.
6. **Test for Leaks:** Turn on the main water supply slowly and check all connections for leaks. Operate the faucet to ensure proper water flow and temperature control.

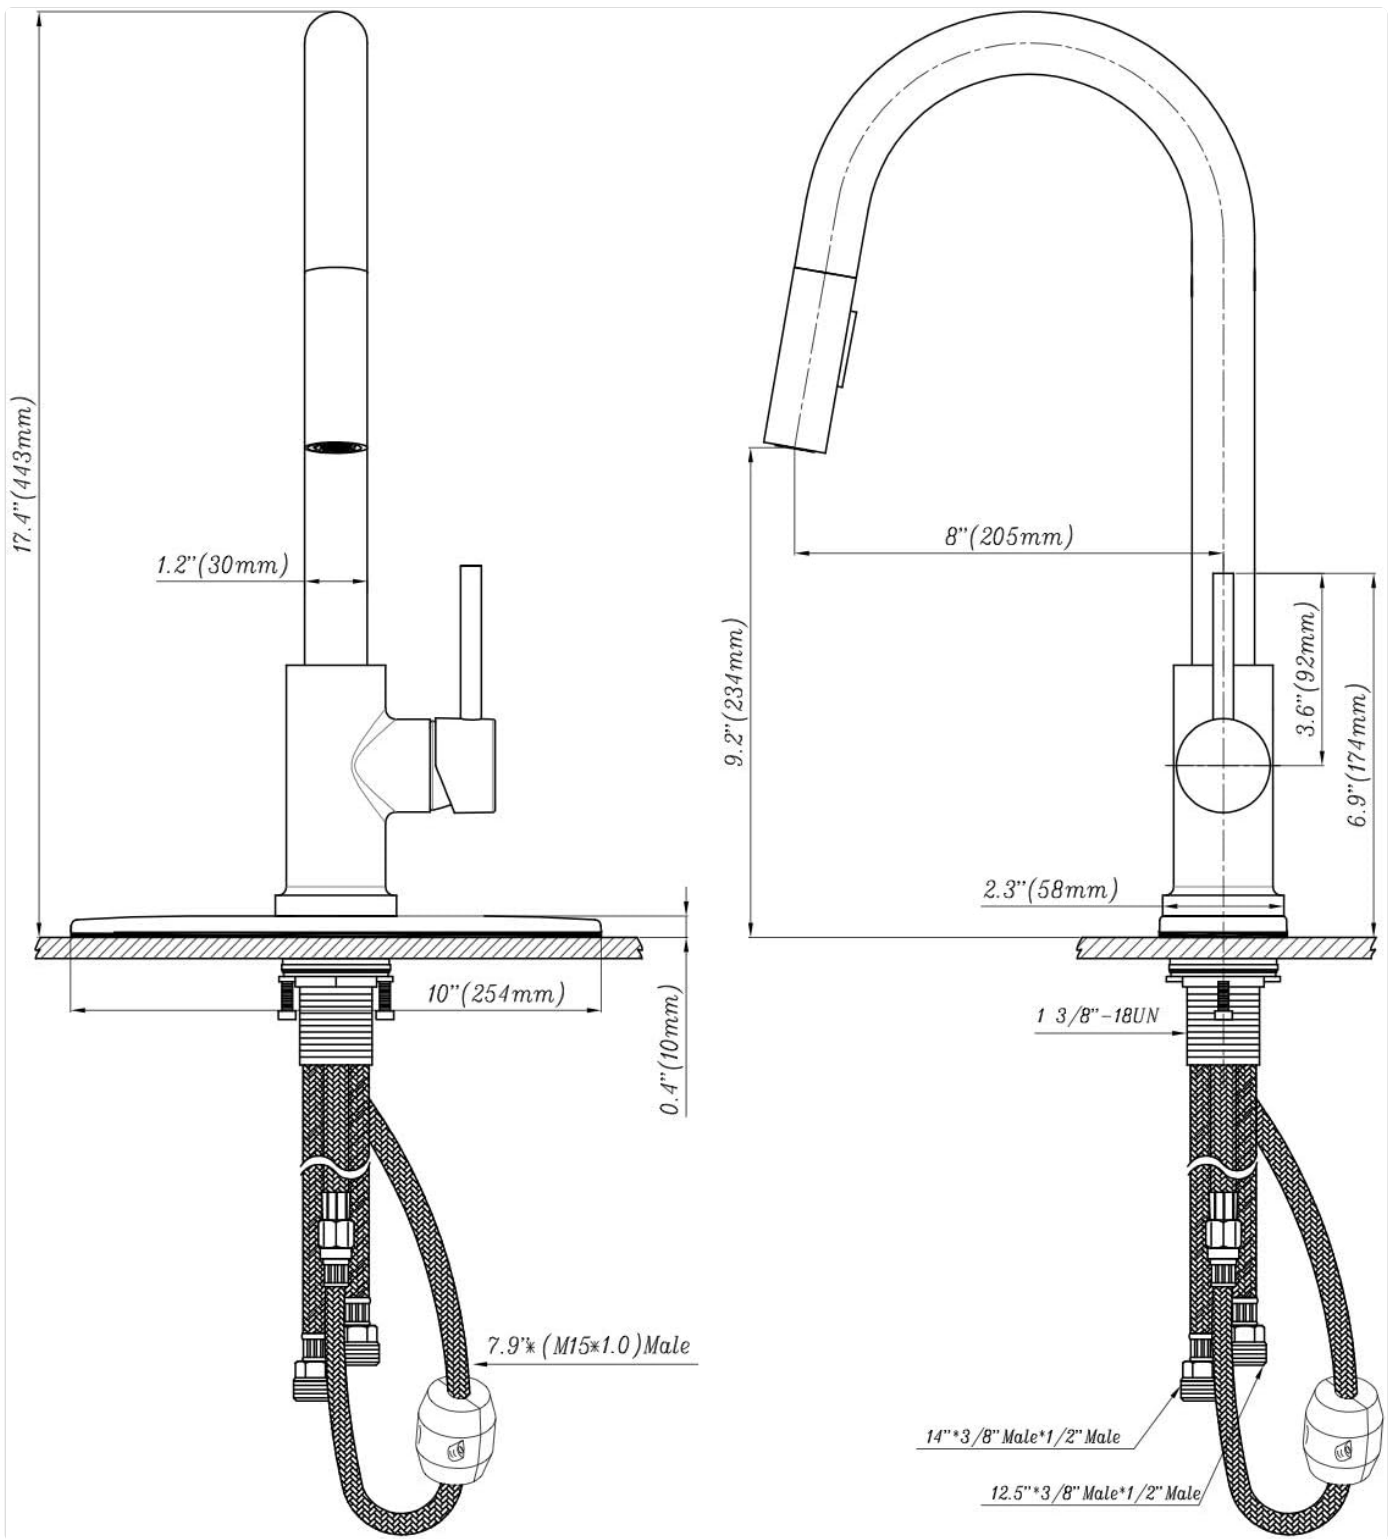


Image Description: A technical drawing displaying the dimensions and installation components of the Dura Faucet. It shows side and front views with measurements in inches and millimeters, including the faucet height, spout reach, and details of the mounting shank and supply line connections.



Image Description: The Dura Faucet RV Streamline kitchen faucet in polished chrome, shown installed with its optional deck plate on a sink surface. The single handle is visible on the right side of the base.

OPERATING INSTRUCTIONS

1. Water Flow and Temperature Control:

- Lift the single handle to increase water flow.
- Move the handle to the left for hot water and to the right for cold water.
- Lower the handle to turn off the water.

2. Using the Pull-Down Sprayer:

- Grasp the sprayer head and pull it down from the spout.
- Press the button on the sprayer head to toggle between the aerated stream and the spray stream functions.
- After use, guide the sprayer head back into the spout until it securely locks into place. The counterweight on the hose will assist in retraction.

3. **Swivel Function:** The faucet spout can swivel 360 degrees to provide maximum coverage and flexibility within your sink area.



Image Description: A person's hands are shown washing broccoli under the faucet, which is in a brushed satin nickel finish. The water is flowing from the faucet's pull-down sprayer in a steady stream, illustrating the faucet's operational use in a kitchen setting.



Image Description: A hand holds the pull-down sprayer of the faucet, directing a spray of water over various vegetables in a kitchen sink. The sprayer hose is extended, showcasing its flexibility and the spray function.

MAINTENANCE

- **Cleaning:** Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Aerator Maintenance:** If water flow decreases, the aerator may be clogged. Unscrew the aerator from the sprayer head, clean any debris, and rinse thoroughly before reattaching.
- **Leak Checks:** Periodically inspect all connections for signs of leaks. Tighten any loose connections as needed, but do not overtighten.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator; partially closed supply valve.	Clean the aerator. Ensure water supply valves are fully open.
Leaks from Faucet Base	Loose mounting nut; damaged gasket.	Tighten the mounting nut. Inspect and replace gaskets if damaged.
Leaks from Supply Line Connections	Loose connections; damaged O-rings.	Tighten connections. Inspect and replace O-rings if damaged.
Sprayer Does Not Retract Fully	Counterweight improperly positioned or obstructed.	Adjust the position of the counterweight on the sprayer hose. Ensure the hose path is clear of obstructions.

SPECIFICATIONS

Brand	Dura Faucet
Model Name	DF-NMK530-CP (Series: DF-NMK530-XX)
Material	Stainless Steel
Finish Type	Chrome Polished
Mounting Type	Deck Mount
Number of Handles	1
Hole Count	1
Installation Type	Single Hole
Maximum Flow Rate	2 Gallons Per Minute
Item Weight	5.5 Pounds
UPC	810127820241

WARRANTY INFORMATION

The Dura Faucet RV Streamline Single Handle Pull-Down Kitchen Sink Faucet comes with a **Limited Lifetime Warranty**. Please refer to the official Dura Faucet website or contact customer support for full warranty terms and conditions. A 1-year warranty is also mentioned in some specifications.

Dura Faucet is an American company committed to quality and customer satisfaction.

CUSTOMER SUPPORT

For technical assistance, warranty claims, or replacement parts, please contact Dura Faucet customer support. Contact information can typically be found on the official Dura Faucet website or product packaging.

Website: Visit the Dura Faucet Store on Amazon (for general product information)