

[manuals.plus](#) /› [ERBAUER](#) /› [Erbauer Cordless Brushless Impact Drill ECD18-Li-2 User Manual](#)

ERBAUER ECD18-Li-2

Erbauer Cordless Brushless Impact Drill ECD18-Li-2 User Manual

Model: ECD18-Li-2

1. PRODUCT OVERVIEW

The Erbauer ECD18-Li-2 18V Cordless Brushless Impact Drill is a compact and lightweight tool, ideal for accessing confined spaces. Its advanced brushless motor technology delivers enhanced power, higher torque, extended runtime, and a prolonged motor lifespan, ensuring revolutionary performance and autonomy.



Figure 1: The Erbauer ECD18-Li-2 Cordless Brushless Impact Drill. This image shows the drill unit with a battery pack attached, highlighting its compact design and the chuck at the front.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electric tools to reduce the risk of fire, electric shock, and personal injury.

- **Read the Manual:** Familiarize yourself with all instructions and warnings before operation.
- **Wear Personal Protective Equipment (PPE):** Always wear eye protection, hearing protection, and suitable gloves.
- **Work Area Safety:** Keep your work area clean and well-lit. Cluttered or dark areas invite accidents.
- **Electrical Safety:** Do not expose power tools to rain or wet conditions. Avoid body contact with earthed or grounded surfaces.

- **Tool Use and Care:** Do not force the power tool. Use the correct power tool for your application. Ensure the switch is in the off-position before connecting to power source or battery pack.
- **Secure Workpiece:** Always secure the workpiece to prevent movement during drilling.
- **Maintain Tool:** Keep cutting tools sharp and clean. Follow instructions for lubricating and changing accessories.
- **Battery Safety:** Only use specified battery packs and chargers. Do not short-circuit a battery pack. Do not expose battery packs to heat or fire.

3. PACKAGE CONTENTS

Upon opening the package, ensure all items listed below are present and in good condition.

- Erbauer ECD18-Li-2 Cordless Brushless Impact Drill Unit
- 2 x 4.0 Ah Li-ion Batteries
- Battery Charger
- Instruction Manual
- Carry Case
- Belt Clip

4. PRODUCT FEATURES

The Erbauer ECD18-Li-2 drill is equipped with several features designed for efficiency and user comfort:

- **Brushless Motor Technology:** Provides increased power, higher torque, longer runtime, and extended motor life.
- **EXT Universal Battery System:** Compatible with all Erbauer EXT 18V batteries, allowing for versatile use across multiple tools.
- **Keep Cool Technology:** Actively manages battery temperature to prevent overheating, offering more power, longer runtime, and extended battery life. The 4.0 Ah Keep Cool battery provides 25% more runtime than a standard Erbauer battery.
- **Fast Charging:** Full battery charge in approximately 50 minutes.
- **3-in-1 Functionality:** Easily switch between impact drilling, standard drilling, and screwdriving modes.
- **13mm Keyless Metal Chuck:** Allows for quick, one-handed bit changes and features automatic spindle lock. Accommodates large drill bits for heavy-duty tasks.
- **Trigger-Activated LED Light:** Illuminates the work area for precise drilling.
- **Convenient Belt Clip:** For easy transport and accessibility.
- **Soft Grip Handle:** Enhances user comfort during prolonged use.

5. SETUP

5.1 Charging the Battery

1. Connect the battery charger to a suitable power outlet.
2. Slide the 4.0 Ah Li-ion battery pack onto the charger until it clicks into place.
3. The charger's indicator light will show the charging status. A full charge typically takes 50 minutes.
4. Once fully charged, disconnect the battery from the charger.

5.2 Attaching and Detaching the Battery

- **Attaching:** Align the battery pack with the base of the drill handle and slide it in until it clicks securely into place.

- **Detaching:** Press the battery release button (usually located on the sides of the battery pack) and slide the battery pack off the drill.

5.3 Installing and Removing Drill Bits

1. Ensure the drill is switched off and the battery is removed for safety.
2. To open the chuck, rotate the front part of the 13mm keyless metal chuck counter-clockwise until the jaws are wide enough to insert the drill bit.
3. Insert the drill bit fully into the chuck jaws.
4. Rotate the front part of the chuck clockwise to tighten the jaws firmly around the drill bit. The automatic spindle lock will assist in securing the bit.
5. To remove, rotate the chuck counter-clockwise to loosen the jaws and pull the drill bit out.

6. OPERATING INSTRUCTIONS

6.1 Selecting Operating Mode (3-in-1 Function)

The drill features a mode selector ring, typically located behind the chuck, allowing you to choose between three functions:

- **Screwdriving Mode (Screw icon):** For driving and removing screws. Use with appropriate torque settings.
- **Drilling Mode (Drill bit icon):** For drilling into wood, plastic, and metal.
- **Impact Drilling Mode (Hammer icon):** For drilling into masonry and concrete.

Rotate the mode selector ring to the desired icon.

6.2 Adjusting Torque and Speed

- **Torque Setting:** For screwdriving, adjust the torque collar (numbered ring behind the mode selector) to prevent over-tightening or stripping screws. Start with a lower setting and increase as needed.
- **Speed Control:** The drill features variable speed control via the trigger. Press the trigger gently for lower speeds and harder for higher speeds. A speed selector switch (usually on top of the drill) allows for high or low-speed ranges.

6.3 Using the Trigger and LED Light

The drill is activated by pressing the main trigger switch. The integrated LED light will automatically illuminate the work area when the trigger is pressed, providing better visibility for precise work.

6.4 Using the Belt Clip

Attach the provided belt clip to either side of the drill (if applicable) for convenient temporary storage and easy access while working.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your drill.

- **Cleaning:** After each use, wipe down the drill with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners. Keep ventilation openings clear of dust and debris.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store fully discharged batteries for extended periods.
- **Chuck Maintenance:** Periodically clean the chuck jaws to ensure proper grip on drill bits.
- **Storage:** Store the drill and its accessories in the provided carry case in a dry, secure location, out of reach of

children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drill does not start.	Battery not charged or not properly inserted.	Charge the battery. Ensure battery is fully inserted until it clicks.
Reduced power or short runtime.	Battery not fully charged or nearing end of life.	Fully charge the battery. If issue persists, battery may need replacement.
Chuck not holding bit securely.	Chuck jaws are dirty or worn.	Clean chuck jaws. Ensure bit shank is clean. Tighten chuck firmly.
Overheating during use.	Excessive load or blocked ventilation.	Reduce pressure. Allow drill to cool. Clear ventilation slots.

9. SPECIFICATIONS

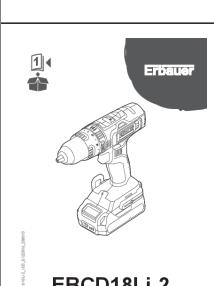
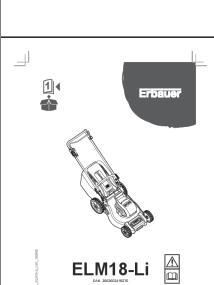
Attribute	Value
Brand	ERBAUER
Model Number	ECD18-Li-2
Voltage	18 Volts
Power Source	Battery
Battery Type	Li-ion (2x 4.0 Ah included)
Motor Type	Brushless
Chuck Size	13 mm Keyless Metal Chuck
Weight	4 kilograms
Functions	Drilling, Impact Drilling, Screwdriving

10. WARRANTY AND SUPPORT

This Erbauer ECD18-Li-2 Cordless Brushless Impact Drill is a new product supplied in its original packaging and benefits from the original manufacturer's warranty.

For warranty claims, technical support, or spare parts inquiries, please refer to the contact information provided in the original product packaging or visit the official Erbauer website. Keep your proof of purchase for warranty validation.

Related Documents - ECD18-Li-2

 <p>ECD18-Li-2 Cordless Combi Drill</p>	<p>Erbauer ECD18-Li-2 Cordless Combi Drill User Manual</p> <p>Comprehensive user manual for the Erbauer ECD18-Li-2 cordless combi drill, covering safety instructions, product description, assembly, usage, care and maintenance, and guarantee information.</p>
 <p>ECDT18-Li-2 18V Cordless Combi Drill</p>	<p>Erbauer ECDT18-Li-2 18V Cordless Combi Drill User Manual</p> <p>This manual provides essential safety instructions, product details, operating procedures, maintenance guidelines, and troubleshooting tips for the Erbauer ECDT18-Li-2 18V cordless combi drill.</p>
 <p>ECS18-Li Cordless Circular Saw</p>	<p>Erbauer ECS18-Li Cordless Circular Saw User Manual</p> <p>Comprehensive user manual for the Erbauer ECS18-Li 18V cordless circular saw, covering safety instructions, product description, assembly, operation, maintenance, and troubleshooting.</p>
 <p>ERH18-Li 18V Cordless SDS Plus Hammer Drill</p>	<p>Erbauer ERH18-Li 18V Cordless SDS Plus Hammer Drill User Manual</p> <p>Comprehensive user manual for the Erbauer ERH18-Li 18V Cordless SDS Plus Hammer Drill, covering safety, operation, maintenance, specifications, and warranty information.</p>
 <p>EBCD18Li-2 Cordless Combi Drill</p>	<p>Erbauer EBCD18Li-2 Cordless Combi Drill: User Manual and Safety Guide</p> <p>Comprehensive instruction manual for the Erbauer EBCD18Li-2 18V cordless combi drill, covering safety instructions, product description, operation, technical specifications, troubleshooting, care, maintenance, and guarantee information.</p>
 <p>ELM18-Li Cordless Lawnmower</p>	<p>Erbauer ELM18-Li Cordless Lawnmower User Manual and Instructions</p> <p>Comprehensive user manual for the Erbauer ELM18-Li 18V Li-ion cordless lawnmower. Includes safety instructions, assembly, operation, maintenance, troubleshooting, technical specifications, guarantee, and disposal information.</p>

