

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LeadsaiL](#) /

› [LeadsaiL LX-002 Wireless Mouse User Manual](#)

LeadsaiL LX-002

LeadsaiL LX-002 Wireless Mouse User Manual

Model: LX-002 | Brand: LeadsaiL

INTRODUCTION

Thank you for choosing the LeadsaiL LX-002 2.4G Wireless Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your new wireless mouse. Please read this manual carefully to ensure proper use and optimal performance.

WHAT'S IN THE BOX

- 1 x LeadsaiL LX-002 Wireless Mouse
- 1 x USB Receiver (stored inside the mouse)
- 1 x User Manual

PRODUCT OVERVIEW

Six Button Design



Figure 1: Six Button Design. This image displays the top view of the Leadsail LX-002 wireless mouse, highlighting its six buttons: Left Button, Right Button, Scroll Wheel, DPI Switch Button, Backward Button, and Forward Button.

The Leadsail LX-002 wireless mouse features a 6-button design for enhanced functionality and an ergonomic shape for comfortable use. Key features include:

- **Silent Click:** Designed for quiet operation, minimizing noise during use.
- **Adjustable DPI:** Three DPI levels (800, 1200, 1600) allow for customizable cursor sensitivity.
- **Ergonomic Design:** Slim, sweat-resistant, and skin-friendly finish for maximum comfort, including a thoughtful ring and little finger rest.
- **2.4GHz Wireless Technology:** Provides a stable and reliable connection with a transmission distance of up to 15 meters (50 feet).
- **Power Saving Mode:** Automatically enters sleep mode after 15 minutes of inactivity to conserve battery life.

SETUP INSTRUCTIONS

1. Install Battery

1. Locate the battery compartment on the underside of the mouse.
2. Gently slide open the battery compartment cover.
3. Insert one AA battery (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

15 Months Long Battery Life

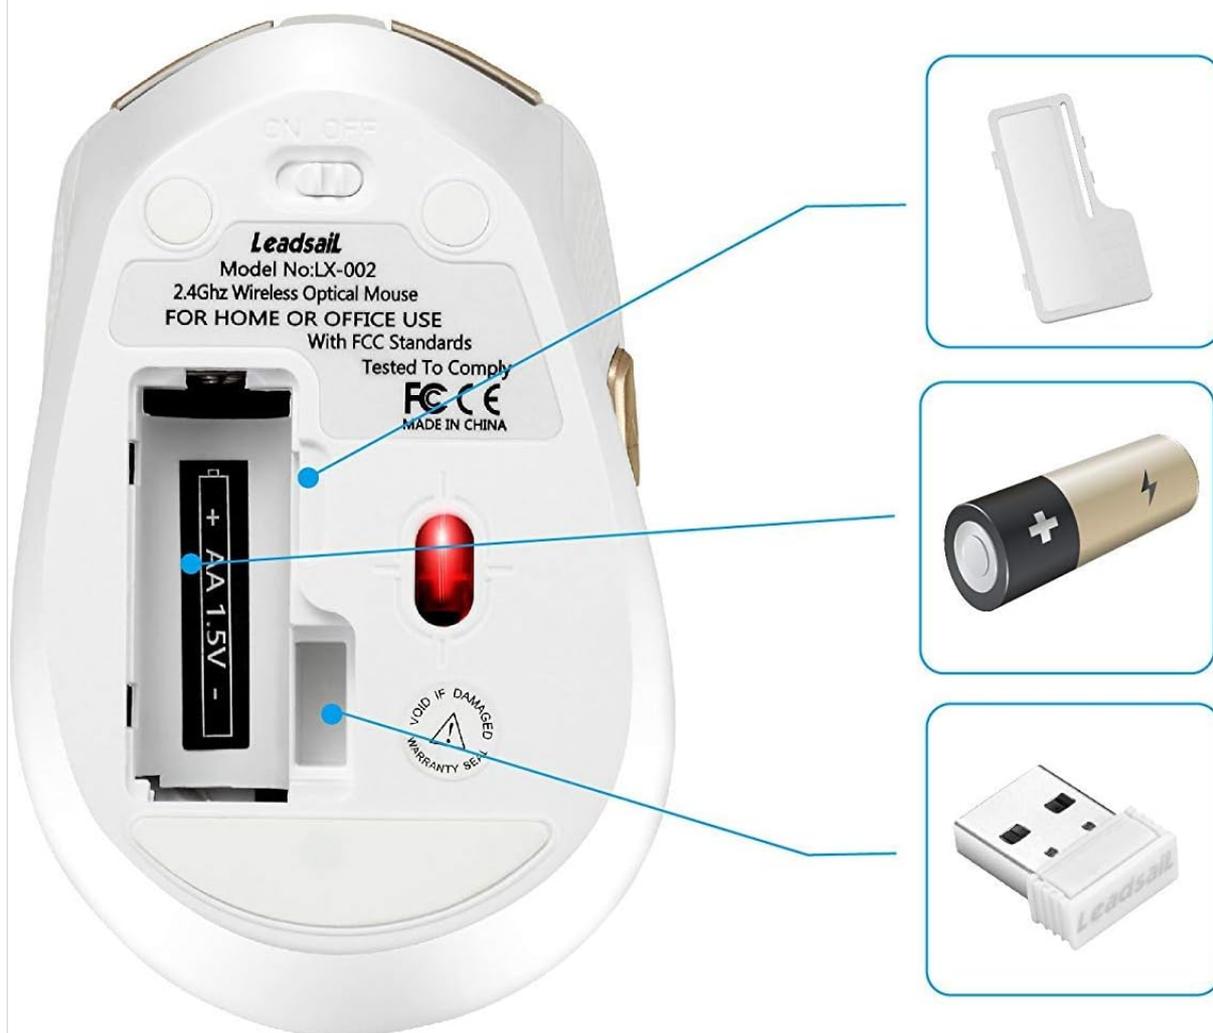


Figure 2: Battery and USB Receiver Location. This image shows the bottom of the mouse, indicating where to insert the AA battery and where the USB receiver is stored.

2. Connect USB Receiver

1. Remove the mini USB receiver from its storage slot within the battery compartment.
2. Plug the USB receiver into an available USB port on your computer (laptop, desktop, or netbook PC).
3. No driver installation is required; the mouse is plug-and-play.



Figure 3: Wireless Connection. This image illustrates the 2.4G wireless connection between the mouse and a laptop via the USB receiver, indicating a lag-free experience.

3. Power On the Mouse

- Slide the ON/OFF switch, located on the underside of the mouse, to the "ON" position.
- The mouse is now ready for use.

OPERATING INSTRUCTIONS

Adjusting DPI Sensitivity

- Press the **DPI Switch Button** (located below the scroll wheel) to cycle through the three available DPI settings: 800, 1200, and 1600.
- Select the DPI setting that best suits your activity for optimal cursor speed and precision.



Figure 4: DPI Adjustment. This image shows the mouse with an overlay indicating the DPI switch button and the three adjustable DPI levels (800, 1200, 1600).

Power Saving Mode

- The mouse will automatically enter sleep mode after 15 minutes of no operation to save power.
- To wake the mouse, simply press any button.

COMPATIBILITY

The Leadsail LX-002 wireless mouse offers wide compatibility with various operating systems:

- Windows XP
- Windows Vista
- Windows 7
- Windows 8
- Windows 10
- Mac OS X
- Linux
- Chrome OS
- DOS
- Windows 2000 Server

Wide Compatibility



Figure 5: Wide Compatibility. This image visually represents the broad compatibility of the mouse with various operating systems, including Windows, Mac OS, and Linux.

MAINTENANCE

- Keep the mouse clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- Ensure the optical sensor on the underside of the mouse is free from dust and debris for accurate tracking.
- When not in use for extended periods, turn off the mouse using the ON/OFF switch to further conserve battery life.
- Store the USB receiver inside the mouse's battery compartment when traveling to prevent loss.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Mouse not responding / Cursor not moving	<ul style="list-style-type: none"> ◦ Ensure the mouse is turned ON. ◦ Check if the USB receiver is securely plugged into a working USB port. ◦ Replace the AA battery if it is low or depleted. ◦ Try plugging the USB receiver into a different USB port.
Cursor movement is erratic or jittery	<ul style="list-style-type: none"> ◦ This often indicates a low battery. Replace the AA battery. ◦ Ensure the optical sensor on the bottom of the mouse is clean. ◦ Use the mouse on a suitable surface (not highly reflective or transparent).
Wireless connection issues	<ul style="list-style-type: none"> ◦ Ensure the mouse is within the 15-meter (50-foot) operating range of the USB receiver. ◦ Avoid placing the mouse or receiver near strong electromagnetic interference sources (e.g., other wireless devices, large metal objects).

SPECIFICATIONS

Feature	Detail
Brand	Leadsail
Model Number	LX-002
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Movement Detection	Optical
DPI Levels	800, 1200, 1600
Buttons	6 (Left, Right, Scroll Wheel, DPI Switch, Forward, Backward)
Power Source	1 x AA Battery (not included)
Item Weight	2.89 ounces (approx. 82g)
Product Dimensions (LxWxH)	4.09 x 2.6 x 0.1 inches (approx. 10.4 x 6.6 x 0.25 cm)
Operating Systems	Windows XP/Vista/7/8/10, Mac OS X, Linux, Chrome OS, DOS, Windows 2000 Server
Special Features	Ergonomic Design, Lightweight, Portable, Silent Click, Wireless

WARRANTY AND SUPPORT

Leadsail products are designed for durability and performance. For any questions, technical support, or warranty

claims, please refer to the contact information provided on the product packaging or visit the official LeadsaiL website. Please retain your proof of purchase for warranty purposes.

© 2026 LeadsaiL. All rights reserved.