

Cecotec 05366

Cecotec Ready Warm 2200 Curved Flames Electric Fireplace

Model: 05366

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this electric fireplace. Failure to follow these instructions may result in electric shock, fire, or personal injury. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage of your power supply matches the rating label on the appliance. Do not overload electrical circuits.
- **Placement:** Position the fireplace on a stable, flat surface or mount it securely to a wall. Maintain a safe distance from flammable materials (curtains, furniture, bedding).
- **Ventilation:** Do not block air vents. Ensure proper airflow around the unit to prevent overheating.
- **Children and Pets:** Keep children and pets away from the appliance, especially when it is operating. The glass panel can become hot.
- **Maintenance:** Always unplug the fireplace before cleaning or performing any maintenance.
- **Damage:** Do not operate the fireplace with a damaged cord or plug, or if the unit has malfunctioned or been dropped. Contact qualified service personnel for repair.
- **Water Exposure:** Do not use this appliance near water or in damp locations.

2. PRODUCT OVERVIEW

The Cecotec Ready Warm 2200 Curved Flames Electric Fireplace provides warmth and ambiance with its realistic flame effect. This 26-inch model features a curved tempered glass panel and offers two heating

power levels.

Key Features:

- **Dimensions:** 26-inch size, suitable for various room placements.
- **Design:** Curved tempered glass panel for an elegant appearance and wider viewing angle.
- **Heating Power:** Maximum 2000W, capable of heating rooms up to 25 m² quickly.
- **Power Levels:** Two selectable heating modes: 1000W and 2000W.
- **Control:** Includes a remote control for convenient operation.
- **Timer:** Weekly and daily programmable timer function.
- **Flame Effect:** Two LED flame intensity levels for adjustable ambiance.



Image 2.1: Front view of the Cecotec Ready Warm 2200 Electric Fireplace displaying its digital interface and realistic flame effect.

3. SETUP AND INSTALLATION

The Cecotec Ready Warm 2200 Electric Fireplace is designed for wall-mounted installation. Follow these

steps carefully.

Package Contents:

- Electric Fireplace Unit
- Remote Control
- Mounting Hardware (screws, wall plugs)
- User Manual

Wall Mounting Instructions:

1. **Choose Location:** Select a suitable wall location, ensuring it is away from curtains, furniture, and other flammable materials. The wall must be capable of supporting the fireplace's weight (approximately 11.66 kg).
2. **Marking:** Hold the mounting bracket (if separate) or the fireplace itself against the wall at the desired height. Use a pencil to mark the positions for drilling holes. Ensure the marks are level.
3. **Drilling:** Drill holes at the marked positions using an appropriate drill bit for your wall type. Insert wall plugs if necessary.
4. **Secure Bracket/Fireplace:** Attach the mounting bracket or the fireplace directly to the wall using the provided screws. Ensure it is firmly secured.
5. **Power Connection:** Once securely mounted, plug the power cord into a grounded electrical outlet.



Image 3.1: The electric fireplace installed on a wall, showing its integration into a living space.

4. OPERATING INSTRUCTIONS

The fireplace can be operated using the control panel on the unit or the included remote control.

Control Panel / Remote Control Functions:



Image 4.1: Close-up of the fireplace's top panel with control buttons.

- **Power On/Off:** Press the **Power button** () to turn the unit on or off.
- **Heat Settings:** Press the **Heat button** () to cycle between 1000W (low heat) and 2000W (high heat). The selected setting will be displayed on the screen.
- **Flame Effect:** Press the **Flame button** to adjust the intensity of the LED flame effect. There are two intensity levels.
- **Timer:** Use the **Timer button** () to set the daily or weekly timer. Refer to the detailed timer programming section in the full manual for specific steps.
- **Temperature Control:** Adjust the desired room temperature using the **Temperature Up/Down buttons**. The unit will automatically maintain the set temperature.



Image 4.2: The digital display showing current temperature and timer settings.

5. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your electric fireplace.

Cleaning:

1. **Disconnect Power:** Always unplug the fireplace from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, polishes, or chemical solvents, as these may damage the finish.
3. **Glass Panel:** Clean the tempered glass panel with a soft cloth and a glass cleaner. Avoid spraying cleaner directly onto the unit; instead, apply it to the cloth first.
4. **Air Vents:** Periodically vacuum or gently brush the air intake and outlet vents to remove dust and debris. Ensure vents are clear for proper operation.

Storage:

If storing the fireplace for an extended period, unplug it and ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

6. TROUBLESHOOTING

If you encounter issues with your electric fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power outlet and plug connection. Reset circuit breaker if tripped.
No heat output.	Heat function not activated; thermostat set too low; air vents blocked.	Activate heat function. Increase thermostat setting. Clear any obstructions from air vents.
Flame effect not working.	Flame effect function not activated; LED lights faulty.	Activate flame effect. If issue persists, contact customer support.
Remote control not working.	Batteries depleted or incorrectly inserted; remote out of range; sensor blocked.	Replace remote control batteries. Ensure line of sight to the fireplace sensor.
Unit makes unusual noise.	Dust in fan; loose components.	Unplug and clean fan area. If noise persists, discontinue use and contact support.

If the problem persists after attempting these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	05366
Product Dimensions	73 x 20 x 60 cm (Length x Width x Height)
Product Weight	11.66 kg
Heat Output	2000 Watt (Max)
Power Levels	1000W / 2000W
Material	Tempered Glass

Feature	Detail
Color	Black
Power Source	Corded Electric
Special Feature	Timer, Remote Control, Flame Effect
Installation Type	Wall-mounted
Batteries Required	No (for unit, remote control requires batteries)
Included Components	Remote Control

8. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Cecotec customer service. Contact information can typically be found on the official Cecotec website or on the product packaging.

When contacting support, please have your product model number (05366) and purchase date available.