



[Manuals.plus](#) /

› [ForeverPRO](#) /

› ForeverPRO 4036EL3001A Dryer Seal Instruction Manual for LG Dryers

ForeverPRO 4036EL3001A

ForeverPRO 4036EL3001A Dryer Seal Instruction Manual

For LG Dryer Models

1. INTRODUCTION

This manual provides detailed instructions for the installation, maintenance, and troubleshooting of the ForeverPRO 4036EL3001A Dryer Seal. This replacement part is designed for compatibility with various LG dryer models, ensuring proper function and extending the life of your appliance.

The ForeverPRO 4036EL3001A Dryer Seal replaces original part numbers 1267485, AH3522851, EA3522851, and PS3522851.



Figure 1: ForeverPRO 4036EL3001A Dryer Seal, shown coiled.

2. SAFETY INFORMATION

WARNING:

- Always disconnect the dryer from its power source before attempting any repairs or maintenance. Failure to do so can result in electric shock or serious injury.
- Wear appropriate personal protective equipment, such as gloves, to protect against sharp edges or components.
- If you are unsure about any step of the installation process, consult a qualified appliance technician.
- Keep all tools and small parts away from children.

3. INSTALLATION INSTRUCTIONS

Replacing a dryer drum seal requires careful attention. It is recommended to have a second person assist during the drum removal and seal placement steps.

3.1. Tools Required

- Screwdrivers (Phillips and flathead)
- Nut drivers or socket set
- Work gloves
- Adhesive suitable for felt/fabric (not included with this seal)
- Pliers (optional)

3.2. Pre-Installation Steps

1. Unplug the dryer from the electrical outlet.
2. Turn off the gas supply if it is a gas dryer.
3. Move the dryer away from the wall to access the rear panel.
4. Remove the top panel, control panel, front panel, and any other necessary components to gain access to the dryer drum. Refer to your specific LG dryer model's service manual for detailed disassembly instructions.

3.3. Seal Replacement Procedure

1. Carefully remove the dryer drum from the appliance. This step often requires two people due to the drum's size and weight.
2. Locate the old dryer seal on the drum. It will likely be worn or damaged.
3. Remove the old seal completely, ensuring any old adhesive or residue is cleaned from the drum's edge.
4. Apply a suitable adhesive (not included) to the edge of the dryer drum where the new seal will be placed. Follow the adhesive manufacturer's instructions for application and drying time.
5. Position the new ForeverPRO 4036EL3001A seal onto the drum's edge. The seal may be tight, requiring careful stretching and pulling to fit securely. Assistance from a second person can make this step easier. Ensure the seal is evenly seated around the entire circumference of the drum.
6. Allow the adhesive to dry completely before proceeding with reassembly.
7. Reinstall the dryer drum into the appliance, ensuring all rollers and belts are correctly aligned.
8. Reassemble the dryer by reversing the disassembly steps. Ensure all panels, wires, and components are securely fastened.
9. Reconnect the power and gas (if applicable) and test the dryer for proper operation.

Dryers Rear Drum Seal for LG 4036EL3001A



Figure 2: The ForeverPRO 4036EL3001A seal, designed for the dryer's rear drum.

Easy Installation and Economical



Figure 3: The seal measured against a ruler, indicating its approximate dimensions.

4. OPERATING PRINCIPLES

The dryer drum seal, also known as a felt seal, creates a tight barrier between the rotating dryer drum and the stationary front and rear bulkheads of the dryer. This seal prevents heat and air from escaping the drum, ensuring efficient drying and preventing clothes from getting caught in gaps. A properly installed seal minimizes noise and maximizes drying performance.

5. MAINTENANCE AND CARE

Regular inspection of your dryer seal can help identify wear before it causes significant issues.

- **Visual Inspection:** Periodically check the seal for signs of wear, fraying, tears, or hardening. This can be done by carefully inspecting the edges of the drum where the seal is visible.
- **Cleaning:** Keep the area around the seal free from lint and debris. Excessive lint buildup can cause friction and accelerate wear.
- **Replacement:** If the seal shows significant signs of wear or damage, it should be replaced

promptly to maintain dryer efficiency and prevent further damage to the appliance.

6. TROUBLESHOOTING

Symptom	Possible Cause	Solution
Dryer is noisy (squealing, thumping)	Worn or damaged drum seal; improper installation of new seal.	Inspect the seal for wear. If new, ensure it is seated correctly and adhesive has cured. Replace if worn.
Clothes not drying efficiently	Compromised seal allowing heat/air to escape.	Inspect the seal for gaps or damage. Replace if necessary. Ensure lint filter is clean.
Seal detaching from drum	Insufficient or incorrect adhesive used; improper application.	Reapply the seal using a high-quality, appropriate adhesive. Ensure surfaces are clean and dry before application.

7. PRODUCT SPECIFICATIONS

Brand: ForeverPRO

Part Number: 4036EL3001A

Replaces Part Numbers: 1267485, AH3522851, EA3522851, PS3522851

Compatible Appliance: LG Dryers

Item Weight: Approximately 2.89 ounces

Package Dimensions: Approximately 7.95 x 6.3 x 2.76 inches

Included Components: 1 x Dryer Seal

Features of Product

- ▶ Fits with various LG brand models
- ▶ Weight: 2.24 ounces
- ▶ Dimensions: 8 x 8 x 2 inches



Figure 4: Key features and dimensions of the ForeverPRO dryer seal.

8. WARRANTY AND SUPPORT

ForeverPRO stands by the quality of its products. This dryer seal comes with a **No Questions Asked Money Back Guarantee**. For any issues or support, please refer to your purchase documentation or contact the seller directly.

For additional information or to purchase replacement parts, visit the [ForeverPRO brand store on Amazon](#).