

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fila](#) /

› [FILA Digital Watch User Manual](#)

Fila FILA38-171-001

FILA Digital Watch User Manual

Model: FILA38-171-001

INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your FILA Digital Watch, Model FILA38-171-001. This timepiece is designed for durability and functionality, featuring a digital display, chronograph, alarm, and water resistance up to 10 ATM. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

SAFETY INFORMATION

Observe the following safety guidelines to prevent damage to your watch and ensure personal safety:

- Do not attempt to open the watch case or remove the back cover. This can compromise water resistance and void the warranty.
- Avoid exposing the watch to extreme temperatures (above 60°C / 140°F or below -10°C / 14°F) or sudden temperature changes.
- Do not expose the watch to strong magnetic fields, as this may affect the accuracy of the timepiece.
- While the watch is water-resistant up to 10 ATM (100 meters), avoid pressing buttons underwater to prevent water ingress.
- Keep the watch away from harsh chemicals, solvents, and detergents, which can damage the case and strap materials.
- If the watch battery needs replacement, consult a qualified watch technician or an authorized service center.

PRODUCT OVERVIEW

Components and Controls



Figure 1: Front view of the FILA Digital Watch with key buttons indicated.

- **Reset Button (Top Left):** Used to reset the stopwatch, clear alarm settings, or adjust values during time/date setting.
- **Start/Stop Button (Top Right):** Used to start and stop the stopwatch, or to confirm settings during time/date adjustment.
- **Mode Button (Bottom Left):** Cycles through different modes: Time, Chronograph (Stopwatch), Alarm, and Date.
- **Light Button (Bottom Right):** Activates the backlight for improved visibility in low-light conditions.

Key Features



Chronograph



Date Tracker



Alarm



Water Resistant

100m



Figure 2: Visual representation of key features of the FILA Digital Watch.

- **Digital Time Display:** Clear and easy-to-read digital time display.
- **Chronograph (Stopwatch):** Precise timing function for sports and activities.
- **Date Tracker:** Displays the current date.
- **Alarm Function:** Set a daily alarm to remind you of important events.
- **Hourly Chime:** An optional chime that sounds at the top of every hour.
- **Backlight:** Illuminates the display for visibility in dark environments.
- **10 ATM Water Resistance:** Suitable for swimming, showering, and water sports, resistant up to 100 meters.
- **Durable Construction:** Features an ABS case and a comfortable PU strap with mineral crystal glass.

INITIAL SETUP

Setting Time and Date

1. From the normal time display, press the **Mode** button three times to enter Time Setting mode. The seconds digits

will begin to flash.

2. Press the **Reset** button to set the seconds to zero.
3. Press the **Start/Stop** button to move the flashing selection to the hour digits.
4. Press the **Reset** button to adjust the hour. Note the AM/PM indicator for 12-hour format.
5. Press the **Start/Stop** button to move the flashing selection to the minute digits.
6. Press the **Reset** button to adjust the minutes.
7. Continue pressing **Start/Stop** to cycle through Year, Month, and Day settings, adjusting each with the **Reset** button.
8. Once all settings are correct, press the **Mode** button to exit Time Setting mode and return to the normal time display.

Setting Alarm

1. From the normal time display, press the **Mode** button twice to enter Alarm Setting mode. The hour digits of the alarm time will begin to flash.
2. Press the **Reset** button to adjust the alarm hour.
3. Press the **Start/Stop** button to move the flashing selection to the minute digits.
4. Press the **Reset** button to adjust the alarm minutes.
5. To activate or deactivate the alarm, press the **Start/Stop** button while in Alarm Setting mode. An alarm icon will appear on the display when activated.
6. Press the **Mode** button to exit Alarm Setting mode.

OPERATING INSTRUCTIONS

Using the Chronograph (Stopwatch)

1. From the normal time display, press the **Mode** button once to enter Chronograph mode. The display will show "00:00:00".
2. Press the **Start/Stop** button to start the chronograph.
3. Press the **Start/Stop** button again to pause the chronograph.
4. To resume, press **Start/Stop** again.
5. To reset the chronograph to zero, ensure it is paused, then press the **Reset** button.
6. Press the **Mode** button to exit Chronograph mode and return to the normal time display.

Activating Backlight

Press the **Light** button (bottom right) to illuminate the watch display. The backlight will remain active for a few seconds.

Hourly Chime

To activate or deactivate the hourly chime, press the **Mode** button twice to enter Alarm Setting mode. Then, press the **Reset** button to toggle the hourly chime on or off. A small icon (often a bell or speaker) will indicate when the chime is active.

CARE AND MAINTENANCE

Proper care will extend the life and maintain the appearance of your FILA Digital Watch:

- Cleaning:** Clean the watch with mild soap and water, especially after workouts or exposure to sweat, dirt, or saltwater. Use a soft cloth to dry it thoroughly.
- Water Resistance:** While water-resistant, avoid prolonged exposure to hot water, steam, or direct high-pressure water jets. Do not operate buttons underwater.
- Strap Care:** The PU strap is durable but can be damaged by excessive bending or exposure to harsh chemicals. Clean it regularly to prevent buildup.
- Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Replacement:** The watch uses 1 Lithium Metal battery. When the display dims or functions become erratic, it indicates a low battery. Battery replacement should be performed by a qualified technician to maintain water resistance.

TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Display is blank or dim.	Battery may be low or depleted. Replace the battery.
Time is inaccurate.	Time needs to be reset. Follow the "Setting Time and Date" instructions. Exposure to strong magnetic fields can also affect accuracy.
Buttons are unresponsive.	Ensure the watch is not in a locked mode (if applicable, though not a feature mentioned for this model). Try a soft reset by holding all buttons for a few seconds (if watch supports this, otherwise battery removal/reinsertion by technician).
Water inside the watch.	Water resistance may be compromised. Avoid pressing buttons underwater. Seek professional repair immediately to prevent further damage.
Alarm does not sound.	Ensure the alarm is activated and set correctly. Check the alarm icon on the display.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	FILA38-171-001
Movement Type	Quartz Digital
Case Material	ABS
Strap Material	Polyurethane (PU)
Crystal Type	Mineral Crystal Glass

Feature	Specification
Water Resistance	10 ATM (100 meters)
Case Diameter	52 Millimetres
Case Thickness	15 Millimetres
Item Weight	98 Grams
Battery Type	1 Lithium Metal battery (included)
Dimensions (LxWxH)	8.6 x 9 x 8.8 Centimeters
Included Components	Watch, Battery

WARRANTY AND SUPPORT

Your FILA Digital Watch is manufactured with high-quality materials and undergoes strict quality control. While specific warranty details are not provided in this manual, most FILA products come with a limited manufacturer's warranty covering defects in materials and workmanship under normal use.

For warranty claims, technical support, or service inquiries, please contact the retailer where you purchased the watch or visit the official FILA website for customer service contact information. Please retain your proof of purchase for any warranty-related requests.

For more information, you may visit the [Fila Store on Amazon](#).