

[manuals.plus](#) /

› [SOMMER](#) /

› [SOMMER 4019 Pearl Vibe Garage Remote Control User Manual](#)

## SOMMER 4019

# SOMMER 4019 Pearl Vibe Garage Remote Control User Manual

MODEL: 4019

Brand: SOMMER

## Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your SOMMER 4019 Pearl Vibe garage remote control. Designed for ease of use, this remote offers reliable control over your garage door system.



Figure 1: SOMMER 4019 Pearl Vibe Remote Control

## Key Features:

- Ability to check door position or receiver status.
- Tactile feedback (vibration) for command confirmation.
- Efficient vibration motor for extended battery life.
- Interference-resistant radio signal with 128-bit encoding.
- Shock-resistant design for durability.
- Bidirectional radio communication.

## Setup and Programming

To program your SOMMER 4019 Pearl Vibe remote control, follow these steps. Ensure you have access to your garage door opener's radio receiver.

1. **Activate Learning Mode:** Press the learning button on your radio receiver. The LED indicator on the receiver will illuminate, indicating it is in learning mode.
2. **Program Remote Button:** On your new remote control, press the desired button for 1-2 seconds. The receiver's LED will flash, confirming the signal reception.
3. **Test Operation:** Press the programmed remote control button again to confirm that the garage door opener responds normally.

For a visual guide on programming, please refer to the following video:

Your browser does not support the video tag.

Video 1: Programming a SOMMER Remote Control to a Receiver. This video demonstrates the steps to link your new remote control to your garage door opener's radio receiver, showing the LED indicators on the receiver and remote during the process.

Additional programming demonstrations:

Your browser does not support the video tag.

Video 2: 868MHz Remote Control Programming. This video illustrates the programming sequence for an 868MHz remote control with a receiver, highlighting button presses and indicator responses.

Your browser does not support the video tag.

Video 3: SOMMER 868 Remote Control Programming. A vertical format video demonstrating the programming steps for a SOMMER 868 remote control, showing interaction with the receiver.

## Operating Instructions

The SOMMER 4019 Pearl Vibe remote control is designed for simple and intuitive operation.

- **Opening/Closing:** Press the programmed button once to activate your garage door. The door will open or close depending on its current state.
- **Stopping Movement:** Press the button again while the door is in motion to stop it.
- **Vibration Feedback:** The remote provides a subtle vibration to confirm that your command has been sent.
- **Status Check (if supported by receiver):** Some advanced receivers allow you to check the door's current position or the receiver's status. Refer to your garage door opener's manual for specific instructions on this feature.

## Maintenance

To ensure optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** The SOMMER 4019 Pearl Vibe uses an alkaline battery. When the remote's indicator light dims or its range decreases, it's time to replace the battery.

### Battery Replacement Steps:

1. Carefully slide open the remote control casing.
2. Remove the old battery, noting its polarity.
3. Insert a new alkaline battery (e.g., CR2032 type, if applicable, though not specified in JSON, common for remotes), ensuring correct polarity.
4. Close the remote control casing securely.

For a visual demonstration of battery replacement, refer to the following video:

Your browser does not support the video tag.

Video 4: Remote Control Battery Replacement. This video shows how to open a similar remote control and replace its internal battery, demonstrating the process of disassembling and reassembling the unit.

- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

## Troubleshooting

If you encounter issues with your SOMMER 4019 Pearl Vibe remote control, try the following solutions:

- **Remote Not Responding:**

- Check the battery. Replace it if necessary.
- Ensure you are within the operating range (up to 10 meters).
- Verify that the remote is correctly programmed to your receiver. If unsure, repeat the programming steps.

- **Reduced Range:**

- Replace the battery.
- Check for any obstructions between the remote and the receiver (e.g., metal objects, thick walls).
- Ensure the receiver's antenna is not obstructed or damaged.

- **Intermittent Operation:**

- This could indicate a low battery.
- Check for sources of radio interference in the vicinity (e.g., other wireless devices, power lines).

If problems persist after trying these steps, consult a qualified technician or contact SOMMER customer support.

## Specifications

Feature	Detail
Brand	SOMMER

Model Number	4019
Color	Black
Connectivity Technology	Radio Frequency (868 MHz, implied by videos)
Special Features	Ergonomic, Vibration Feedback, 128-bit Encoding, Shock Resistant, Bidirectional Radio
Compatible Devices	Garage Door Openers
Battery Type	Alkaline (Non-rechargeable)
Maximum Range	10 Meters (approx. 33 feet)

## **Warranty and Support**

For warranty information, please refer to the documentation provided with your purchase or visit the official SOMMER website. For technical support or further assistance, please contact SOMMER customer service directly.

© 2024 SOMMER. All rights reserved.