

Aigostar AIG-8433325201500

Aigostar Benno Drip Coffee Maker Instruction Manual

Model: AIG-8433325201500

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before using this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Aigostar Benno Drip Coffee Maker:

- **Carafe:** Glass carafe for collecting brewed coffee.
- **Control Panel:** Features an LCD display and buttons for programming and operation.
- **Spoon:** Measuring spoon for coffee grounds.
- **Filter Basket:** Holds the reusable permanent filter.
- **Water Gauge:** Indicates water level in the reservoir.
- **Water Reservoir:** Area for filling water.
- **Heating Plate:** Keeps the carafe warm after brewing.



Carafe



Control Panel



Product Overview



Spoon



Filter Basket



Water Gauge

Image: Labeled diagram of the coffee maker's components, including the carafe, control panel, spoon, filter basket, and water gauge.

SETUP

Before First Use:

1. Unpack the coffee maker and remove all packaging materials.
2. Clean the carafe, filter basket, and reusable filter with warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. Run two full cycles with only water (no coffee) to clean the internal components. Fill the water reservoir to the MAX level, brew, discard the water, and repeat.

Filling the Water Reservoir:

Open the lid of the water reservoir and fill it with fresh, cold water up to the desired level indicated by the water gauge. The coffee maker has a 1.5-liter capacity, suitable for up to 12 cups.

Easy to View Water Window



Image: A hand pouring water into the coffee maker's reservoir, highlighting the easy-to-view water window with cup markings.

OPERATING INSTRUCTIONS

Brewing Coffee:

1. Ensure the coffee maker is plugged into a grounded electrical outlet.
2. Fill the water reservoir with the desired amount of water (refer to the water gauge).
3. Place the reusable filter into the filter basket. Add the desired amount of ground coffee to the filter. A general guideline is one level scoop (provided) per cup. Adjust to taste.
4. Close the lid securely.
5. Place the empty glass carafe on the heating plate.
6. Press the **ON/OFF** button to start the brewing process. The indicator light will illuminate.
7. Once brewing is complete, the coffee maker will automatically switch to the 'keep warm' function.

Using the Programmable Timer:

The programmable timer allows you to set a specific time for the coffee maker to start brewing automatically, up to 24 hours in advance.

1. Prepare the coffee maker with water and coffee grounds as described in the 'Brewing Coffee' section.
2. Press the **PRO** button. The display will show 'PRO' and the time will flash.
3. Use the **HOUR** and **MIN** buttons to set your desired start time.
4. Press the **PRO** button again to confirm the programmed time. The 'PRO' indicator will remain lit.
5. The coffee maker will automatically start brewing at the set time.



Image: A detailed view of the LCD display and control buttons (PRO, HOUR, MIN, ON/OFF) for setting the programmable timer.

Keep Warm Function:

After brewing, the coffee maker automatically enters a 'keep warm' mode, maintaining the coffee's temperature for up to 40 minutes. After 40 minutes, the appliance will automatically shut off for safety and energy saving.



*Keep Warm For
40 Minutes*

Auto Shut-Off

Image: An illustration depicting the coffee carafe on the heating plate with arrows indicating heat, signifying the 40-minute keep warm function and auto shut-off.

Anti-Drip Feature:

The anti-drip feature allows you to temporarily remove the carafe during the brewing cycle to pour a cup of coffee. The flow of coffee will pause for approximately 30 seconds, preventing drips onto the heating plate. Return the carafe to its position within 30 seconds to resume brewing and prevent overflow.

1.5L Capacity



Image: A person pouring coffee from the 1.5L capacity carafe into a cup, illustrating the ease of serving.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

Daily Cleaning:

- Always unplug the coffee maker before cleaning and allow it to cool completely.
- Wash the glass carafe, reusable filter, and filter basket in warm, soapy water. Rinse thoroughly and dry. These parts are generally dishwasher safe (top rack only), but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker, including the heating plate, with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit of the coffee maker in water or any other liquid.

Easy to Clean

Removable filter can be cleaned in depth



Image: Hands cleaning the removable reusable filter under running water, demonstrating the ease of cleaning.

Descaling (Every 2-4 Weeks, depending on water hardness):

Mineral deposits from water can build up in your coffee maker, affecting its performance. Descaling helps remove these deposits.

1. Fill the water reservoir with a mixture of white vinegar and water (1 part vinegar to 2 parts water).
2. Place the empty carafe on the heating plate.
3. Start a brewing cycle without coffee grounds.
4. After about half the mixture has brewed through, turn off the coffee maker and let it sit for 15-20 minutes to allow the vinegar to work.
5. Turn the coffee maker back on and let the remaining mixture brew through.
6. Discard the vinegar solution.
7. Run 2-3 cycles with fresh, clean water to rinse out any remaining vinegar taste or smell.

TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in; power outage; ON/OFF button not pressed; water reservoir empty.	Check power connection; ensure ON/OFF is pressed; fill water reservoir.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; coffee grind too coarse/fine.	Adjust coffee grounds amount; use appropriate grind for drip coffee.
Coffee overflows from filter basket.	Too much coffee grounds; filter clogged; carafe not properly placed.	Reduce coffee grounds; clean filter; ensure carafe is centered on heating plate.
Coffee tastes bad.	Old coffee grounds; dirty coffee maker; poor water quality.	Use fresh coffee; clean coffee maker thoroughly (including descaling); use filtered water.
Programmable timer not working.	Time not set correctly; PRO button not pressed to confirm.	Review 'Using the Programmable Timer' section and ensure all steps are followed.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Key technical specifications for the Aigostar Benno Drip Coffee Maker:

- **Brand:** Aigostar
- **Model Name:** Benno
- **Model Number:** AIG-8433325201500
- **Capacity:** 1.5 Liters (approximately 12 cups)
- **Power:** 800 Watts
- **Voltage:** 240 Volts
- **Material:** Stainless steel, Borosilicate glass (carafe)
- **Special Feature:** Permanent filter, Programmable Timer, Keep Warm Function, Anti-drip
- **Item Weight:** 2.07 Kilograms
- **Product Dimensions (L x W x H):** Approximately 17 cm x 21 cm x 31 cm (6.7 in x 8.3 in x 12.2 in)
- **Human Interface Input:** Buttons



Image: The coffee maker with its approximate dimensions (height 310mm, depth 210mm, width 170mm) clearly indicated.

WARRANTY AND SUPPORT

Aigostar products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Aigostar website. If you have any questions, require technical assistance, or need to report a problem, please contact Aigostar customer support.

Contact details for customer support can typically be found on the product packaging, the official brand website, or within your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question