

[Manuals.plus](#) /

› [staubsaugerladen](#) /

› Staubsaugerladen Vacuum Cleaner Bags for AEG Vampyr 400-500, Model 04-01-4150 Instruction Manual

staubsaugerladen 04-01-4150

Staubsaugerladen Vacuum Cleaner Bags Instruction Manual

Model: 04-01-4150 | Compatible with AEG Vampyr 400-500 Series

1. PRODUCT OVERVIEW

This product includes a set of 10 high-quality, double-walled paper vacuum cleaner bags and 2 fine micro-filters. These bags are designed to provide optimal filtration performance for compatible vacuum cleaner models.



Image 1: A stack of 10 Staubsaugerladen vacuum cleaner bags, illustrating the quantity and general appearance of the product. The top bag clearly displays the cardboard mounting collar and the dust intake opening.

2. SETUP AND INSTALLATION

Follow these steps to correctly install a new vacuum cleaner bag:

1. **Power Off:** Ensure your vacuum cleaner is unplugged from the power outlet before beginning installation.
2. **Open Compartment:** Locate and open the dust bag compartment on your vacuum cleaner. Refer to your vacuum cleaner's specific manual if you are unsure.
3. **Remove Old Bag:** Carefully remove the full or old vacuum cleaner bag. Dispose of it according to local waste regulations.
4. **Insert New Bag:** Take one new Staubsaugerladen vacuum cleaner bag. Align the cardboard collar of the bag with the bag holder inside the compartment. Push firmly until the bag is securely seated and the opening is properly connected to the vacuum's intake nozzle.
5. **Install Micro-Filter:** If your vacuum cleaner uses a separate micro-filter, replace it with one of the provided new micro-filters. Ensure it is placed correctly in its designated slot, typically near the motor or exhaust.
6. **Close Compartment:** Close the dust bag compartment securely. Ensure it latches properly to prevent dust leakage.

during operation.



Image 2: A close-up view of a single vacuum cleaner bag, highlighting the cardboard collar and the central opening designed for secure attachment within the vacuum cleaner's bag compartment.

3. OPERATING INSTRUCTIONS

Once the new vacuum cleaner bag and micro-filter are correctly installed, you can operate your vacuum cleaner as usual. The high-quality material of these bags ensures optimal filtration, capturing dust and allergens effectively.

- Ensure the vacuum cleaner is fully assembled and all compartments are closed before use.
- Operate the vacuum cleaner according to its manufacturer's instructions.

4. MAINTENANCE

Regular maintenance of your vacuum cleaner bags is crucial for maintaining optimal performance and air quality.

- **Bag Replacement:** Replace the vacuum cleaner bag when it is approximately two-thirds full, or when you notice a decrease in suction power. Overfilling the bag can reduce efficiency and potentially strain the vacuum cleaner motor.
- **Filter Replacement:** The included micro-filters should be replaced every 3-5 bag changes, or as recommended by your vacuum cleaner manufacturer, to maintain air filtration quality.
- **Inspection:** Periodically inspect the bag compartment for any dust buildup or blockages.



Image 3: An unfolded view of a single vacuum cleaner bag, demonstrating its full dimensions and the double-walled paper material used for effective dust retention.

5. TROUBLESHOOTING

If you encounter issues, consider the following:

- **Reduced Suction:** Check if the vacuum cleaner bag is full and needs replacement. Also, ensure the micro-filter is clean and not clogged. Verify that the bag is correctly installed and sealed.
- **Dust Leakage:** Ensure the vacuum cleaner bag is properly seated in its holder and the compartment door is fully closed and latched. Inspect the bag for any tears or damage.
- **Unusual Noises:** This is typically not related to the bag itself, but ensure no foreign objects are caught in the vacuum's hose or brush roll.

6. SPECIFICATIONS

Feature	Detail
Brand	staubsaugerladen
Model Number	04-01-4150
Material	Double-walled Paper

Number of Items	10 Vacuum Cleaner Bags, 2 Micro-filters
Compatible Product Type	Vacuum Cleaner
UPC	824228921219

7. COMPATIBILITY

These vacuum cleaner bags are compatible with a wide range of models, including but not limited to:

- **AEG / AEG-Electrolux:** Vampyr 400 to 500 series, Vampyr 1100, Vampyr 1200, Vampyr Boogie, Comfort 407, Compact AE, Compact Deluxe - Vampyr, Compact EL (up to 1995), Compact Electronic 1000, Compact Electronic PE, Exquisit 1100, Exquisit 1200, GR 11, GR 13, Size 11, Size 13, Vampyr 100, Vampyr 1100 Boogie, Vampyr 400 to 499 Boogie, Vampyr 400 Compact, Vampyr 406 Compact, Vampyr 408 Compact, Vampyr 412 Compact, Vampyr 415 Compact, Vampyr 416 Compact, Vampyr 430, Vampyr 448 Deluxe, Vampyr 449 Deluxe, Vampyr 450 Deluxe, Vampyr 499 Compact.
- **Adix:** A 200.
- **Replacements for:** Swirl A 18, Europlus A 1009, Menalux 1003, Wolf 0180.
- **Other Brands:** Hanseatic, Privileg (check specific models for compatibility).

8. WARRANTY AND SUPPORT

This product is manufactured by Staubsaugerladen.de. We offer a **2-year warranty** on our products. For any questions, support, or warranty claims, please contact Staubsaugerladen Göppingen directly. Our workshop in Göppingen is equipped to handle various vacuum cleaner repairs.

© 2024 Staubsaugerladen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question